

FinishPro[™] HVLP 7.0/9.0/9.5

3A4967A

EN

For professional use only. For portable spray applications of fine finish coatings. Not approved for use in explosive atmospheres or hazardous locations.

FinishPro HVLP 7.0/9.0 Standard FinishPro HVLP 7.0/9.0/9.5 ProContractor FinishPro HVLP 9.5 ProComp See page 3 for additional model information

10 psi (0.07 MPa, 0.7 bar) Maximum Working Pressure ProComp Models: 50 psi (0.35MPa, 3.5 bar) Maximum Fluid Working Pressure



Important Safety Instructions

Read all warnings and instructions in this manual and in related manuals. Be familiar with the controls and the proper usage of the equipment. Save these instructions.

Related Manuals: 3A4980 Gun

<u> MWARNING</u>

FIRE AND EXPLOSION HAZARD

- The turbine motor generates sparks.
 Keep sprayer at least 20 feet (6m) from spray area. Use additional hose if necessary.
- Spraying flammable or combustible materials in a factory or fixed location must comply with NFPA 33 and OSHA 1910.94(c) requirements in the USA and with all similar local regulations in other countries.

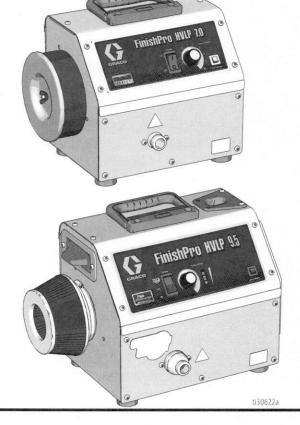


Table of Contents

Table of Contents

Models 3
Key Features
Warnings4
Know Your Sprayer 7
Standard Models
ProContractor Models
ProComp Models
Pressure Relief Procedure
Setup
Fluid and Work Piece Preparation
Fluid Set Selection
Startup
Fill FlexLiner System
Fill Remote Cup (ProComp Models only)
Startup
How to Spray
Spray Techniques
Triggering Gun
Aiming Gun
Refilling FlexLiner
Refilling Remote Cup
Cleanup
Troubleshooting
Parts
Standard Models
Parts List - Standard Models
Parts
ProContractor Models 30
Parts List - ProContractor Models
Parts
ProComp Models
Parts List - ProComp Models
Parts - Power Cords & Accessories
Parts List - Power Cords & Accessories
Wiring Diagrams (Standard)
Wiring Diagrams (ProContractor)
Wiring Diagrams (ProComp)
Technical Specifications
Graco Standard Warranty 42
Graco Information

Models


Key Features

TurboControl - available on all models	 Allows user to adjust sprayer performance to match application needs. Use at lowest setting that provides desired finish. Reduces heat buildup and job site noise.
SmartStart - available only on ProContractor and ProComp models	 Sprayer automatically turns off after no spraying activity; trigger gun to re-start sprayer. Reduces heat buildup and job site noise. Turn switch to ON if SmartStart is not desired.
FlexLiner System - available on all models	Throw door to oping garrat any angle without dap adjustment.

		п			Hose			Spray Gun		Fluid Sets	
	VAC	Model	Part Number	20-ft	30-ft	4-ft Whip	Edge II	Edge II Plus	#3	#4	#5
		7.0 Standard	17N263	V			V		~		
		9.0 Standard	17N264	V			V		V		
<i>(411)</i>	120	7.0 ProContractor	17N265		V			V	V		
C	USA	9.0 ProContractor	17N266		~			V	V	V	
Intertek	_	9.5 ProContractor	17N267		V	V		V	V	V	V
		9.5 ProComp	17N269		~	~		V*	V	V	V
		7.0 Standard	17P528	~			V		V		
		9.0 Standard	17P529	~			~		V		
	230	7.0 ProContractor	17P530		V	V		V	V		
	CEE 7/7	9.0 ProContractor	17P531		~	V		~	V	V	
		9.5 ProContractor	17P532		V	V		V	V	~	V
		9.5 ProComp	17P533		V	V		V*	V	V	V
ϵ		7.0 Standard	17P534	~			V		V		
		9.0 Standard	17P535	V			V		V		
	230 Europe	7.0 ProContractor	17P536		V	~		V	V		
	Multi / UK	9.0 ProContractor	17P537		V	V		V	V	~	
		9.5 ProContractor	17P538		V	~		V	~	V	V
		9.5 ProComp	17P539		V	~		V*	V	V	V
		7.0 Standard	17R074	V			V		V		
		9.0 Standard	17R075	V			~		V		
^	230 Asia /	7.0 ProContractor	17R078		V			V	V		
	ANZ/SCA	9.0 ProContractor	17R079		V			V	V	V	
ك		9.5 ProContractor	17R080		V	V		V	V	V	V
		9.5 ProComp	17R081		V	V		V*	V	V	V
ProComp Models -	Edge II Plus sp	ray gun for remote cup.	FlexLiner System	em C	onver	sion	Kit in	clude	d.		

Know Your Sprayer

Standard Models

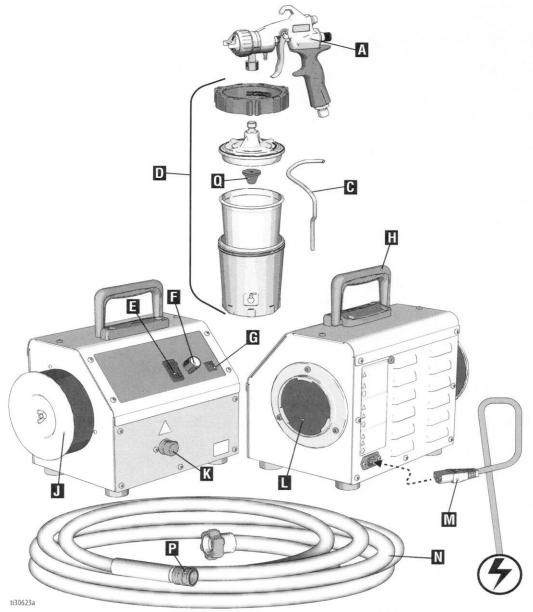


Α	Edge II Spray Gun	
С	Spray Gun Tubing	
D	FlexLiner System	
Е	ON/OFF Switch	
F	TurboControl	
G	G Resettable Circuit Breaker	
Н	Sprayer Handle	

Turbine Air Filter	
Air Outlet	
Motor Air Filter	
Power Cord	
Sprayer Air Hose	
Quick Connect	
Material Strainer	
L	Air Outlet Motor Air Filter Power Cord Sprayer Air Hose Quick Connect

Know Your Sprayer


ProContractor Models

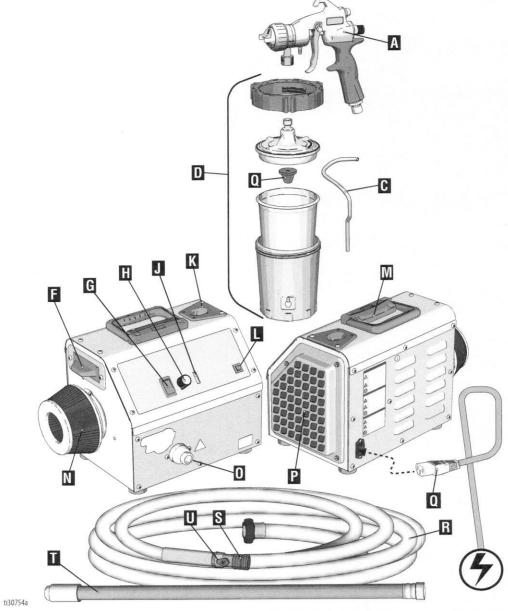

Α	Edge II Plus Spray Gun			
С	Spray Gun Tubing			
D	FlexLiner System			
Е	Material Strainer			
F	Fluid Set Storage			
G	ON/OFF/SmartStart Switch			
Н				
J	TurboControl LED Indicator			
K	Spray Gun Holder			
L	Resettable Circuit Breaker			

B 4	O Usa ella	
M	Sprayer Handle	
N	Turbine Air Filter	
0	Air Outlet	
Р	Motor Air Filter	
Q	Power Cord	
R	Sprayer Air Hose	
S	Quick Connect	
Т	Whip Hose (select models)	
U	Air Valve	

ProComp Models

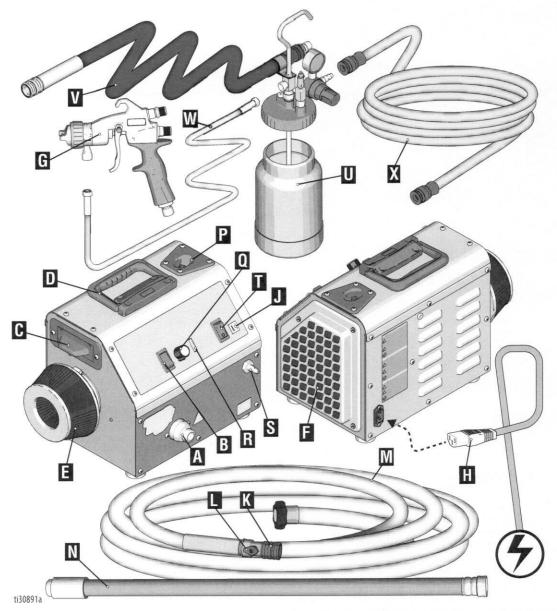

Α	Air Outlet			
В	ON/OFF/SmartStart Switch			
С	Fluid Set Storage			
D	Sprayer Handle			
Е	Turbine Air Filter			
F	Motor Air Filter			
G	Edge II Plus Spray Gun			
Н	Power Cord			
J	Resettable Circuit Breaker			
K	Quick Connect			
L	Air Valve			

N Whip Hose P Spray Gun Holder Q TurboControl R TurboControl LED Indicator S Compressor Outlet T Compressor ON/OFF Switch U Remote Cup, 2-qt V Gun Air Hose, 5-ft	М	Sprayer Air Hose			
Q TurboControl R TurboControl LED Indicator S Compressor Outlet T Compressor ON/OFF Switch U Remote Cup, 2-qt V Gun Air Hose, 5-ft	Ν	Whip Hose			
R TurboControl LED Indicator S Compressor Outlet T Compressor ON/OFF Switch U Remote Cup, 2-qt V Gun Air Hose, 5-ft	Р	Spray Gun Holder			
S Compressor Outlet T Compressor ON/OFF Switch U Remote Cup, 2-qt V Gun Air Hose, 5-ft	Q	TurboControl			
T Compressor ON/OFF Switch U Remote Cup, 2-qt V Gun Air Hose, 5-ft	R				
U Remote Cup, 2-qt V Gun Air Hose, 5-ft	S				
V Gun Air Hose, 5-ft	Т	•			
	U				
14/ 5 . 0 . 51 . 111	V				
W Remote Cup Fluid Hose, 5-ft	W	Remote Cup Fluid Hose, 5-ft			
X Remote Cup Air Hose, clear	X	Remote Cup Air Hose, clear			

Pressure Relief Procedure

Pressure Relief Procedure



Follow the Pressure Relief Procedure whenever you see this symbol.










The spray gun cup is pressurized. To reduce the risk of splashing from pressurized fluid, always follow the **Pressure Relief Procedure** before removing cup.

Turn the ON/OFF switch to OFF position.


Standard Models:



ProContractor and ProComp Models:

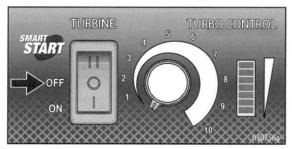


- 2. Unplug power cord to disconnect power.
- 3. Disconnect spray gun from air hose.

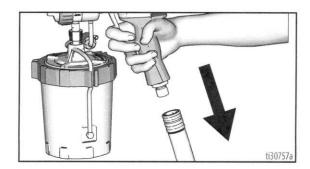


If using a FlexLiner System:

 Disconnect tubing from gun to relieve pressure in the cup.

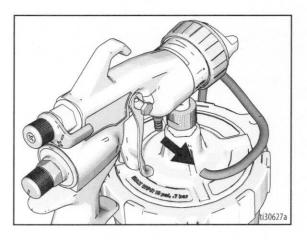


If using a ProComp remote cup:

5. Turn compressor ON/OFF switch to OFF position.

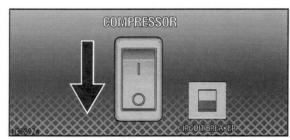

 Disconnect air hose from remote cup. Turn out pressure regulator one turn. Wait until pressure is completely relieved before removing cover.

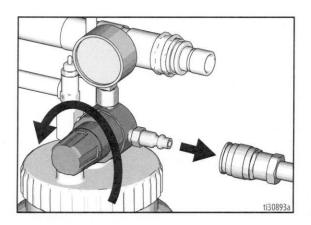


Setup

When unpacking sprayer for the first time or after long term storage, perform setup procedure.


- 1. Connect air hose to sprayer. Hand tighten.
- If using a ProComp Model with remote cup:

Connect gun air hose (V) to end of sprayer are hose (M).

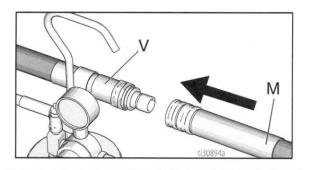

NOTICE


For units with a whip hose, do not connect whip hose directly to sprayer. Connect whip hose to gun end.

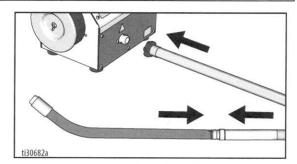


NOTICE

The SmartStart feature on ProContractor and ProComp models relies on an air tight system. Use components provided with sprayer and Edge II Plus gun. Ensure all hose connections are secure to avoid air leakage.

3. Connect power cord to sprayer power connection.

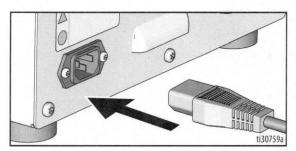

 Plug sprayer power cord into grounded outlet.

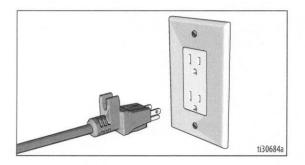

Fluid and Work Piece Preparation

- Strain fluids before spraying. This includes colors, reducers and hardeners.
- Use a slower drying reducer or thinner to compensate for the faster drying time caused by the warm air of the turbine. Do not over reduce.
- Sprayer performance varies with the viscosity of the material sprayed and the length of the hose. To prevent pressure drop, use hose supplied with sprayer.
- Most material manufacturers provide recommendations for their materials.
 Follow these recommendations.
- For proper adhesion, ensure surface of work piece is completely clean.


Fluid Set Selection

For best spray performance, select proper fluid set for fluid being sprayed. Reference Fluid Set Selection Guide in HVLP Edge II gun manual provided with sprayer. Fluid Set numbers are marked on fluid needles and nozzles.


Startup

Fill FlexLiner System


1. Disconnect gun from FlexLiner System.

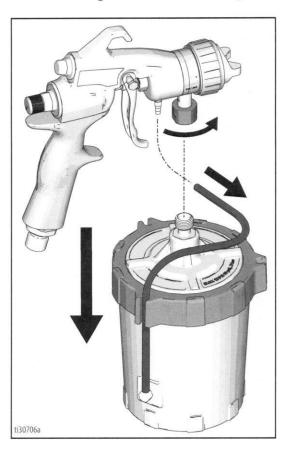

 Loosen ring from cup. Remove cover and ring from cup. Verify FlexLiner remains in cup upon removal of cover and ring.

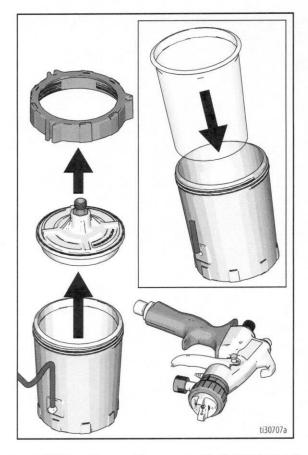


3. Fill FlexLiner with material to "MAX FILL" line. Clean threads and sealing surfaces of FlexLiner System.

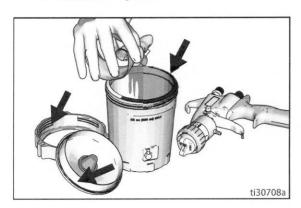


Startup


 Install cover and ring onto cup. Tighten ring securely.

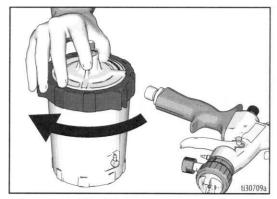

5. Connect FlexLiner System to gun.

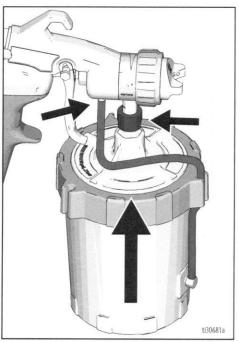

6. Connect air hose to inlet fitting of gun.

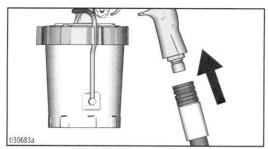


 You are now ready to spray. Reference Startup, page 16, and HVLP Edge II gun manual, provided with sprayer, for spraying instructions.

Fill Remote Cup (ProComp Models only)


1. Fill remote cup 3/4 full and install cover.

NOTICE

Only hand-tighten remote cup cover. Excessive tightening may damage cover gasket.

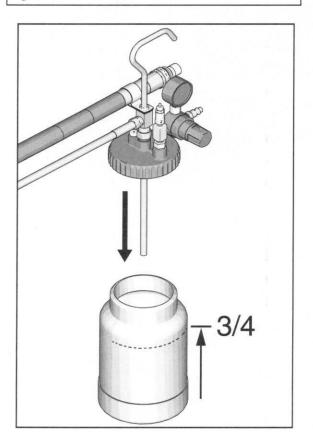


2. Connect clear air hose to compressor outlet and remote cup air inlet.

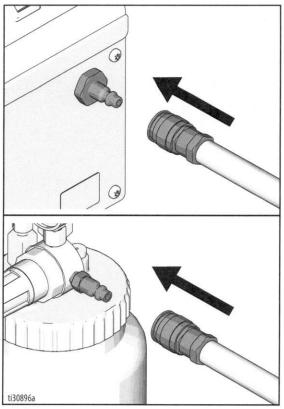


Connect 5 ft (1.5 m) fluid hose to remote cup fluid outlet and gun fluid inlet.

NOTE: Gun must be setup for use with remote cup.

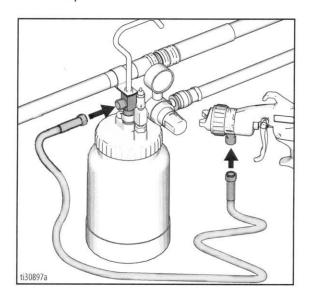

4. Connect air hose (V) to inlet fitting of gun.

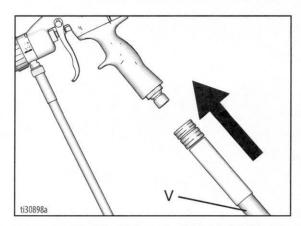

NOTICE

If the remote cup is accidentally tipped over or held at too great of an angle, fluid may leak into air regulator and cause damage. Take precautions to avoid this. If fluid gets into regulator, clean immediately.


 You are now ready to spray. Reference Startup, page 16, and HVLP Edge II gun manual, provided with sprayer, for spraying instructions.

Startup

Startup

TurboControl allows for performance adjustment of the sprayer. To reduce over-spray, always start at lowest setting and increase to the minimum setting required to provide the desired finish.

Turn TurboControl to lowest setting.

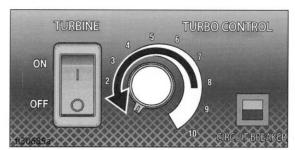


2. Turn ON/OFF switch to ON position.



NOTE: ProContractor and ProComp models in SmartStart setting will automatically turn off when not actively spraying. Sprayer will start upon re-triggering of HVLP Edge II Plus gun. Turn switch to ON position if SmartStart is not desired. In ON mode, unit will still shutdown after 3 minutes of non-use. Sprayer will start upon re-triggering of gun.


NOTE: For SmartStart to function, use components provided with sprayer and Edge II Plus gun. For replacement parts, see pages 32-33.

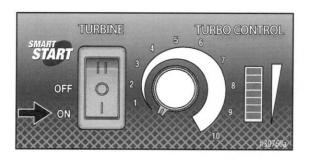

If using FlexLiner System:


 Point gun into a waste area. Evacuate air from FlexLiner System by holding gun vertically and pull trigger open until a continuous spray pattern is observed.

NOTE: Tilt gun back and forth to help in evacuation of air.

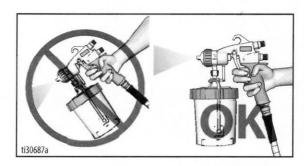

If using remote cup with ProComp Model:

4. Turn pressure regulator to lowest setting.

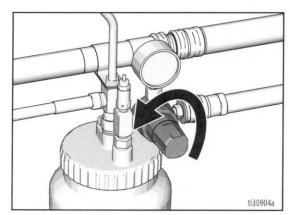

Turn compressor ON/OFF switch to ON position.



How to Spray







The turbine motor generates sparks.

These sparks can ignite flammable fumes.

- Keep sprayer in a well ventilated area.
- Keep sprayer at least 20 feet (6m) from spray area. Use additional hose if necessary.


Take a few moments prior to spraying and review these simple tips to ensure your spraying project is a success.

Spray Techniques


Use a piece of scrap cardboard to practice spraying techniques before spraying the work piece.

- For Standard and ProContractor models, use TurboControl to adjust pressure.
- For ProComp models using the remote cup, use TurboControl and pressure regulator on remote cup to adjust pressure.
- Always spray with the least amount of pressure required to provide the desired spray pattern and rate of application.
 Spraying at pressures higher than necessary wastes material and can result in an orange peel finish.
- To adjust spray gun pattern, see HVLP Edge II gun manual provided with sprayer.

 Aim gun straight at surface. Tilting gun to direct spray angle causes an uneven finish

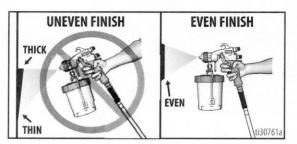


Flex wrist to keep gun pointed straight.
 Fanning gun to direct spray at angle causes uneven finish.

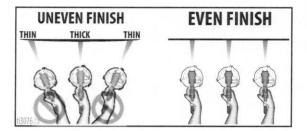

Triggering Gun

Pull trigger after starting stroke. Release trigger before end of strike. Gun must be moving when trigger is pulled and released.

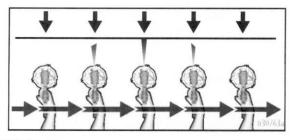


NOTE: To prevent uneven spray pattern, start and end stroke off of work piece surface.

How to Spray

Aiming Gun

Aim center of spray gun at bottom edge of previous stroke, overlapping each stroke by half.

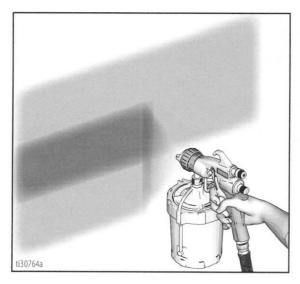

If sprayer does not spray, reference **Troubleshooting**, page 25.

Refilling FlexLiner

- Perform Pressure Relief Procedure, page 10.
- Reference Fill FlexLiner System, page

Refilling Remote Cup

- Perform Pressure Relief Procedure, page 10
- Reference Fill Remote Cup (ProComp Models only), page 14.

Cleanup

Cleaning your sprayer and gun after every job is important. Proper care and maintenance results in optimal sprayer performance.

Cleaning Filters






Cleaning the filters with flammable solvents may cause the equipment to ignite or explode. Do not use flammable solvents, such as lacquer thinner, to clean the filters.

The sprayer air filters must be clean at all times to provide sufficient air flow to cool the motor and atomize the fluid.


NOTICE

Damage to sprayer can occur if air filters are not cleaned properly.


NOTE: ProContractor and ProComp models have a TurboControl LED indicator. Indicator will blink repeatedly to indicate clogged filter.

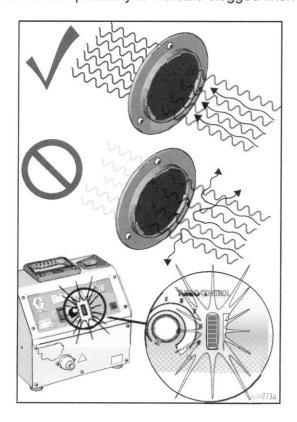

- Perform Pressure Relief Procedure, page 10.
- 2. Unplug power cord from power outlet.

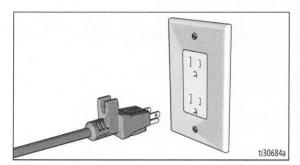

3. Remove turbine and motor air filters.

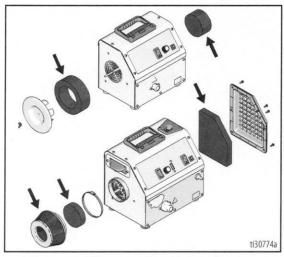

- Clean air filters and replace as necessary:
- Tap filter gently on flat surface, dirty side down.
- Direct compressed air 30 psi (2 bar, 0.2 MPa) through filter from the clean side to the dirty side.

NOTICE

Damage to filter can occur if more than 100 psi (7 bar, 0.7 MPa) is applied.

 Soak filter for 15 minutes in water and mild detergent. Rinse filter until clean. Air dry.


Cleanup

Cleaning FlexLiner System


NOTICE

Solvents, such as lacquer thinner, can damage parts of the FlexLiner System. Do NOT immerse parts of the FlexLiner System in solvent.

- Perform Pressure Relief Procedure, page 10.
- 2. Disconnect gun from FlexLiner system.

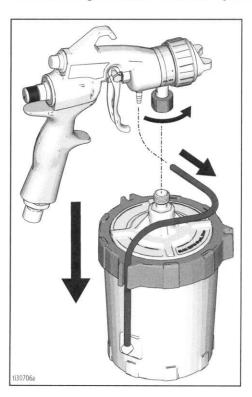

 Loosen ring (1) from cup (5). Remove ring (1) and cover (2) from cup. Verify FlexLiner remains in cup upon removal of cover and ring.

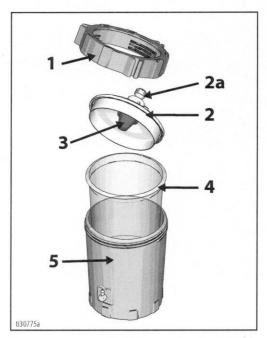


 Return excess fluid to original container. Hold the FlexLiner (4) in place when pouring.



20

 It is recommended to dispose of the used FlexLiner (4) and install a new one. If reusing, clean by wiping all excess fluid from FlexLiner (4).

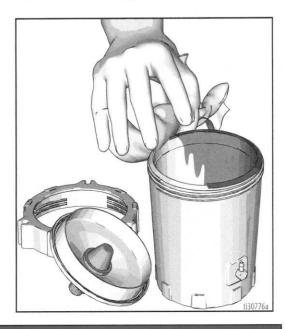


NOTICE

Dispose of FlexLiner, cleaning materials, and unused fluid according to local regulations. Refer to Safety Data Sheet (SDS) of fluids used.


 Wipe excess fluid from cover (2) and ring (1) of FlexLiner System.



- 7. Fill the FlexLiner (4) approximately half-full with cleaning fluid (warm water or appropriate solvent).
- 8. Remove and clean material strainer (3) by flushing with cleaning fluid. Re-install material strainer (3).

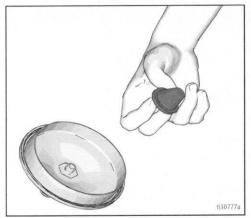

9. Install cover (2) and ring (1) onto cup (5).

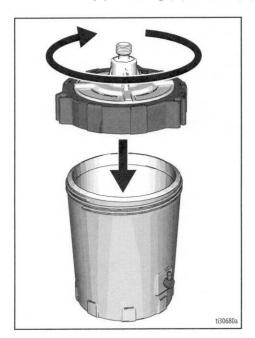

21

Cleanup

 Cover cup fitting (2a) with a rag, shake the entire FlexLiner System for a minimum of ten seconds.




11. Wipe clean and dry all components of FlexLiner System. Properly dispose of cleaning fluid.




Cleaning ProComp Remote Cup

- Perform Pressure Relief Procedure, page 10.
- Remove cover from remote cup and return excess fluid to original container.

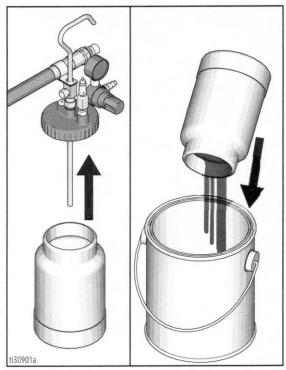

- Wipe excess fluid from remote cup and cover.
- 4. Fill remote cup quarter-full with cleaning fluid (warm water or appropriate solvent).
- 5. Install cover.

Cover cup fitting with rag, shake remote cup assembly for a minimum of ten seconds.

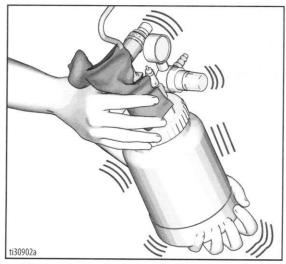

 Wipe clean and dry all components of remote cup. Properly dispose of cleaning fluid.


Cleaning HVLP Edge II Gun

NOTICE

Solvents, such as lacquer thinner, can damage parts of the HVLP Edge II gun. Do NOT immerse parts of the HVLP Edge II gun in solvent.

- 1. Remove retaining ring and air cap.
- 2. Trigger the gun and remove fluid nozzle from gun.

NOTE: Edge II Plus guns contain air cap guide and spring held in place by fluid nozzle. Upon removal of fluid nozzle, set aside air cap guide and spring.

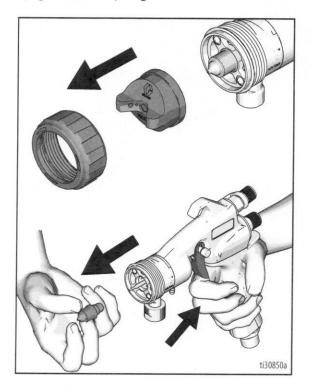


NOTICE


Trigger the gun whenever removing or installing the fluid nozzle. This prevents the fluid nozzle and needle seating surfaces from being damaged.

Cleanup

Move trigger slide from SPRAY position
 (A) to NEEDLE REMOVAL position (B).

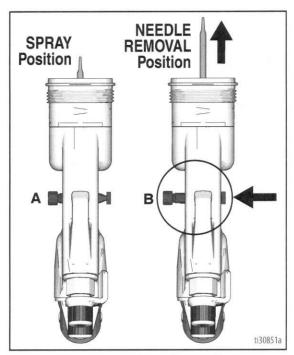

4. Remove needle from front of gun.

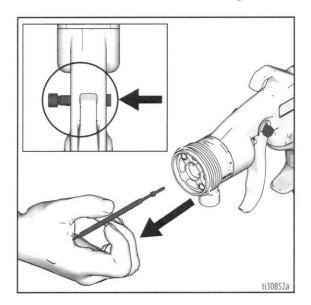


 Wipe or flush fluid from nozzle and needle. If necessary, clean retaining ring, air cap, air cap guide, and spring.

NOTICE

Do not use metal tools to clean the fluid nozzle or air cap holes as this may scratch them, causing fluid leaks and a distorted spray pattern.

 Using a squeeze bottle, flush cleaning fluid through the gun. Hold the gun upside down, pull the trigger, and dispense cleaning fluid into the cup connection.

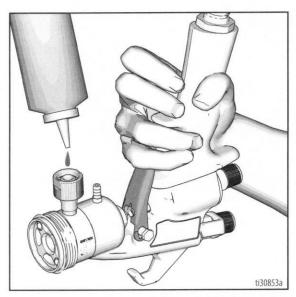

- Re-install needle and move trigger slide from NEEDLE REMOVAL position (B) to SPRAY position (A).
- 8. Trigger the gun and install spring, air cap guide, and fluid nozzle. Install air cap and retaining ring.

Troubleshooting









- Follow ProComp Models, page 9, before checking or repairing.
- 2. Check all possible problems and causes before disassembling the unit.

Problem	Cause	What to Do
Sprayer not starting	No Power	Check electrical outlet for power. Cycle ON/OFF switch.
		Check that correct power cord is used and plugged in.
		Check circuit breaker. Push to reset
	Sprayer automatically shut-off while in SmartStart setting (ProContractor and ProComp models only)	Verify air valve prior to gun is open. Trigger gun.
No fluid delivery	No material	Check cup for material. See Fill FlexLiner System, page 13.
	No cup pressurization	Check for leaks in the FlexLiner System. See "FlexLiner System" section, page 27.
		ProComp:
		Check for air leaks from the remote cup cover and gasket. Tighten cover if loose. Clean or replace gasket as necessary.
		Check for air flow from male quick-disconnect at ProComp outlet
		Turn pressure regulator on remote cup clockwise. Look for pressure on gauge. If no pressure, check air line fittings.
		Check hole in remote cup cover at needle valve for blockage or dirt. Clean if necessary.
	Gun tubing clogged	Check for obstructions in gun tubing. Clean or replace gun tubing if necessary.
	Fluid inlet clogged	FlexLiner System: Check for obstructions in material strainer and inlet fitting.
		ProComp:
		Check if fluid pickup tube in remote cup is loose. Tighten.
		Blow out and clear material hose.
	Trigger pin in UNLOCK position	Check trigger pin location. Must be in SPRAY position.

Troubleshooting

Problem	Cause	What to Do
Poor atomization	Dirty gun	Clean gun. See Cleaning HVLP Edge II Gun, page 23.
	Dirty air filters	Clean turbine and motor air filters. Replace as necessary. See Cleaning Filters, page 19.
	Extension cord too long	Extension cord must be a 3-wire, 12 AWG (2.5mm ²) minimum, 50 ft (15 m) maximum length.
	Air hose too long	Replace with shorter hose, no shorter than 20 ft (6,1 m)
	Leaking air hose connections	Disconnect and securely connect all hose connections.
Circuit breaker trips	Dirty air filters	Clean turbine and motor air filters. Replace as necessary. See Cleaning Filters, page 19.
	Incorrect power supply voltage	Verify power supply voltage is correct for sprayer model.
	High ambient temperature	Move sprayer to cooler area.
	Excessive current draw	Return to authorized service center.
TurboControl LED Indiciator blinks	Dirty air filters	Clean turbine and motor air filters. Replace as necessary. See Cleaning Filters, page 19.
Sprayer shutoff while spraying	Circuit breaker	See "Circuit breaker trips" section above.
	Dirty air filters (Blinking TurboControl LED Indicator - ProContractor and ProComp models only)	Clean turbine and motor air filters. Replace as necessary. See Cleaning Filters, page 19.
	SmartStart active (ProContractor and ProComp models only)	Release gun trigger and re-trigger gun. Turn switch to ON position if SmartStart is not desired.
Sprayer does not automatically shut-off while in SmartStart setting	Leaking air hose connections	Verify air hose and attached components are those shipped with the sprayer.
(ProContractor and ProComp models only)		Disconnect air hoses. Verify o-ring is present inside connection fitting at turbine end of hose. If using a whip hose, verify gasket is present inside connection fitting. Securely connect all hose connections.
		Replace with Graco HVLP accessories, if necessary. See pages 34 and 35.
	Gun leaking air	Verify use of Edge II Plus gun.
		If SmartStart functions when air valve at end of hose is closed, clean gun. See Cleaning HVLP Edge II Gun, page 23. See separate HVLP Edge II Gun manual.


Troubleshooting

Problem	Cause	What to Do
FlexLiner System:		
FlexLiner does not collapse or collapses slowly	Dirty sealing surfaces	Remove ring, clean sealing surfaces, securely install ring. See Fill FlexLiner System, page 13.
	Incorrect or no air cap installed on gun	Verify Edge II air cap is installed.
	Air cap is loose	Edge II: Verify retaining ring is fully installed.
		Edge II Plus: Verify retaining ring is installed to a position that does not result in a loose air cap.
	Artisan Valve (if installed) is set too low for desired application	Rotate valve clockwise to increase air flow, until the desired flow is achieved.
	Gun tubing	Verify gun tubing is properly connected between the cup and gun
		Verify gun tubing is not kinked.
	Air leaking from cup	Damaged tubing. Remove damaged section of tubing. Replace tubing as necessary. See separate HVLP Edge II gun manual.
		Damaged connection between cup and air fitting. Verify fitting is fully installed. If necessary, replace FlexLiner System. See separate HVLP Edge II gun manual.
Fluid leaking between cup and ring	Cup filled too full	Verify cup is not filled above "MAX FILL" line.
	Dirty sealing surfaces	Remove ring, clean sealing surfaces, securely install ring. See Fill FlexLiner System, page 13.
Fluid leaking between cup and gun	Loose cup connection	Tighten connection. Use wrench as needed.
	Damaged o-ring on cup connection	Replace o-ring. Apply grease to o-ring to aid in assembly.
Fluid present at bottom of cup	FlexLiner not installed	Install FlexLiner.
	Damaged FlexLiner	Replace FlexLiner.
Pulsing spray pattern	Air not fully evacuated from FlexLiner System.	See step 3 of Startup , page 13.

Parts

Standard Models

Ref.	Torque			
\triangle	110-115 in-lb (12.5 - 13.0 N•m)			
2	25-30 in-lb (3.0 - 3.5 N•m)			
<u>3</u>	15-20 in-lb (1.7 - 2.3 N•m)			
<u> </u>	10-15 in-lb (1.1 - 1.7 N•m)			
<u>\$</u>	35-40 in-lb (4.0 - 4.5 N•m)			

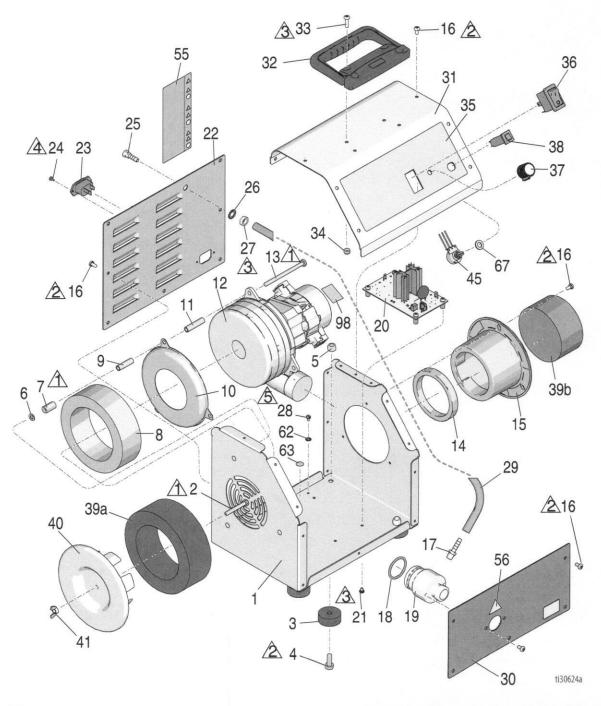

Parts List - Standard Models


Parts List - Standard Models

Ref.	Part	Description	Qty	Ref.	Part	Description	Qty
1	17R054	BOX, bottom, painted	1	21	108860	SCREW, machine	4
2		SCREW, cap hex hd	1	22	17R055	COVER, back, painted	1
3		BUMPER	4	23	114064	PLUG, inlet	1
4	100057	SCREW, cap, hex hd	4	24	15W998	SCREW, mach, torix	2
5		NUT, lock, insert, nylock, 5/16	4	25	17N459	FITTING, barbed, exhaust	1
6	125135	WASHER, flat	3	26	100639	WASHER, lock	1
7		NUT, coupler	3	27		NUT, jam	1
8	120440	GASKET, turbine	1	28		SCREW, grounding	1
O	15\\//153	7.0 Standard	1	29		HOSE, air	1
		9.0 Standard		30		COVER, front, painted	1
9	1000102	SPACER, back, turbine	3	31		COVER, top	1
3	17N374	7.0 Standard	3	32		HANDLE, carry, pivot	1
		9.0 Standard		33		SCREW, mach, torx pan	4
10		PLATE, turbine	1			hd	
11	104004	SPACER, front, turbine	3	34	116969	NUT, lock	4
	17N373	7.0 Standard	0	35		LABEL, standard series	1
		9.0 Standard			17P297	7.0 Standard	
12	1711070	KIT, repair, turbine	1		17P298	9.0 Standard	
_		(includes 6, 7, 8, 9, 10,		36	120660	SWITCH, rocker	1
		11, 13, 14, 18)		37	17N957	KNOB, potentiometer	1
	17R936	Model 17N263		38		CIRCUIT, breaker	1
	17R937	Model 17N264			114403	120V Models	
	17R939	Models 17P528, 17P534,			16A348	230V Models	
		17R074		39	17R296	KIT, filter (includes 39a,	1
	17R940	Models 17P529, 17P535,				39b)	
		17R075		40	17N387	COVER, filter, turbine	1
13	101530	SCREW, cap	3	41	100011	NUT, wing	1
14	192845	GASKET, duct	1	45	17R946	KIT, repair, potentiometer	1
15	17N388	HOUSING, filter, inlet,	1			(includes 37, 67)	
		motor		55▲	17R297	LABEL, warning	1
16	129444	SCREW, machine, torx	23	56▲	15K616	LABEL, caution	1
010.0		pan head		62	102063	WASHER, lock, ext	1
17		FITTING, barbed	1	63▲	186620	LABEL, symbol, ground	1
18		PACKING, o-ring	1	67	107194	WASHER, plain	1
19	17N436	FITTING, outlet	1	69▲		LABEL, set, international	1
20		KIT, repair, control, board (includes 21)	1			(not shown)	
	17R942	120V Models		▲ Re	eplaceme	nt Danger and Warning lab	els,
	17R943	230V Models				cards are available at no co	

Parts

ProContractor Models

Ref.	Torque		
\triangle	110-115 in-lb (12.5 - 13.0 N•m)		
2	25-30 in-lb (3.0 - 3.5 N•m)		
<u>/3</u>	15-20 in-lb (1.7 - 2.3 N•m)		
4	10-15 in-lb (1.1 - 1.7 N•m)		
<u>/</u> 5\	35-40 in-lb (4.0 - 4.5 N•m)		

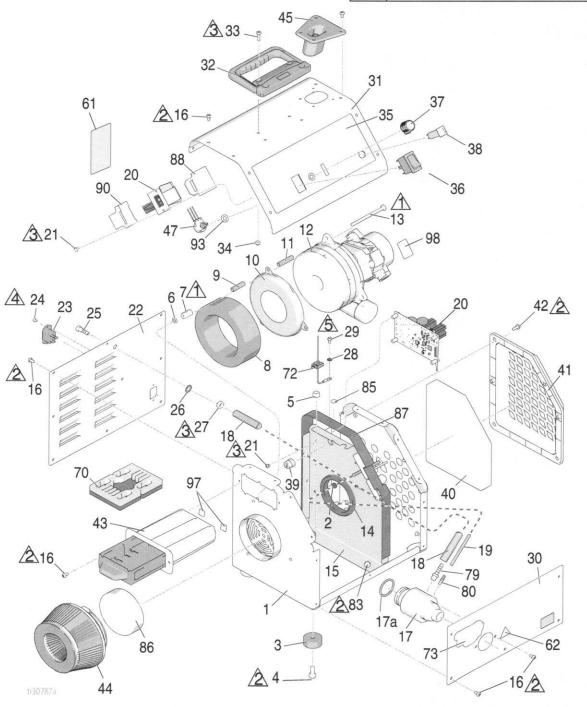

Parts List - ProContractor Models


Parts List - ProContractor Models

Ref.	Part	Description	Qty	Ref	Part	Description	Qty
1	17R057	BOX, bottom, painted	1	28	102063	WASHER, lock	1
2		GROMMET, rubber	1	29	111593	SCREW, grounding	1
3		BUMPER	4	30	17N477	COVER, front, painted	1
4		SCREW, cap, hex hd	4	31	17N479	COVER, top, painted	1
5		NUT, lock, insert, nylock, 5/16	4	32	17N390	HANDLE, carry, pivot	1
6		WASHER, flat	3	33	17R608	SCREW, mach, torx pan hd	4
7		NUT, coupler	3	34	116969	NUT, lock	4
8		GASKET, turbine	1	35		LABEL, ProContractor series	1
	15W153	37.0 ProContractor			17P299	7.0 ProContractor	
	15W152	9.0 ProContractor			17P300	9.0 ProContractor	
	192788	9.5 ProContractor			17P301	9.5 ProContractor	
9		SPACER, back, turbine	3	36	129590	SWITCH, power	1
	17N374	7.0 ProContractor		37	17N957	KNOB, potentiometer	1
	17N376	9.0 ProContractor		38		CIRCUIT BREAKER	1
10		PLATE, turbine	1		114403	120V Models	
11		SPACER, front, turbine	3		16A348	230V Models	
	17N373	7.0 ProContractor		39	114689	BUSHING, strain relief	1
		9.0 ProContractor		40*	17R298	FILTER, air, motor	1
		9.5 ProContractor		41	17N467	COVER, filter	1
12	1711077	KIT, repair, turbine (includes 6, 7,	1	42	129666	SCREW, mach	4
12		8, 9, 10, 11, 13, 14, 17a)	1.50	43	17N930	DRAWER, tool	1
	17R936	Model 17N265		44*	17R298	FILTER, air, turbine	1
	17R937	Model 17N266		45	17P447	HOLDER, gun	1
	17R938	Model 17N267		47	17R948	POTENTIOMETER, assy	1
	17R939	Models 17P530, 17P536, 17R078	8			(includes 21, 37, 88, 90, 93)	
	17R940	Models 17P531, 17P537, 17R079		61▲	17R297	LABEL, warning	1
	17R941	Models 17P532, 17P538, 17R080)	62▲		LABEL, caution	1
13	101530	SCREW, cap	3	70		INSERT, toolbox	1
14	192845	GASKET, duct	1	72		CLIP, wire	1
15	17N481	PANEL, wall, inner	1	73		LABEL, SmartStart	1
16	129444	SCREW, machine, torx pan head	28	79		FITTING, barbed	1
17	17N425	VALVE, check	1	80		FITTING, barbed	1
17a	17M388	PACKING, o-ring	1	83		NUT, lock	2
18	17N871	HOSE, air	1	85		LABEL, ground	1
19	17R093	TUBE, air, sensor	1	86*		FILTER, air, turbine	1
20		KIT, repair, control board	1	87		GASKET, wall, inner	1
		(includes 21, 88, 90)		88	17P789	GASKET, board, display	1
	17R944	120V Models		90	17R394	GASKET, barrier, ribbon	1
	17R945	230V Models		93	107194	WASHER, plain	1
21	108860	SCREW, machine	6	97	17R769	PAD, drawer	1
22	17R058	COVER, back, painted	1	98	17S011	TAPE, high temp	1
23	114064	PLUG, inlet	1	99▲	17R747	LABEL, set, international (not	1
24	15W998	SCREW, mach, torx	2			shown)	
25	17N459	FITTING, barbed, exhaust	1	. –			
26	100639	WASHER, lock	1			ent Danger and Warning labels, tags, Is are available at no cost.	r.
27	101448	NUT, jam	1			R298 includes items 40, 44, 86	

Parts

ProComp Models

Ref.	Torque
\triangle	110-115 in-lb (12.5 - 13.0 N•m)
2	25-30 in-lb (3.0 - 3.5 N•m)
3	15-20 in-lb (1.7 - 2.3 N•m)
4	10-15 in-lb (1.1 - 1.7 N•m)
<u>5</u>	35-40 in-lb (4.0 - 4.5 N•m)
<u>6</u>	5-8 in-lb (0.5 - 0.9 N•m)
A	20-23 ft-lb (28.0 - 31.0 N•m)

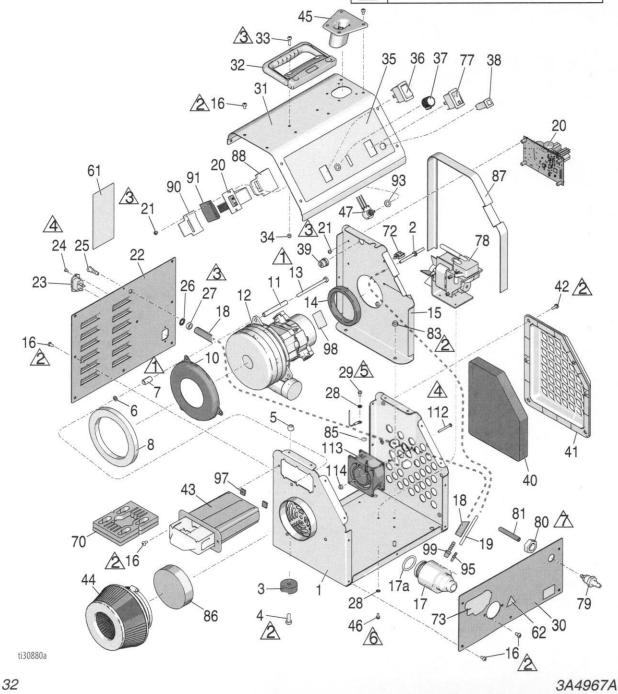


Parts List - ProComp Models

Parts List - ProComp Models

Ref	. Part	Description	Qty	Ref	. Part	Description	Qty
1	17R057	BOX, bottom, painted	1		16A348	Models 17P533, 17P539,	
2	129604	GROMMET, rubber	1	20	114690	17R081	4
3		BUMPER	4	39 40*		BUSHING, strain relief FILTER, air, motor	1
4	100057	SCREW, cap, hex hd	4	41		COVER, filter	1
5	111040	NUT, lock, insert, nylock, 5/16	4	42		SCREW, mach	4
6	125135	WASHER, flat	3	43		DRAWER, tool	1
7	129443	NUT, coupler	3	44*		FILTER, air, turbine	1
8	192788	GASKET, turbine	. 1	45		HOLDER, gun	1
10	194094	PLATE, turbine	1	46		SCREW, mach, hex wash hd	3
11	17N377	SPACER, front, turbine	3	47		POTENTIOMETER, assy	1
12		KIT, repair, turbine (includes 6, 7, 8, 9, 10, 11, 13, 14, 17a)	1			(includes 21, 37, 88, 90, 91, 93)	
	17R938	Model 17N269				LABEL, warning	1
	17R941	Models 17P533, 17P539,				LABEL, caution	1
		17R081		70		INSERT, toolbox	1
13		SCREW, cap	3	72		CLIP, wire	1
14		GASKET, duct	1	73		LABEL, SmartStart	1
15		PANEL, wall, inner	1	77	120660	SWITCH, rocker	1
16 17		SCREW, machine, torx pan head VALVE, check	28 1	78		KIT, repair, compressor (includes 46, 81)	1
17a		PACKING, o-ring	1		17R962	Model 17N269	
17a		HOSE, air	1		17R964	Models 17P533, 17P539,	
19		TUBE, air, sensor	1	70	1EV040	17R081	
20	111 111-11-11	CONTROL, board, assembly,	1	79 80		FITTING, connect, quick NUT, jam, hex	1
		(includes 21, 88, 90, 91)		81			1
	17R944	Model 17N269		83		TUBE, air NUT, lock	2
	17R945	Models 17P533, 17P539, 17R081		85		LABEL, ground	1
21	108860	SCREW, machine	6	86*		FILTER, air, turbine	1
22		COVER, back, painted	1	87		GASKET, wall, inner	1
23		PLUG, inlet	1	88		GASKET, board, display	1
24		SCREW, mach, torix	2	90		GASKET, barrier, ribbon	1
25		FITTING, barbed, exhaust	1	91		GASKET, barrier, ribbon, LED	1
26		WASHER, lock	1	93		WASHER, plain	1
27		NUT, jam	1	94		FITTING, barbed	1
28		WASHER, lock	1	95		FITTING, barbed	1
29		SCREW, grounding	1	97		PAD, drawer	1
30		COVER, front	1	98		TAPE, high temp	1
31		COVER, top	1	99▲		LABEL, set, international (not	1
32		HANDLE, carry, pivot	1			shown)	
33		SCREW, mach, torx pan hd	4	112	120094	SCREW	2
34		NUT, lock	4	113		FAN	1
35		LABEL, ProComp 9.5	1		17S031	Model 17N269	
36		SWITCH, power	1		17S141	Models 17P533, 17P539,	
37		KNOB, potentiometer	1		100100	17R081	
38		CIRCUIT BREAKER	1			NUT, lock	2
		Model 17N269				nt Danger and Warning labels, tags are available at no cost.	,
				* Filte	er Kit 17R	298 includes items 40, 44, 86	

Parts - Power Cords & Accessories

Parts - Power Cords & Accessories

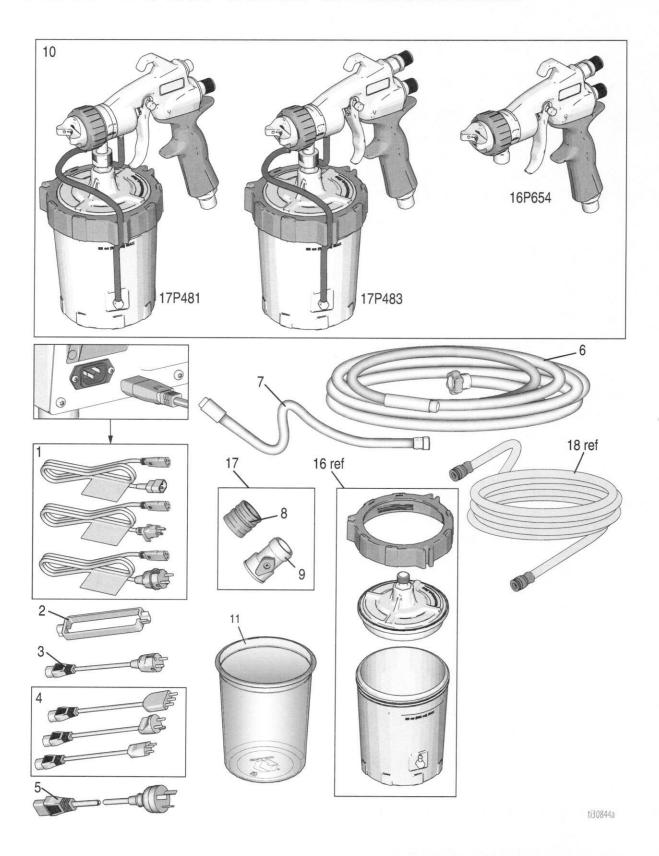

Parts List - Power Cords & Accessories


Parts List - Power Cords & Accessories


Ref.	Part	Description	Qty	Ref.	Part	Description	Qty
1	15W126	CORD, power Models 17N263, 17N264,	1		257159	Models 17N265, 17N266, 17N267, 17N269, 17P530,	
		17N265, 17N266, 17N267,				17P531, 17P532, 17P533,	
	100000	17N269				17P536, 17P537, 17P538,	
	128206	Models 17P528, 17P529, 17P530, 17P531, 17P532,				17P539, 17R078, 17R079, 17R080, 17R081	
		17P533		7	17R299	KIT, accessory, 4' air hose,	1
	116281	Models 17P534, 17P535,				whip (not included on all	
		17P536, 17P537, 17P538,				models)	
		17P539, 17R074, 17R075,		8	M70402	FITTING, female, Q.D.	1
		17R078, 17R079, 17R080,		9	17P749	VALVE, ball (not included on all models)	1
2	195551	17R081 RETAINER, plug, adapter,	1	10		GUN	1
2	193331	Models 17P534, 17P535,			17P481	Models 17N263, 17N264,	
		17P536, 17P537, 17P538,				17P528, 17P529, 17P534,	
		17P539, 17R074, 17R075,			47D400	17P535, 17R074, 17R075	
		17R078, 17R079, 17R080,			17P483	Models 17N265, 17N266,	
_		17R081				17N267, 17P530, 17P531, 17P532, 17P536, 17P537,	
3	242001	CORD, set, adapter,	1			17P538, 17R078, 17R079,	
		Europe, Models 17P534, 17P535, 17P536, 17P537,				17R080	
		17P538, 17P539, 17R074,			17P654	Models 17N269, 17P533,	
		17R075, 17R078, 17R079,				17P539, 17R081	1001
		17R080, 17R081		11	174000	FLEXLINER	1
4	287121	CORD, set, adapter,	1		17A226 17P212	3 pack 25 pack	
		Italy/Denmark/Switzerland,		14	256959	STRAP, remote, cup (Pro-	1
		Models 17P534, 17P535,				Comp models only)	
		17P536, 17P537, 17P538,		15	287819	KIT, cup, 2qt, complete	1
5	242005	17P539 CORD, set, adapter, Aus-	1	10	17D400	(ProComp models only)	4
5	242003	tralia, Models 17R074,	,	16 17	17R462 17R301	KIT, cup, FlexLiner System VALVE, air control	1
		17R075, 17R078, 17R079,		17	1711301	(includes 8 & 9)	
		17R080, 17R081		18	240488	HOSE, air, clear, 30 ft (Pro-	1
6		KIT, accessory, hose, air	1			Comp models only)	
	17R300	Models 17N263, 17N264,					
		17P528, 17P529, 17P534,					
		17P535, 17R074, 17R075					

Wiring Diagrams (Standard)

Wiring Diagrams (Standard)

120V WIRING DIAGRAM

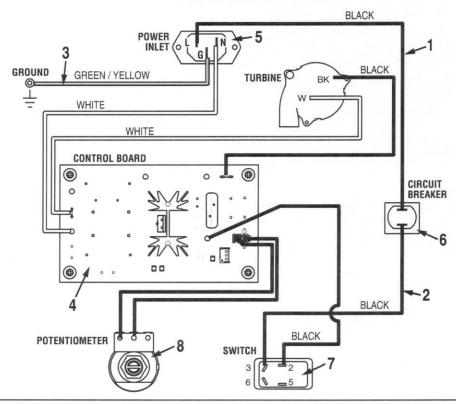


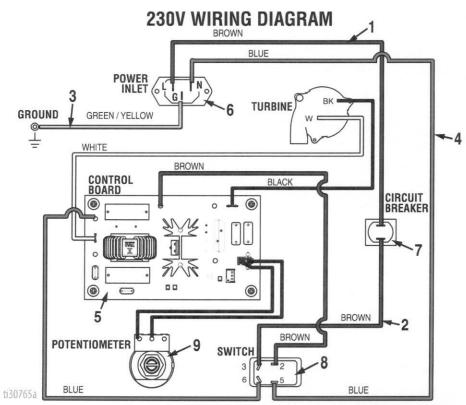


Wiring Diagrams (ProContractor)

Wiring Diagrams (ProContractor)

120V WIRING DIAGRAM

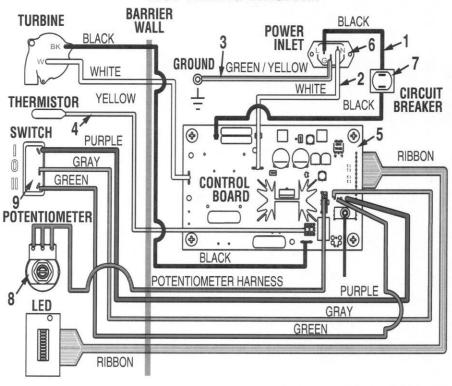


230V WIRING DIAGRAM

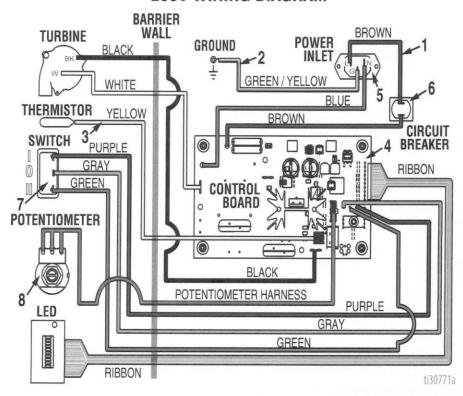


Wiring Diagrams (ProComp)

Wiring Diagrams (ProComp)

120V WIRING DIAGRAM

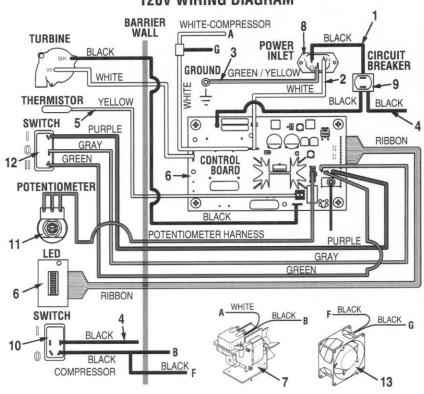

230V WIRING DIAGRAM

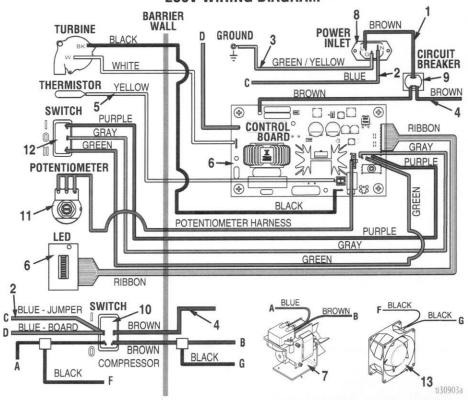

Technical Specifications

Technical Specifications

	US	Metric					
FinishPro 7.0							
Maximum Amperage	11.0	6,0					
Watts	1200						
Electrical Power Requirement	120 VAC, 50/60 Hz,15A	220-240 VAC, 50/60Hz,10A					
Maximum Hose Length	40 ft	12,2 m					
Sprayer Weight	18 lb	8,2 kg					
Total Weight	24 lb	10,9 kg					
Noise* (dBa)							
Sound pressure	Sound pressure 82 dBa						
Sound power	94.9 dBa						
FinishPro 9.0							
Maximum Amperage	12.0	6,5					
Watts	1	300					
Electrical Power Requirement	120 VAC, 50/60 Hz,15A	220-240 VAC, 50/60Hz,10A					
Maximum Hose Length	60 ft	18,3 m					
Sprayer Weight	19 lb	8,6 kg					
Total Weight	25 lb	11,3 kg					
Noise* (dBa)							
Sound pressure	83.	0 dBa					
Sound power	95.	9 dBa					
Materials of Construction							
Wetted materials on all models	zinc- and nickel-plated carbon steel, nylon, stainless steel, PTFE, Acetal, leather, UHMWPE, aluminum, tungsten carbide, polyethylene, fluoroelastomer, urethane						
Notes							
*Sound pressure measured 3 measured per ISO-3744.	feet (1 meter) from equipm	ment. Sound power					

Technical Specifications

	US	Metric				
FinishPro 7.0						
Maximum Amperage	11.0	6,0				
Watts	1	200				
Electrical Power Requirement	120 VAC, 50/60 Hz,15A	220-240 VAC, 50/60Hz,10A				
Maximum Hose Length	40 ft	12,2 m				
Sprayer Weight	23 lb	10,4 kg				
Total Weight	33 lb	15,0 kg				
Noise* (dBa)						
Sound pressure	82	? dBa				
Sound power	94.	9 dBa				
FinishPro 9.0						
Maximum Amperage	12.0	6,5				
Watts	1	300				
Electrical Power Requirement	120 VAC, 50/60 Hz,15A	220-240 VAC, 50/60Hz,10A				
Maximum Hose Length	60 ft	18,3 m				
Sprayer Weight	24 lb	10,9 kg				
Total Weight	34 lb	15,4 kg				
Noise* (dBa)						
Sound pressure	83.0 dBa					
Sound power	95.	9 dBa				
FinishPro 9.5						
Maximum Amperage	13.5	8,0				
Watts	1	600				
Electrical Power Requirement	120 VAC, 50/60 Hz,15A	220-240 VAC, 50/60Hz,10A				
Maximum Hose Length	60 ft	18,3 m				
Sprayer Weight	26 lb	11,8 kg				
Total Weight	36 lb	16,3 kg				
Noise* (dBa)						
Sound pressure	83.4	4 dBa				
Sound power	96.3 dBa					
Materials of Construction						
Wetted materials on all models	zinc- and nickel-plated carbon steel, nylon, stainless steel, PTFE, Acetal, leather, UHMWPE, aluminum, tungsten carbide, polyethylene, fluoroelastomer, urethane					
Notes						
	feet (1 meter) from equipn					

Technical Specifications

	US	Metric						
FinishPro 9.5								
Maximum Amperage	15.0	9,0						
Watts	1800							
Electrical Power Requirement	120 VAC, 50/60 Hz,15A	220-240 VAC, 50/60Hz,10A						
Maximum Hose Length	60 ft	18,3 m						
Sprayer Weight	30 lb	13,6 kg						
Total Weight	46 lb	20,9 kg						
Noise* (dBa)								
Sound pressure	83.4 dBa							
Sound power	96.3 dBa							
Materials of Construction								
Wetted materials on all models	zinc- and nickel-plated carb PTFE, Acetal, leather, UHN carbide, polyethylene, fluor	on steel, nylon, stainless steel, /IWPE, aluminum, tungsten oelastomer, urethane						
Notes								
*Sound pressure measured 3 measured per ISO-3744.	feet (1 meter) from equip	ment. Sound power						

41