



## CONDUCTOR'S SPECIAL INSTALLATION MANUAL

127H / 228H



**WARNING:** To ensure the longevity of your system, reading and following these instructions are recommended. Make sure to change filters and to drain the moisture from your tank on a regular basis.

**BEFORE YOU PROCEED! THE AIR SOURCE IN THIS KIT IS NOT MEANT TO BE MOUNTED OUTSIDE IN THE ELEMENTS! IT IS NOT WEATHER PROOF AND WILL NOT BE COVERED UNDER WARRANTY IF MOUNTED OUTSIDE OR EXPOSED TO THE ELEMENTS! MUST BE MOUNTED UPRIGHT.**




## HORNBLASTERS CONDUCTORS SPECIAL 127H/228H KIT CONTENTS

- Air Source Kit (127 / 228H)
- HornBlasters Shocker XL Horns
- 17' 1/2" Airline
- 10' 5/16" Airline
- Air Source Mounting Hardware
- 1/2" Electric Solenoid Valve
- Ear Plugs
- Air line Cutter
- HornBlasters Universal Wiring Kit

### Identifying Fittings

The diameter of the thread (X) will indicate what size thread a fitting has. If you're not sure which fittings are 1/2", 3/8", or 1/4", measure the thread on each fitting and match it up with the values below.

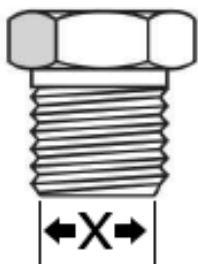

1/2" NPT	3/8" NPT	1/4" NPT	1/8" NPT
0.84"	0.675"	0.54"	0.405"



127 / 228 Air Source



1x 1/2" PTC Fitting



4x Shocker Horn Elbow



1x Banjo / 4-Way Splitter



1x 1/2" Solenoid Valve



10 Feet 5/16" Air line



17 Feet 1/2" Air line



1x Shocker XL Horns



## Safety Tips and Important Information

### IMPORTANT SAFETY INSTRUCTIONS



#### **Caution: To prevent the risk of electric shock or electrocution:**

- Do not disassemble any electrical components of this horn kit (air compressor, air valve, pressure switch).
- Do not attempt repairs or modifications of any component. Please refer to qualified service agencies for all service and repairs.
- Do not operate any component where it can fall or be submerged into water or any kind of liquid.
- Do not reach for any component that has fallen or been submerged into water or any kind of liquid.
- Use the included components with 12 volt DC systems only.
- Do not leave the air system unattended during use.

#### **WARNING: To prevent injury:**

- Never allow children to operate the compressor or air horn. Use close supervision when operating this equipment near children or animals.
- The air compressor will become very HOT during and immediately after operation. Do not touch any part of the compressor with your bare hands during or immediately after use.
- Do not use this product near open flames or explosive materials or where aerosol products are being used.
- Do not operate this product where oxygen is being administered.
- Do not pump anything other than atmospheric air.
- Never use this product while sleepy or drowsy.
- Do not use any tools or attachments with the supplied air source unit without first determining maximum air pressure for that tool or attachment.
- Never point any air nozzle or air sprayer toward another person or any part of your body.
- The included compressor is equipped with an automatic reset thermal protector and can automatically restart after the thermal protector resets. Always cut off power source when thermal protector becomes activated.
- Use only in well ventilated areas.
- Do not sound the air horn(s) in close proximity to another person's or your own ear(s).
- Do not fill the included air tank above 150 PSI. Doing so may result in death or serious injury.
- Disconnect the battery negative cable before doing anything. Failure to disconnect this terminal can lead to damaged electrical components.
- Use eye protection when operating drills or other power tools during the install.
- Ensure the parking brake is engaged before you get underneath the vehicle.
- Do not wire the system without the fuse holder.
- Do not allow the compressor to run when the vehicle is off.



## Recommended Tools + Addons

### Recommended Tools

- 3/8" Long Socket (Horn Front Mount)
- 1/2" Long Socket (Horn Rear Mount)
- 1/2" Wrench
- 7/8" Wrench (4-Way Splitter on Valve)
- 10mm Wrench or Socket (Air Source Mounting)
- 12mm Wrench
- Drill (3/16" & 7/16" bits)
- Wire Cutter / Stripper / Crimper

### Compatible Add-on Kits (*available @ [www.HornBlasters.com](http://www.HornBlasters.com)*)

Name	Description	Part #
Tire Inflation Kit	Adds a quick disconnect to your system which allows you to use air tools with our kit.	AA-TIK-H
Electric Drain Valve Kit	Replaces the drain cock with a solenoid valve; allows for remote draining of the system	AM-D04K
Digital Air Gauge	2' Digital Air Pressure Gauge allows you to monitor the tank pressure in the cab	GA-220H
Six Horn Upgrade	Adds two more bells to the system for more volume!	HU-S6-1
Shocker Horn Bracket	Mounting plate for the set of four horns only	HB-SB-1

### Optional Install Items (Not required but will make your install easier)

- **Add-a-circuit** - Great for tapping into a key-power source from your fuse-box.
- **Self-Tapping Screw** - These can be used for ground points on the pressure switch, compressor, and valve.
- **Slotted Angle Iron** - Can be used to mount the horns without making a plate.
- **Cable Ties** - Used to keep your air line looking clean and organized.
- **Heat Shrink Tubing** - Can be used over the terminal connectors to better seal them up against the elements.
- **1" Adjustable Wrench** - Makes it easier to get the brass fittings into the tank. You can use one wrench for all the fittings on the system.
- **Thread Sealant** - Can be used instead of Teflon to seal fittings.


## Preparing For the Install



### Recommended Install Locations for Your Car (Compressor)

- **The trunk** of your car/sedan/suv is a great spot for this air source kit. The trunk keeps the compressor out of the weather and is one of the best install locations for the compressor/tank combo.
- **The engine bay** can also be used as an install location for the air source. If you have enough room to mount the air source without getting too close to the engine, this will work just fine. Do not mount the compressor too close to engine. If the compressor gets too hot, it will not run.
- If you decide to mount the compressor outside the car make sure it won't get submerged if you go through a large puddle! It can get wet but you cannot submerge the system.

Check out the install photos below, these are two examples of installs in the rear storage area of a car with a sub.

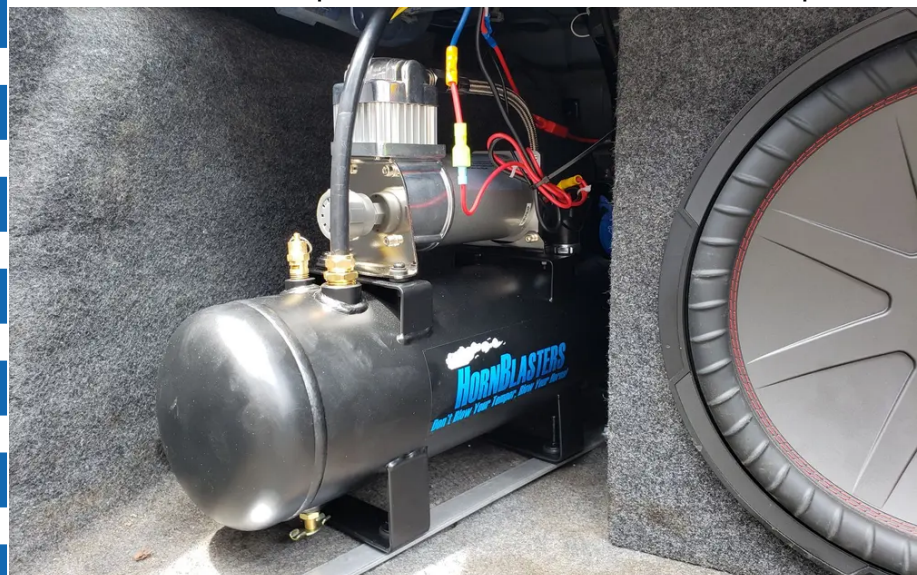

### Recommended Install Locations for the Horns

- These horns will sound their best when facing down towards the ground, or towards the front of the vehicle (these can face forward!) We typically see these mounted behind the front bumper, ahead of the radiator on most vehicles. (see picture below, to the right)
  - If you opt to install the horns in the front grille, make sure that the opening at the end of each bell is not blocked or covered. **Make sure to leave some room for airflow to your radiator!**



Horns installed underneath a car



Horns installed in the front grille of a car



## Preparing For the Install (continued)




### Recommended Install Locations for Trucks (Compressor)

- The toolbox is a great location for the compressor. **Do not use the toolbox as a grounding point.**
- Mounting the compressor/tank in the bed (if covered) is a great option.! Some full size trucks will have room behind the seats to mount the air system.
- The engine bay is a good spot for the compressor as long as you keep it away from the exhaust manifold and engine block. The compressor must remain upright and attached to the tank as well.




### Recommended Install Locations (Horns)

- You can mount these horns in the front bumper similar to a car or underneath the bed.
- If you face the horns forward when mounted underneath they may pickup some dirt/dust from the road. This is normal and will not damage the horn. Make sure to honk the horns regularly to keep any buildup or dust/dirt out of the horn assembly.

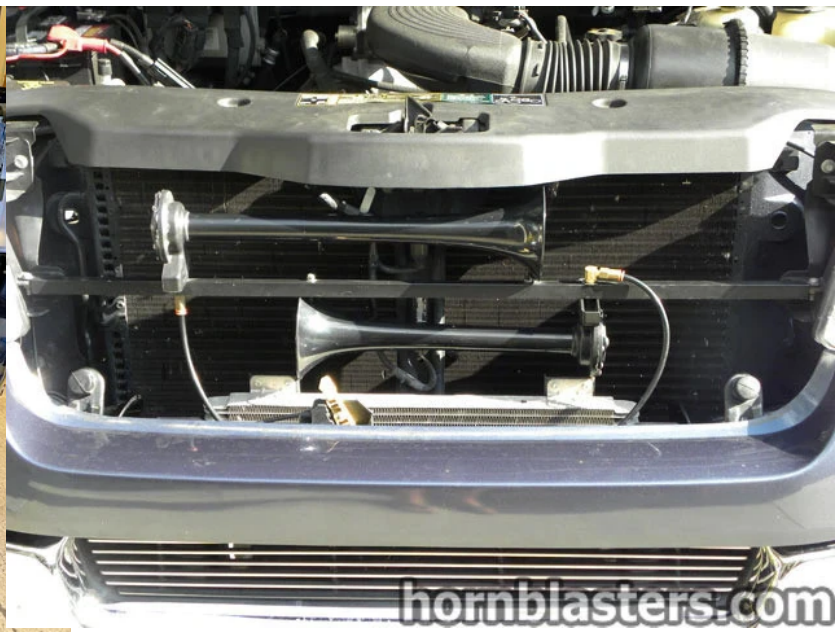

# Plumbing Diagram

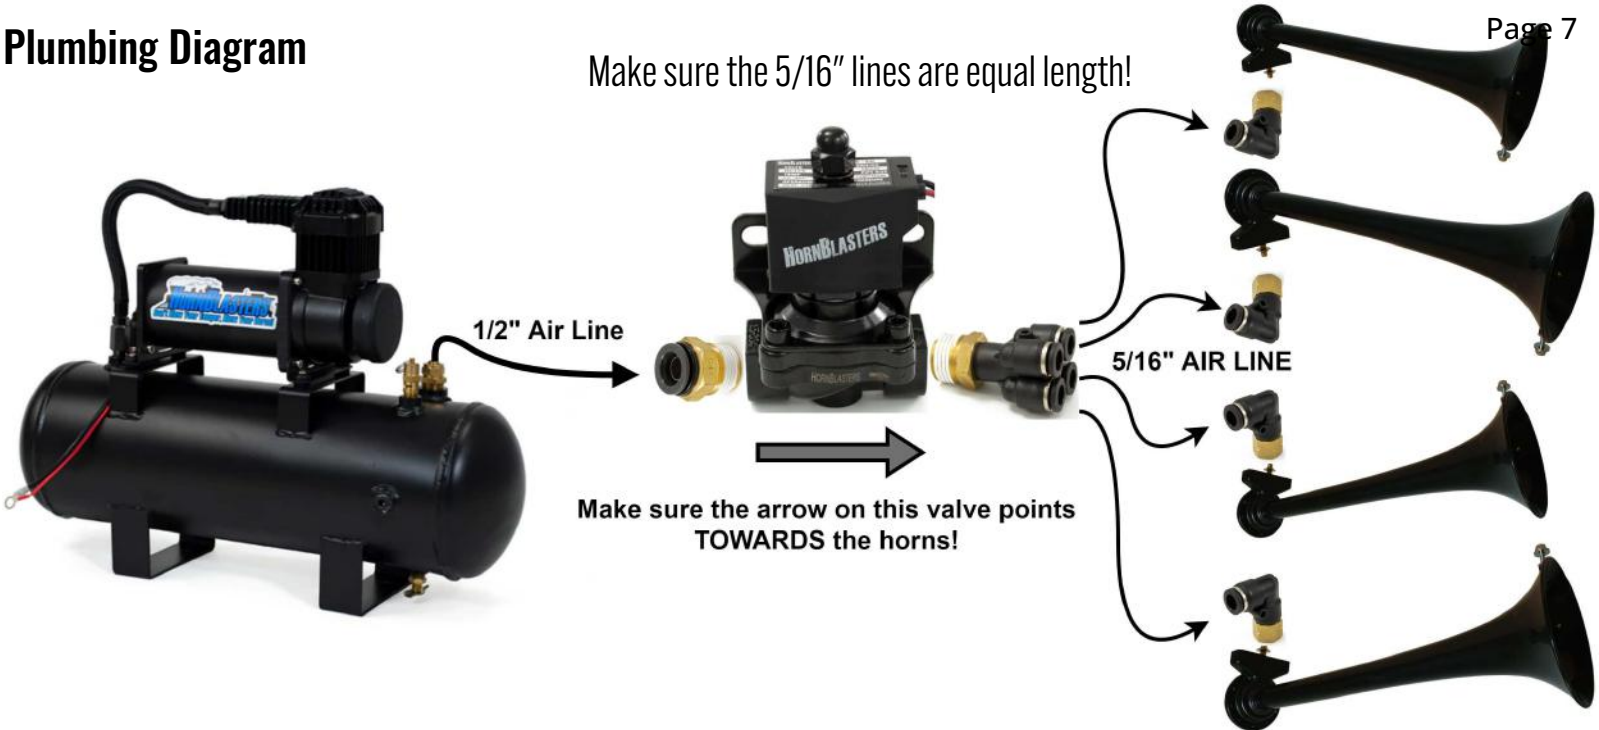

## Plumbing the air line to the tank

Bad Cut



Good Cut



Ensure each air line is fully seated over the compression fitting before tightening the nut down over it. If the line is not fully seated over the barb, it can slip off the fitting even with the nut in place. Hold the line in place and use a wrench to tighten the compression ferrule down.

Use a flathead screwdriver to pry the filter housing apart. You can insert the flat end of the screwdriver into seam, where the arrow is



Remove the old filter element from the housing. Insert the new element into the center so that the white portion of the filter lines up with the plastic tabs. Replace the cover back over the housing, lining the tabs up on the sides of the cover.





The compressor filter must be changed out every 2-3 months, otherwise the compressor will start to pull in dirt/dust and wear prematurely.



6511 N 54th St  
Tampa, FL 33610

+1 (813) 783-8058  
Fax: +1 (813) 783-2407

## 2-GALLON CONDUCATORS SPECIAL 127H/228H WIRING DIAGRAM

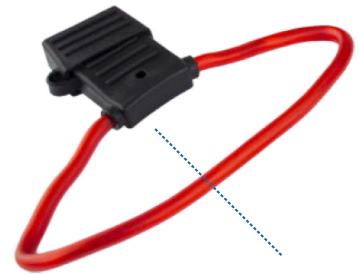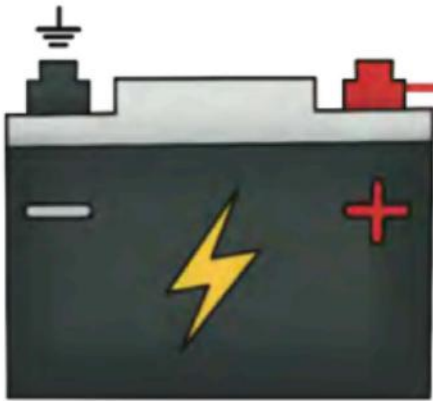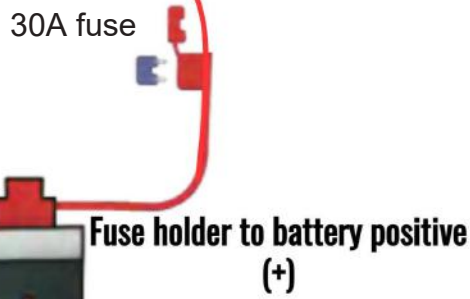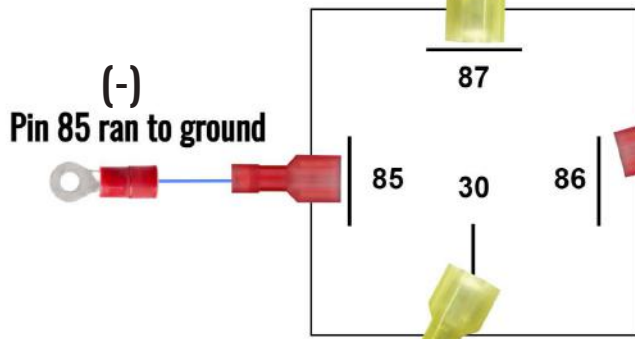

Cut fuse in half at center point



6511 54th St  
Tampa, FL 33610



+1 (813) 783-8058  
Fax: +1 (813) 783-2407

## Wiring Instructions

### Wiring the Relay

**Pin 30:** This pin will connect to the battery positive terminal. You **MUST** use the supplied 10-gauge RED wire for this connection. Use the supplied tan or green terminal to connect the red wire to this pin. Cut the fuse holder wire in half at the center point. Connect one end to the battery positive terminal. Connect the other end to a lead of 10 ga. red power wire that runs back to the relay.

**Pin 86:** This pin will connect to a key-power source. You are looking to connect this pin to any circuit that is **ONLY ON WHEN THE VEHICLE IS ON**. This will prevent your kit from running when the vehicle is off. Common key-power sources include the cigarette lighter fuse, sunroof, radio, trailer running lights, daytime running lights, etc. You can use any circuit that is rated for 5A or less. The relay only needs a fraction of an amp to operate.

**Pin 85:** Route a lead from this pin to the frame of the vehicle as a ground point. You may use the supplied Blue or Grey wire for this connection. You can use a wire brush on the frame or bed coating to ensure a good connection to metal is made.

**Pin 87:** Take the red lead coming off the compressor/tank combo and connect it directly to this pin.

Your relay is now wired and ready for use. You can use a small lead of wire to connect pins 30 & 86 together to test the relay. If you have this wired correctly, the relay should make a light 'click' sound when the two pins are connected. This means the relay is turning on and off properly. When you start the vehicle, it will send power to pin 86 and turn the relay on, which will allow the compressor to run.

### Key-Power-Source (Normal Method)

If you're having trouble locating a fuse that is only hot when the vehicle is on, you can go online to <https://fuse-box.info/>. You can use a test light to check whether or not the fuses are hot with the key in the off position. Route the black probe/clip to the battery negative terminal (-) and use the red probe on the metal contacts of the fuse(s) you want to check. If the light comes on, your fuse is hot. If the light does not turn on, start the vehicle and check for current. The light should illuminate now that the vehicle is running.


### Using A Toggle Switch Instead of a Key Power Source

If you can't find a good key power source, you can use a toggle switch instead to manually stop the compressor from running. To do this, locate the supplied toggle switch that came with your horn kit. Wire one lead of the toggle switch to +12v power and take the opposite lead of the toggle switch to pin 86 on the relay. When you flip the switch on, the relay will switch on and allow the compressor run. Wiring your kit this way means that you MUST turn the switch off with the vehicle, otherwise the compressor could run overnight and drain your battery.

### Connecting the Train Horns to the Steering Wheel

A = 18 Gauge Butt Connector

B = 18 Gauge 3M T-Tap / Scotchlok

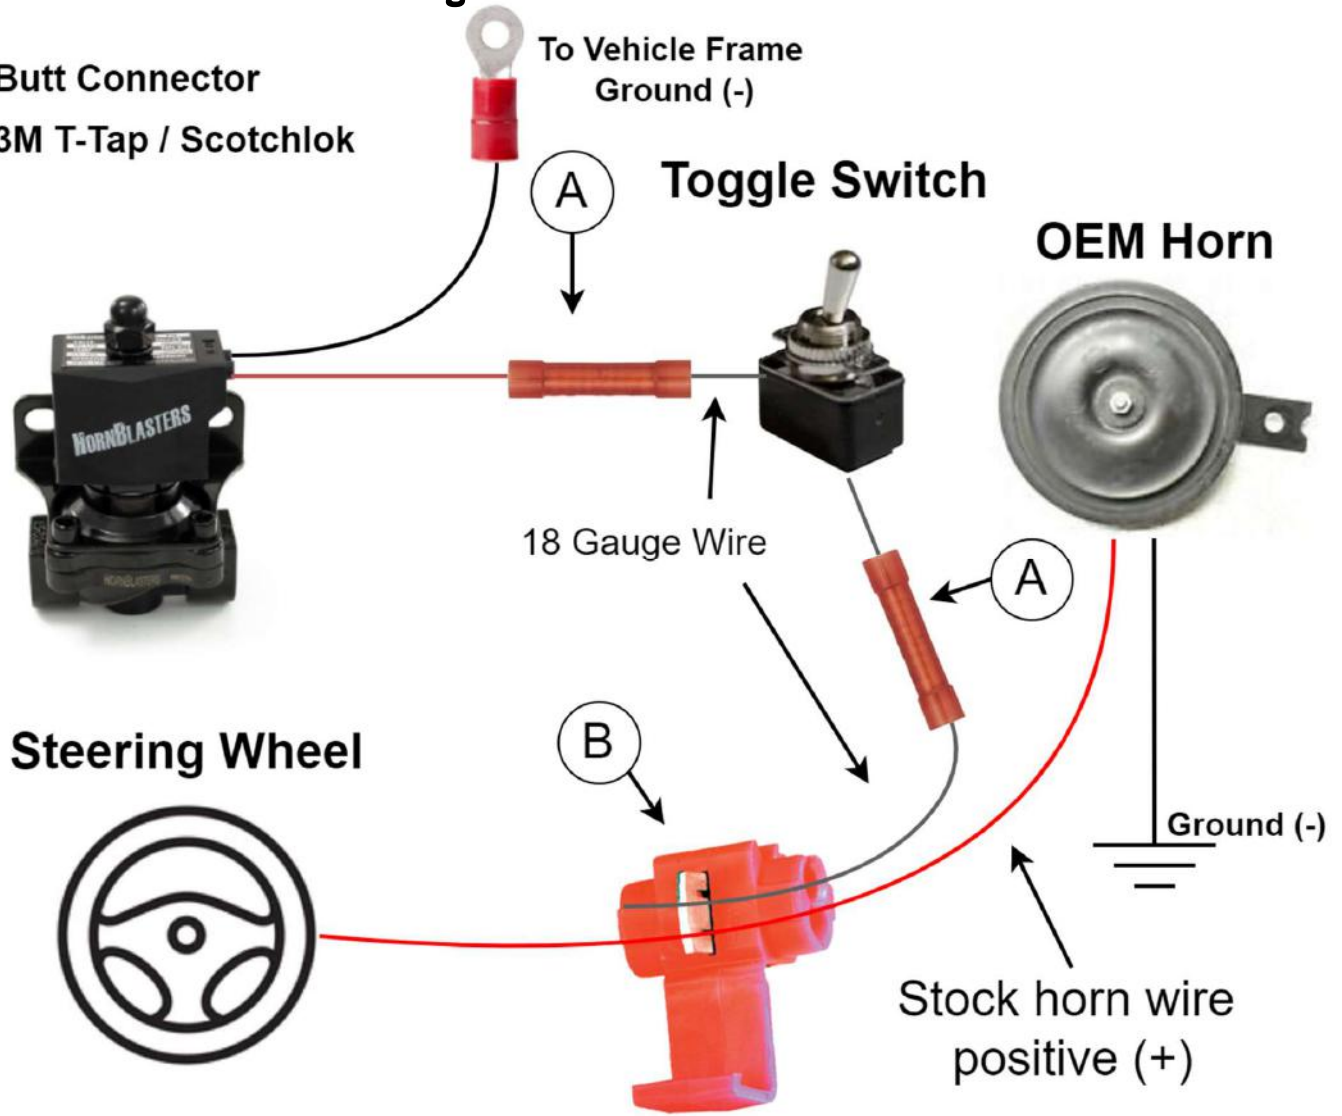


### Connecting the Train Horns to a Push Button

To Vehicle Frame Ground (-)

A = 18 Gauge Red Butt Connector  
C = 18 Gauge Red Ring Terminal

18 Gauge Grey wire for ALL connections

10A Fuse (optional)

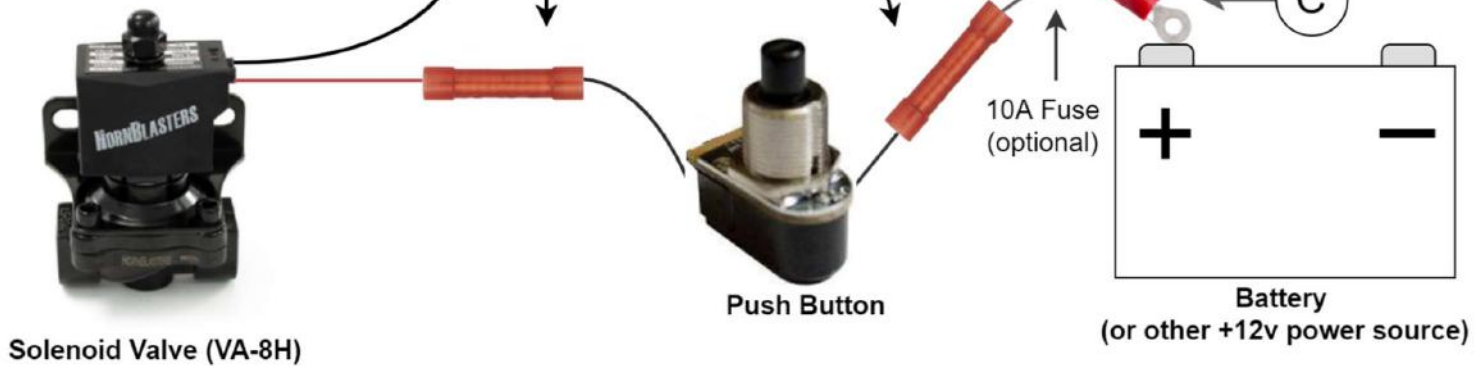



## Maintenance / Tips (Do not throw this away!)

### Once every...

- **2 Weeks**

- Drain the air tank of moisture! Do not let the water build-up in the tank longer than 2 weeks. The water can find it's way into your horns and cause them to sound squeaky or not at all. The water can also find it's way into your pressure switch and cause it to fail.

- **Month**

- Check the air filter element for the compressor. If the element is showing signs of dust/dirt build-up, replace it with a new one.

- **2 Months**


- Check your air lines and make sure they're not rubbing against anything. Inspect the horns for damage.
- Check your wiring for corrosion (**especially in the winter time**) If the terminal connectors become oxidized or corroded, the kit could stop working at random in the future.

- **3 Months**


- Replace the filter if you haven't already. Inspect the filter if it was recently replaced.
- Check the tank for leaks. After being installed on your vehicle for some time, the vibration from daily use can cause a small leak to occur at the fittings or air line connections. Spray down with Windex or soapy water to find the leak point.

- **Year**

- Check your ground connections. If the connection to the frame isn't that good or comes loose, the compressor or solenoid valve will stop working properly.
  - Use a wire brush to clean these up if needed.
- Inspect your mounting hardware for the compressor/tank/horns. Ensure all components are still secured nice and tight.

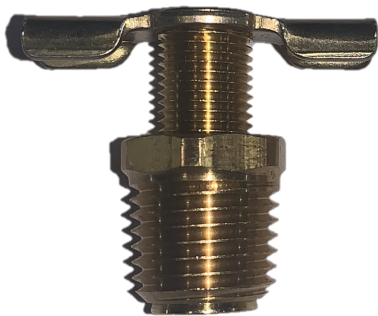

Drain Cock  
Closed Position

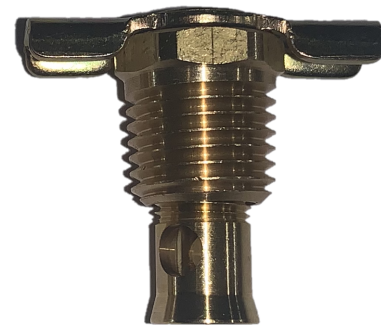

Drain Cock  
Open Position



## Troubleshooting

### Compressor

- **The compressor doesn't turn on.**

- Try connecting the compressor to a 12v battery directly.
  - Take the red wire to the positive terminal and the black wire to the negative terminal.
  - Give us a call if the compressor doesn't run. If it does, go to the next step.
- Double check the wiring for the relay. Test the relay if needed
  - Make sure that pin 86 is connected to a good key-power source and ensure that pin 85 is grounded properly. You can test the relay wiring by connecting a small wire from pin 30 and jumping it over to 86. If the compressor runs when you do this, you need to check your key-power source. It is not giving power to the relay.
- Make sure the fuse isn't blown
  - If the fuse is blown, this could be due to a short in your wiring. Before you put a new one in, check and ensure your wire is not frayed or exposed anywhere.

- **The compressor doesn't fill the tank**

- Make sure the drain cock isn't open
  - Refer to page 11. If the drain is open, the tank is not sealed and cannot pressurize.
- Make sure the valve isn't open or backward
  - If the valve is open, the air from the compressor is escaping through it constantly. If the valve is backward, air will escape through it constantly.
- Check the compressor's air inlet (only applies if you have a 228H)
  - If the plug from the inlet was not removed, the compressor cannot suck in air. Remove the filter and remove the plug.
  - Make sure to check that you removed the plug from the end of the compressor's leader hose. If the plug is still present, the compressor will not be able to push air out of the hose.

- **The tank loses pressure after a few hours**

- Spray each fitting and air line with soapy water or Windex®.
  - The liquid will bubble up anywhere a leak is present. Typically, fittings need to be tightened further or more Teflon tape needs to be applied to the thread. If you have a leak from the air line connections, re-cut the lines flush and re-seat them into the PTC fittings.



## Troubleshooting

### Horns

- **The horns won't honk**

- Check the air tank for air pressure. If your air gauge reads 0 PSI, refer to the steps on page 12 to remedy the lack of air in the tank.
- Check the wiring for the horn solenoid valve. If the valve has a loose ground connection, it will not work properly. Make sure the valve is connected to your activation switch.
- Check the power source for the horn activation. Use a test light or voltmeter to check for +12v on the lead coming from your stock horn wire or power source. Make sure power is coming into and out of the activation switch/button.

- **The horns don't sound right**

- If your horns start to squeak or sound high-pitched, drain the tank. Moisture buildup in the tank is finding its way from the tank into your horns. This causes them to squeak.
  - Drain the tank of moisture. Disconnect the lines from each horn bell but leave them connected to the 4-way. Let the tank build pressure and then press the horn button. The rush of air through the lines will remove excess moisture.
- Check and ensure the end of each bell isn't obstructed or blocked. The horns will sound off at a different pitch when the opening of the bell is blocked.

- **The horn honks on its own as soon as it is wired up**

- This is a tricky problem to fix and can be confusing to most. On some vehicles, the stock horn receives a constant feed of power from the battery. When the wheel is pressed, a switch inside the steering wheel creates the ground for the horn circuit and the horn honks. When you wire your OEM horn wire to our valve, the valve ground completes the circuit and causes the constant honk.
  - We can fix this problem by following these steps:
    1. Disconnect the valve ground from the frame.
    2. Splice from the OEM horn **NEGATIVE** lead and route this to the toggle switch.
    3. Connect the opposite lead of the toggle to the black wire on the valve.
  - This makes it so that the valve is actuated from the negative side of the OEM wiring. If you have trouble with this, give our team a call @ (877)-209-8179.
- Make sure the valve isn't connected to a constant power source. If the valve is receiving power constantly, it will stay open.

- **It sounds like the horns are going off at different times**

- Check the length's of each air line from the 4-way splitter to each bell. If these lines are not equal length, the horns will sound off at different times. This is not ideal.
  - Check and ensure each air line is secure in the elbow fittings. If one line is loose or disconnected, the other horns will sound muffled due to the loss of air pressure.

**Can't find your issue listed above? Give our team a call @ (877)-209-8179 or shoot us an email to [sales@hornblasters.com](mailto:sales@hornblasters.com)**

