


Smart Dimmer

Let's get started

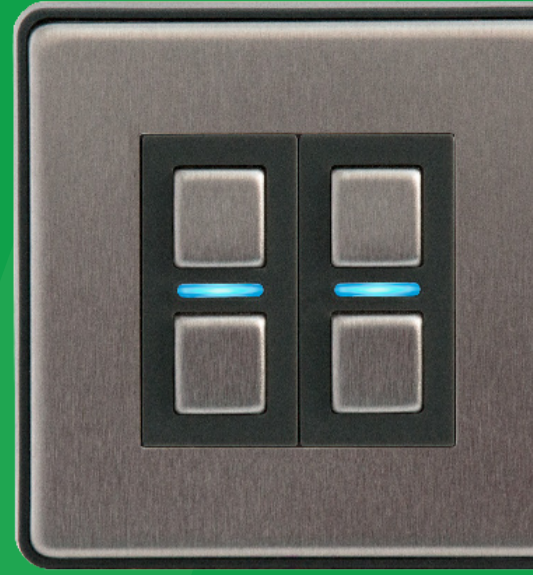

Instruction Guide
Model No. L22

Before you start

You will need

- A back-box with a minimum depth of 35mm
- Suitable electrical screwdrivers
- Suitable dimmable lamps (bulbs)
- Knowledge of how to safely turn off/on mains electricity
- Your Link Plus, smartphone and Dimmer

Installing yourself?

Please note that all Lightwave products can be legally DIY installed in your own home; however, if in doubt, always consult a qualified electrician.

It is important to install this product in accordance with these instructions. Failure to do so may risk personal safety, could create a fire hazard and will also void your warranty.

If conducting an insulation resistance test, any hard-wired Lightwave devices must be disconnected from the mains, or damage to the unit may occur.

Help video & further guidance

For additional guidance, and to watch a video that will help guide you through the installation process, please visit the support section on www.lightwaverf.com

In the box



L22 Dimmer



Dimmer spacer

x2 Fixing screws

Specification

- RF frequency:** 868 MHz
- Input rating:** 230V~ 50Hz
- Output rating:** 200W max per gang
- Incandescent Load:** 10W min 200W max per gang
- Back Box Depth:** 35mm min
- Earthing Requirement:** Not essential (double insulated)
- Standby Energy Use:** Less than 1W (per gang)
- Wiring:** Neutral recommended, but not required
- Warranty:** 2 year standard warranty
- Circuit Type:** non-SELV

Hints and tips

Get the best out of your install

Back box and spacers

This Lightwave Smart Dimmer requires a 35mm deep back box in which to mount it. If you have a back box that is shallower than 35mm, then a Lightwave spacer can be used to provide up to 10mm of extra clearance from the wall.

LED Lamp compatibility

Lightwave dimmers are designed to work with the majority of dimmable LEDs, but, as every lamp can behave differently, it is advisable to choose variants that have been tested and proven to work well. If you plan to use LEDs, we strongly recommend that you consult our compatibility chart (see www.lightwaverf.com). The LEDs must be dimmable (not all varieties are), and you should not exceed the maximum loading recommendations provided on the compatibility chart or damage could occur.

Compatible lamps


- Mains voltage incandescent lamps (max 200W)
- GU10 / HI spot halogen lamps (max 200W)
- Selected dimmable LEDs (see www.lightwaverf.com)

Not compatible with:

- Wirewound transformers (generally older style)
- Electric motors
- CFLs and CFL tubes
- Incandescent lamps under 10W

Automations

Using the Link Plus and Lightwave App, you can create custom automations for Lightwave devices. Automations provide a whole host of clever features, including timers, group actions, triggers and wireless 2-way switching. Find out more by exploring the Lightwave App.

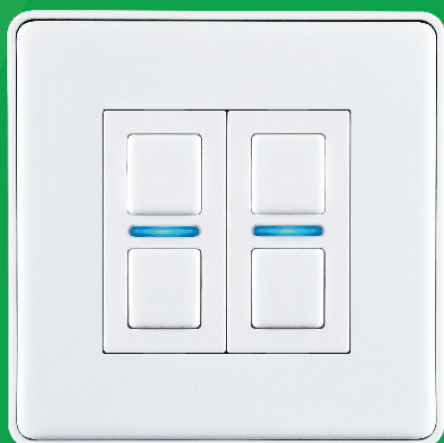

Environmentally friendly disposal

Old electrical appliances must not be disposed of together with residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.



EU Declaration of Conformity

Product: Dual Channel Dimmer
Model/Type: L22
Manufacturer: LightwaveRF
Address: Innovation Campus Birmingham, Faraday Wharf, Holt Street, Birmingham, B7 4BB

This declaration is issued under the sole responsibility of the LightwaveRF. The object of the declaration described above is in conformity with the relevant union harmonisation legislation.

Directive 2011/65/EU ROHS, Directive 2014/53/EU: (The Radio Equipment Directive)

Conformity is shown by compliance with the applicable requirements of the following documents:

Reference and date:
EN301489-3 V1.6.1: (EMC), EN300220-2 V3.1.1 (RF), EN62479:2010 (RF Exposure), EN60669-2-5:2013 (Safety)

Signed for and on behalf of:
Place of Issue: Birmingham
Date of Issue: 20th August 2017
Name: John Shermer
Position: CTO

1 Install the Dimmer


The easiest way to learn how to install the Lightwave Dimmer is to watch our short installation video which is accessible at

www.lightwaverf.com/product-manuals

Carefully follow the instructions in this section in order to install the Dimmer. Please remember that live electricity is dangerous. Do not take any risks.

If in any doubt, consult a qualified professional.

For other advice, please contact our dedicated technical support team on 0121 250 3625.

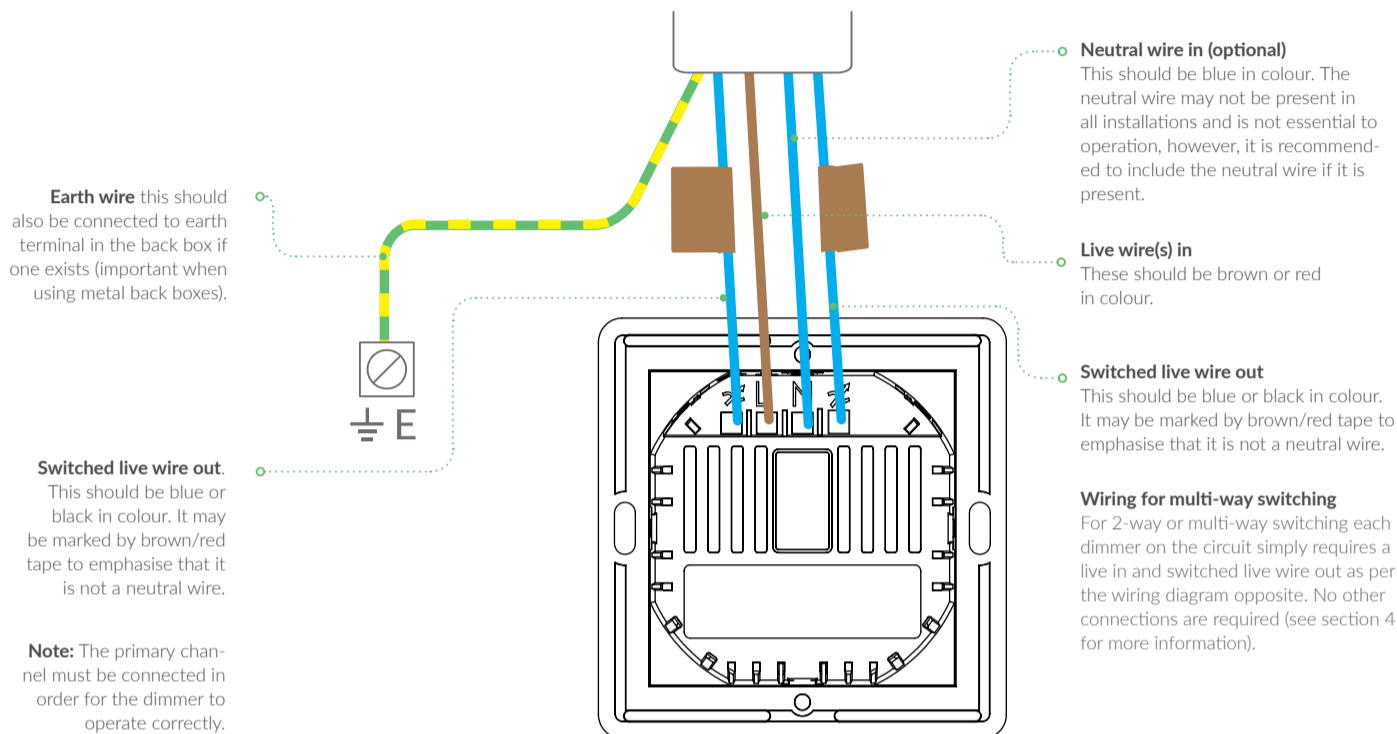

1.3 Remove the faceplate


Remove the faceplate from the Lightwave Dimmer by carefully inserting a screwdriver into the small slot located at the bottom edge of the cover.

1.4 Wire the Dimmer

Carefully wire the Dimmer as shown in the diagram. Be aware that existing cables can vary in colour and may not always be correctly labelled. If in any doubt, always consult a qualified electrician. Replace the faceplate by hooking it onto the top edge of the Dimmer and clipping in the bottom. Check the wiring and load; remember not to exceed the 200W incandescent load and to only use recommended dimmable LED lamps.

On button

Tap to turn on
Hold to raise light level
Double tap to go to full brightness

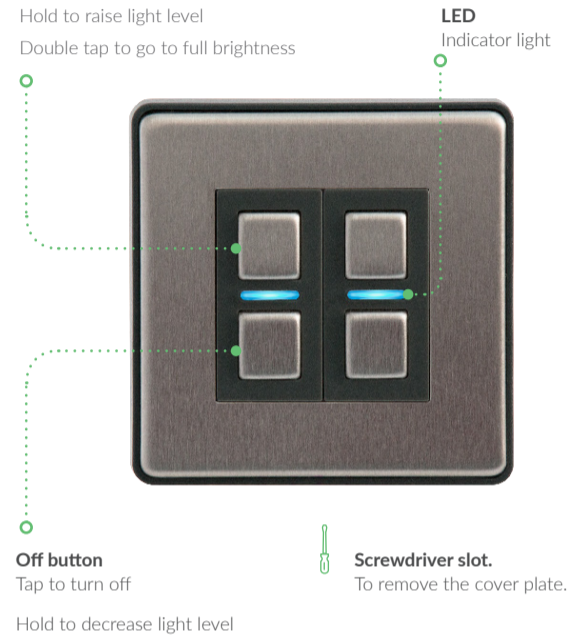

2 Calibration

Once the dimmer has been installed, lamps added to the circuit and the power switched on, it will enter calibration mode. This mode calculates the appropriate settings and dimming range to maximise compatibility with the lamps being used on the circuit.

Automatic calibration

If the dimmer has not previously been calibrated, it will automatically calibrate itself to the lamps detected on the circuit after 5 seconds. If the dimmer has been calibrated previously, these settings will be restored unless the on button is pressed within 5 seconds to overwrite them with a new calibration (recommended if lamps are changed). Auto calibration is denoted by flashing green LEDs.

Manual calibration (use in the event of persistent lamp flicker or instability)

Pressing the off button within 5 seconds of introducing power to the Dimmer will initiate manual calibration. This is initially denoted by flashing green and red LEDs. Pressing the on and off buttons now will extend or shorten the lower dimming limit. Pressing both buttons together will save the setting. Next, flashing green and blue LEDs denote that pressing the on and off buttons will now alter the upper limit. Press both buttons to save this setting.

3 Link the Dimmer

To be able to command the Dimmer, you will need to link it to the Link Plus.



Please follow the in-app instructions which will explain how to link devices.

On the Dimmer, press and hold down the 'on' / 'off' buttons on one of the gangs until the LED flashes blue and red alternately then release them. The Dimmer is now in linking mode.

Using the Lightwave App, select the relevant device from the 'add device' section (the App instructions will guide you through this). The LED on the Dimmer will flash blue to confirm that it is linked to the App.



Hold



4 Other Dimmer functions

Unlinking the Dimmer

To unlink the Dimmer and clear the memory, enter linking mode by holding down both on/off buttons until the LED flashes red. Release the buttons, then hold the off button until the LED flashes rapidly to confirm that the memory has been cleared. On clearing the memory, automatic calibration will be initiated.

Locking the Dimmer

The Dimmer can be 'locked' using the App so that the manual buttons will not operate it. If it is locked on, then the Dimmer will not turn off manually. A locked dimmer is signified by a slow flashing magenta LED. To lock / unlock the Dimmer, press the 'lock' button on the Smartphone App. Clearing the memory will remove the lock.

Changing the colour of the indicator LED

The colour of the LED indicator lights on the Dimmer can be changed or the LEDs dimmed using the Lightwave App. See the App for more details.

Multi-way switching

Lightwave Dimmers perform 2-way or multi-way switching wirelessly. This means that they can be wired into a circuit using only a live in and switched live out, and communication between them is carried out via wireless RF frequency. Dimmers can be linked to perform multi-way switching using the 'group' automation feature on the Lightwave App (see the App for more details).

Firmware updates

Firmware updates are over the air software improvements that keep your device up to date as well as providing new features. Updates can be approved from the App before being implemented, and generally take 2-5 minutes. The LED will flash cyan in colour during an update. Please do not interrupt the process during this time.

Error reporting

A permanently flashing red LED indicates that a software or hardware error has been encountered. Press the on/off button to reset the indicator LED. If the error light persists, please contact Lightwave support via www.lightwaverf.com/support.

Follow Lightwave

Visit www.lightwaverf.com to discover the latest product updates and find out what else you can do with Lightwave products.

For advice, troubleshooting and technical support, please see www.lightwaverf.com/support