

UltraSieve[®] MIDI


Patent nr: NL 1026138 / EP 1593305 / US 2005/0258188-A1



Instruction Manual

Introduction


The UltraSieve is a pre-filter to filter waste solids from the water. This technique is based upon the sieve-bend. A sieve-bend consists of hundreds of sharp stainless steel profile wires with very small slot openings where the water can pass through but the solids remain on the sieve bend (see picture below).

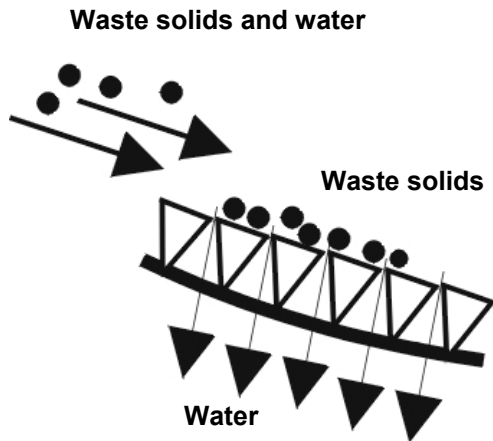

In practice it works as follows:

The water enters at **A** and will go upwards and fall over the “auto-adjustable” dam (**B**). The water goes through the sieve bend (**C**) and the waste solids will slowly go down to the waste area (**D**). At the waste outlet of the filter (**E**) you can put a sliding valve to easily wash away the waste with water. When the water in the tank underneath the sieve-bend is not pumped away fast enough the water will raise which makes the floating system (**F & B**) go up to reduce the incoming water flow. The pump will be connected to the tank connector (**G**).

An extra advantage of this pre-filter is that the water will be provided with additional oxygen, when it passes through the slots.

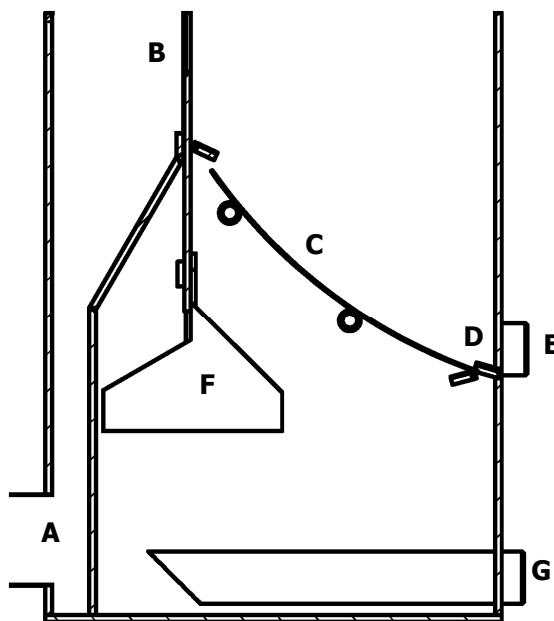

UltraSieve Installation instructions


Please read these instructions prior to installation.

If you have any questions after reading this manual, please contact your UltraSieve dealer before you start installing to prevent mistakes.

The UltraSieve can be installed in 2 ways:

1. Gravity (pond fed), equal to the water level in a direct connection with the bottom drain (and/or skimmer)
2. Pump fed, above the ground with a free flow back to the pond.

A schematic drawing is shown below of a suggested gravity installation


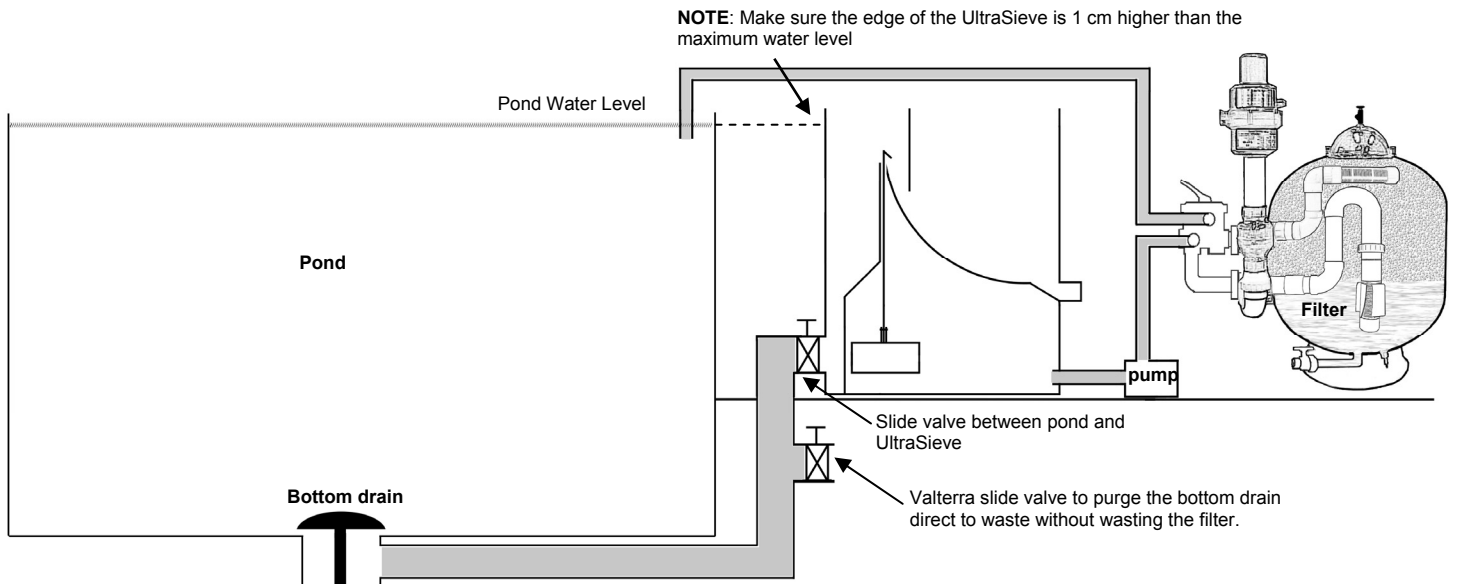


Ensure the UltraSieve is sited on an even level surface. **The upper edge of the UltraSieve must be 1 cm above the maximum water level.** Between the bottom drain and the UltraSieve we strongly advise you to use a slide valve to separate the UltraSieve from the pond when necessary. The inlet of the UltraSieve is made of 110mm Polypropylene pipe so you can use a PVC push fit fitting. Since the UltraSieve is made of Polypropylene you cannot make glue connections. **Note: Do not install the UltraSieve directly in the soil! Make sure there is always enough room around the unit.** When there is too much pressure on the walls the unit will not function correctly.

Pump connection


The pump outlet is made of a 2" PP male threaded connection. The UltraSieve is supplied with a PVC fitting 2" fem. thread x 63mm solvent. Please use Teflon tape or Loctite 5331 for the threaded connection. Maximum pump speed is about 12m³/hour.

The pump connection comes with a long suction pipe which draws the water from under the float to prevent air suction.

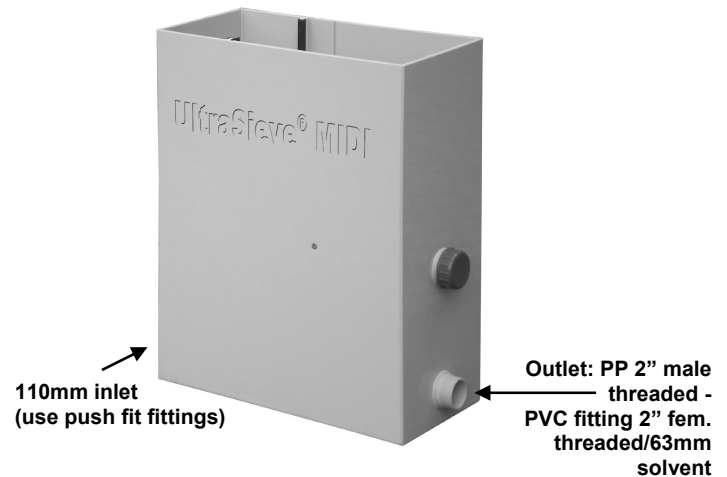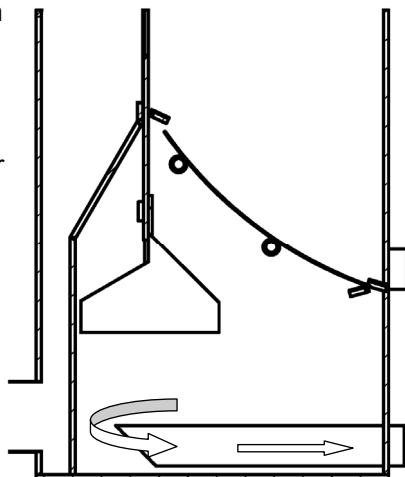


The auto-adjustable dam with float


The UltraSieve has a floating system to prevent the water in the area under the sieve from rising above the level of the sieve for low speed pumps and also to prevent the water from going too low to be primed for high speed pumps. The floating device can be installed at 3 different levels. You only have to do this once when installing the UltraSieve or when you change pumps

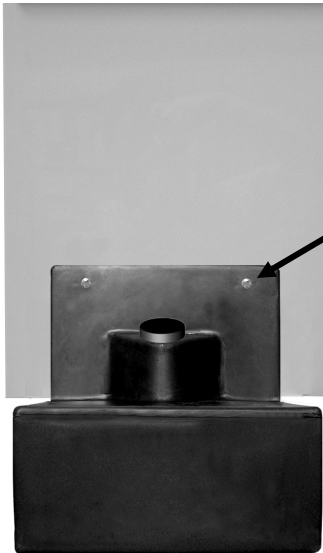

Stainless Steel bolts (10 millimeter) to adjust the height of the float

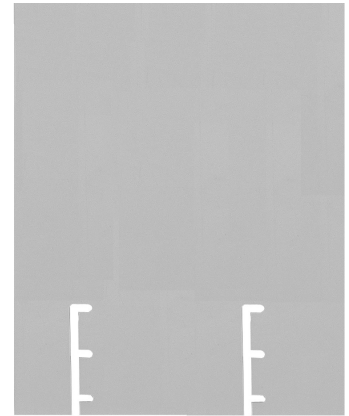


Procedure: loosen the 10mm bolts a little bit in order to move the floating device. **Note:** do not remove the bolts completely, a few millimetres is enough!
Push the floating device to the left in order to move it in the vertical opening. Choose one of the 3 levels and push the device to the right position. Fasten the bolts again. You're done.

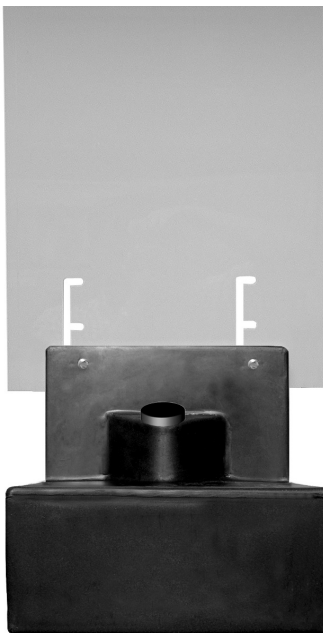

Level 1

This level gives the dam its maximum length, suitable for **pump speeds to $\pm 6\text{m}^3/\text{hour}$** .

The maximum length of the dam prevents the water level underneath the sieve from going too high for low speed pumps.

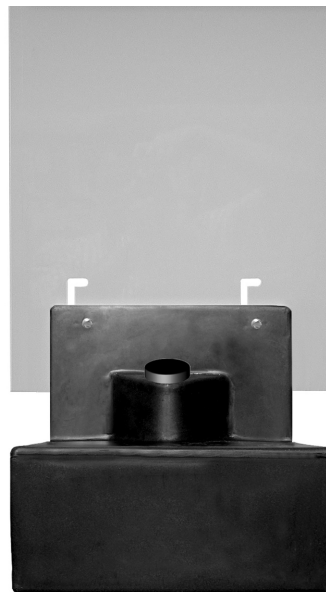

Level 2

This level gives the dam its middle length, suitable for **pump speeds to $\pm 12\text{m}^3/\text{hour}$** .

This length prevents the water from flooding the screen but also from going too low which causes priming problems.




Level 3

This level gives the dam its minimum length, suitable for **pump speeds to $\pm 12\text{m}^3/\text{hour}$** .

The minimum length of the dam is to have a high water level under the screen to prevent a high speed pump from priming air.

Filling the floating device


Fill the unit with 1 litre of water for counter weight and put the plug in the hole.

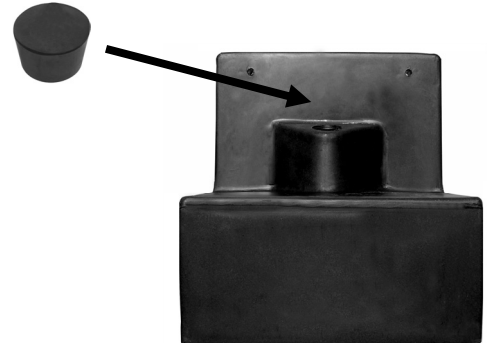

Pump fed application


When you want to use the UltraSieve above the water level with a submersible pump from the pond you must connect the pump hose to the 110mm inlet. The pump outlet will then be used as the return flow to the pond. When this outlet is too small in case of the pump speed you need to enlarge this outlet.

In case the floating device is reducing the incoming water too much because the adjustable dam is floating too high you can remove the floating device completely. In this case you will always have the maximum capacity.

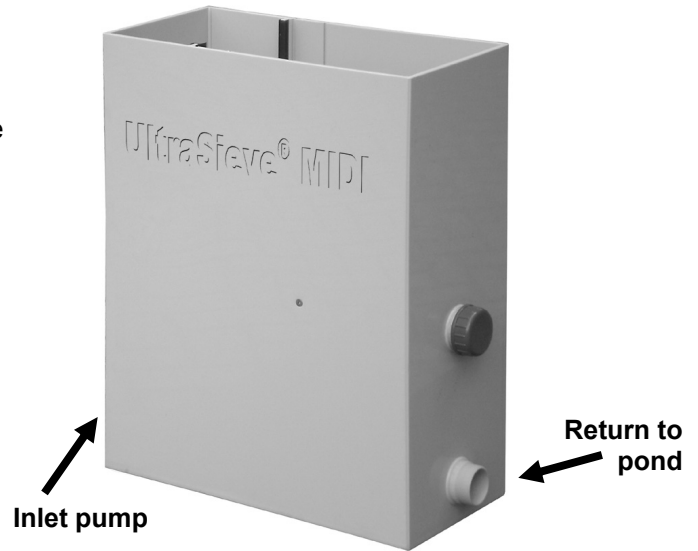

Waste outlet

This 2" male threaded outlet is equipped with a 2" end cap with rubber gasket. (See left picture). You can mount a slide valve (available at your UltraSieve dealer) on this outlet (see right picture) for easy clearance of the waste.

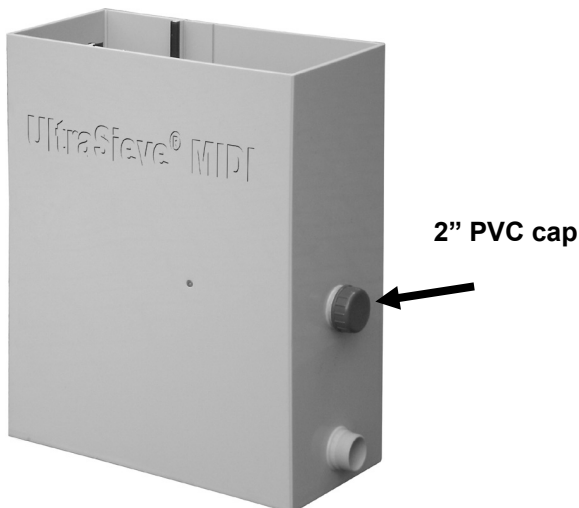

Maintenance


It is advisable to monitor the UltraSieve every day. Maintenance is very easy because of the waste outlet. In fact maintenance is about two operations:

1. To remove the waste that is on the surface of the sieve (every day).
 2. To remove the waste that has gone into the profile wires of the sieve (only when necessary).
1. Removing the waste that is on the surface of the sieve is very easy by opening the waste outlet and to rinse the waste away with a normal hose pipe. Another method to have water run over the screen is pushing down the adjustable dam which will flood the screen with water. When the adjustable dam is in a low position already because of the pump speed you can pull up the dam for a short while and push it back downwards again.
 2. To remove the waste that has gone into the profile wires of the sieve you will need a hose pipe with a powerful spray nozzle or a high-pressure machine. For this way of cleaning you have to place the sieve in an upright position or take the sieve out of the unit.

After a certain period of time the sieve can get clogged ("fat") and this will make it more difficult for the water to go through. You can clean the sieve with i.e. alcohol.

Note: when you use the sieve for the very first time the surface of the sieve can also be covered with a very thin film. Make sure you will clean the sieve very thorough with alcohol before using it

Technical Specifications

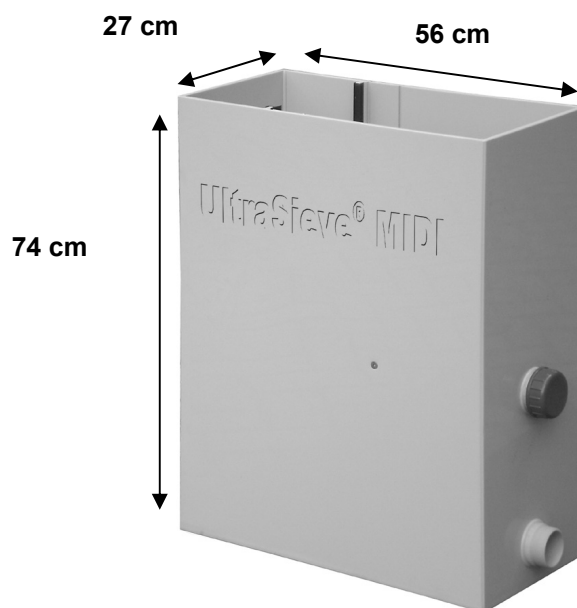

	SIZE	MATERIAL	EXTRA INFO
HOUSING	56 x 27 x 74 cm	6mm Polypropylene	
INLET	110 mm spigot	Polypropylene	1 x 110 mm inlet
OUTLET	2" male thread	Polypropylene	Comes with PVC fitting 2" x 63mm
WASTE	2" male thread	Polypropylene	Comes with 2" PVC end cap
SIEVE BEND	240 x 400 mm	Stainless Steel 304	300 micron
CAPACITY			±12 m ³ /h
WEIGHT			±13 Kg. including sieve bend