

Datalogger Thermometer TC0304

Instruction Manual



**Perfect
Prime**

www.perfectprime.com



CONTENTS

1. Introduction	2
2. Specifications	2 - 4
3. Symbol Definition and Button Location	5 - 6
4. Operation Instructions	7 - 11
4.1 Power-Up & turn ON/OFF backlight	7
4.2 Connecting the Thermocouples	7
4.3 Selecting the Temperature Scale	7
4.4 Data-Hold Operation	7
4.5 T1-T2 Operation	8
4.6 Relative Operation	8
4.7 MAX/MIN Operation	8 - 9
4.8 Auto Power Off	9
4.9 Low Battery Condition	9
4.10 Calibration Point	10
4.11 Digital Output	10 - 11



1. INTRODUCTION/ 2. SPECIFICATIONS

INTRODUCTION

The TC0304 is a 4 channel digital thermometer for use with any K-type thermocouple as temperature sensor. Temperature indication follows National Bureau of Standards and IEC584 temperature/voltage table for K-type thermocouples. It uses RS232 interface to perform bi-directional communication with PC.

SPECIFICATIONS

NUMERICAL DISPLAY:

4 digital Liquid Crystal Display per channel.

MEASUREMENT RANGE:

-200°C ~ 1370°C -328°F ~ 2498°F

RESOLUTION:

-200°C~ 200°C 0.1°C; 200°C ~1370°C 1°C

-200°F~ 200°F 0.1°F; else 1°F

MAXIMUM VOLTAGE AT THERMOCOUPLE INPUT:

60V DC, or 24Vrms AC

ENVIRONMENTAL:

- Operating Temperature and Humidity: 0°C ~50°C (32°F ~ 122°F) ;
0 ~ 80% RH
- Storage Temperature and Humidity: -10°C to 60°C (14°F ~ 140°F);
0 ~ 80% RH
- Altitude up to 2000 meters.



2. SPECIFICATIONS

ACCURACY: AT (23 ± 5°C)

Range	Accuracy
-200°C ~ 200°C	±(0.2% reading + 1°C)
200°C ~ 400°C	±(0.5% reading + 1°C)
400°C~1370°C	±(0.2% reading + 1°C)
-328°F ~ -200°F	±(0.5% reading + 2°F)
-200°F ~ 200°F	±(0.2% reading + 2°F)
200°F ~ 2498°F	±(0.3% reading + 2°F)

TEMPERATURE COEFFICIENT:

For ambient temperatures from 0°C ~ 18°C and 28°C ~ 50°C, for each °C ambient below 18°C or above 28°C add the following tolerance into the accuracy spec. 0.01% of reading + 0.03°C (0.01% of reading + 0.06°F)

NOTE:

The basic accuracy Specification does not include the error of the probe. Please refer to the probe accuracy specification for additional details.

ELECTROMAGNETIC COMPATIBILITY:

Total accuracy=specified accuracy ± 2°C(3.6°F)

SAMPLE RATE:

3 seconds per period



2. SPECIFICATIONS

DIMENSION:

184×64×30mm

WEIGHT:

250g Approx

ACCESSORY:

K Type Bead Probe×2, Battery, Carrying Case, Instruction Menu

POWER REQUIREMENT:

9 Volt Battery

BATTERY LIFE:

Approx. 100hrs with alkaline battery

AC ADAPTER:

9VDC ±15% 100mA

PLUG DIAMETER:


3.5mm×1.35mm

OPTION:

AC Adapter, Software program, RS-232 Connection Cable



3. SYMBOL DEFINITION AND BUTTON LOCATION

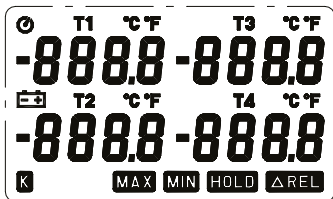

 : This indicates that the minus temperature is sensed.

°C °F : Centigrade and Fahrenheit indication.

 : Thermocouple Type Indication.

 : The Maximum value is now being displayed.


 : The Minimum value is now being displayed.


 : This indicates auto power off is enabled.

 : This indicates that the display data is being held.


 : The Battery is not sufficient for proper operation.

T1, T2
T3, T4 : It indicates the value below is T1, T2, T3, T4 Temperature sensor.

 : It indicates the value below is T1-T2 sensor.

 : The reading is now under relative mode.

3. SYMBOL DEFINITION AND BUTTON LOCATION

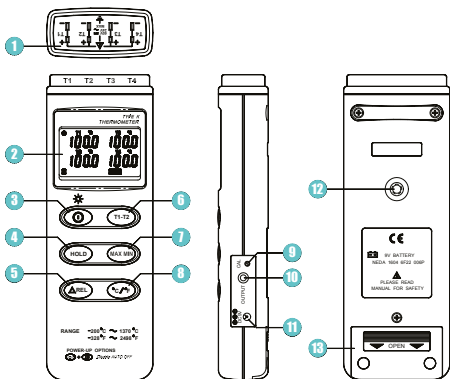

① K type temperature sensor T1 to T4 input connector

② LCD display

③ ON/OFF & Backlight button

④ Hold button

⑤ Relative button

⑥ T1-T2 button

⑦ MAX MIN function control button

⑧ °C, °F control button

⑨ Offset calibration screw

⑩ Digital output connector

⑪ AC power adapter connector

⑫ Tripod connector

⑬ Battery cabinet cover



4. OPERATION INSTRUCTIONS

4.1 POWER-UP & TURN ON/OFF BACKLIGHT

The  key turns the Thermometer ON or OFF and backlight ON & OFF.

Press it once to turn on the Thermometer.

Press it again for moment to turn ON or OFF backlight.

Press and hold this button 3 second to turn OFF the power.

4.2 CONNECTING THE THERMOCOUPLES

For measurement, plug the thermocouple into the input connectors.

4.3 SELECTING THE TEMPERATURE SCALE

When the meter was powered on, the user may change it to Fahrenheit (°F) by pressing "°C/°F" button and vice versa to Celsius.

4.4 DATA-HOLD OPERATION

The user may hold the present reading and keep it on the display by pressing the "HOLD" button. When the held data is no longer needed, one may release the data-hold operation by pressing "HOLD" button again.

When the meter is under Data Hold operation, the "▲ REL", "MAX MIN", "T1-T2" and "°C/°F" button are disabled. (when you press "▲ REL", "°C/°F", "T1-T2" and "MAX MIN" button in HOLD mode, there will be two continuous beeps)

4. OPERATION INSTRUCTIONS

4.5 T1-T2 OPERATION

When this button is pushed, "1 - 2" will be shown on the upper right hand side LCD display to indicate that the tester is under T1 minus T2 mode.

The temperature difference is shown on the right hand side display as shown in Fig.



4.6 RELATIVE OPERATION

When pressing the "**▲ REL**" button, the meter will memorize the present reading and the difference between the new reading and the memorized data will be shown on the display. Press the "**▲ REL**" button again to exit the Relative operation. When the meter is under relative operation, "**°C/°F**" button is disabled. (When you press "**°C/°F**" button in relative mode, there will be two continuous beep)

4.7 MAX/MIN OPERATION

When pressing the "**MAX MIN**" button the meter will enter the MAX/MIN mode. Under this mode the maximum value, minimum value is kept in the memory simultaneously and updated with every new sample of data.

When the MAX symbol is display, the Maximum is shown on the display.

Press "**MAX MIN**" again, then the MIN symbol is on the display and also the minimum reading.

Press "**MAX MIN**" again, MAX, and MIN will blink together. This means that all these data is updated in the memory and the reading is the present temperature.



4. OPERATION INSTRUCTIONS


One may press "**MAX MIN**" to circulate the display mode among these options.

When the meter is under "**MAX MIN**" operation and "**°C/°F**", "**▲ REL**" button are disabled.(when you press "**°C/°F**", "**▲ REL**" button in "**MAX MIN**" mode, there will be two continuous beep)

To exit the MAX/MIN mode, one may press and hold "**MAX MIN**" for two seconds.

4.8 AUTO POWER OFF

By default, when the meter is powered on, it is under auto power off mode. The meter will power itself off after 30 minutes if no key operation and no RS232 communication combination at power on can disable auto power off.

One may press and hold "**HOLD**" button and then power on the meter and there will be two successive beeps to indicate that auto power off is disabled and the  will not show up.

4.9 LOW BATTERY CONDITION

When the battery voltage is under proper operation requirement, the  symbol will show on the LCD and the battery need to be replaced with new one.

4.10 CALIBRATION POINT

input	Adjust VR	Tolerance
0 °C	VR1	± 0.1 °C
190 °C	VR2	± 0.1 °C
1000 °C	VR3	± 1 °C
1900 °F	VR4	± 1 °F


P.S Normally, performing offset Calibration with thermal stabled ice water through VR1 will give a very good calibration result.

4.11 DIGITAL OUTPUT

The Digital Output is a 9600bps N 81 serial interface.

The RX is a 5V normal high input port.

The TX is a 5V normal high output port.






4. OPERATION INSTRUCTIONS

APPENDIX: THERMOCOUPLE PROBE SPECIFICATION

Model	Range	Tolerances	Description
TP-K01 Bead probe	-50°C, to 200°C,	$\pm 2.2^{\circ}\text{C}$ or $\pm 0.75\%$	with Teflon tape insulation Maximum insulating temperature : 260°C
	-58°F to 392°F	($\pm 3.6^{\circ}\text{C}$ or $\pm 0.75\%$)	

TP-K01:

probe for general condition measurements, especially for complex and hard to reach places.

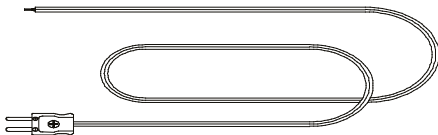

CUSTOMER SERVICE INQUIRIES

Your emails are important to us so we strive to reply all inquiries and emails within **24 hours**. In exceptional cases, we may require more time to respond.

Thank you for your understanding.

For more information about our products and services, please send us an email:

cs@perfectprime.com

For B2B or project-based application, please send an email:

sales@perfectprime.com

FOR MORE INFORMATION ABOUT PERFECTPRIME PLEASE VISIT OUR ABOUT US PAGE AND FEEL FREE TO BROWSE.



Scan QR Code for the Youtube channel for video manual



Scan QR Code for the Product Manual page (Multi-Language available for certain products)



Scan QR Code to register the product for 1 year warranty



HORMES LIMITED
cs@perfectprime.com
G/F UNIT 3, 61 GLENTHORNE ROAD,
LONDON W6 0LJ UNITED KINGDOM
+44 203 7695377

Retailer

Email

Address

Telephone