


USER MANUAL

KB28LRX WINE & BEVERAGE REFRIGERATORS

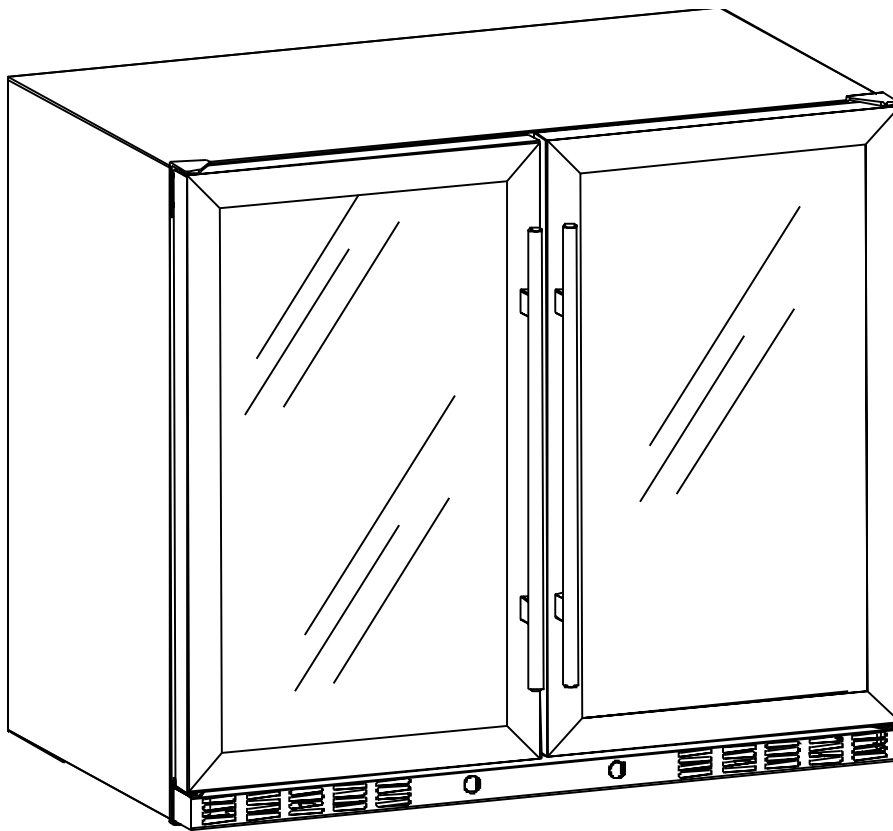

KB28LRX

PLEASE NOTE:

Every time the unit is powered ON, there will be a 6-minute delay for the compressor to start.

COMPRESSOR WINE & BEVERAGE COOLERS



CONTENTS

Congratulations

Congratulations and thank you for choosing our KingsBottle refrigerators. We are sure you will find your new appliance a pleasure to use. Before installing and operating the refrigerator, we recommend that you read through this manual which provides a description of your refrigerator and its functions.

To avoid the risks that are always present when you use an electric appliance, it is important that the appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

We recommend that you keep this instruction booklet for future reference and pass it on to any future owners.

After unpacking the appliance, please inspect it to verify it is not damaged. If in doubt, do not use the appliance but contact us or your local customer care center.

TABLE OF CONTENTS

Chapter	Contents	Page
Part I	Important Safety & Pre-Use Instructions	3
Part II	Diagram & Description of Refrigerator	4
Part III	Installation Instructions	5-6
Part IV	Temperature Setting and Refrigerator Operating	7-8
Part V	Layout & Storage	9
PART VI	Maintenance	10
Part VII	Troubleshooting Guide	11
Part VIII	Technical Data	12
Part IX	Warranty Information	12

PART I IMPORTANT SAFETY INSTRUCTIONS

Please read this user manual carefully and store in a handy place for later reference. The symbols you will see in this booklet have these meanings:



This symbol indicates information concerning your personal safety



This symbol indicates information on how to avoid damaging the appliance



This symbol indicates tips and information about the use of the appliance



This symbol indicates tips and information about economical and ecological use of the appliance



TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY WHEN USING YOUR APPLIANCE, FOLLOW THESE BASIC PRECAUTIONS:

1. Read all instructions before using the refrigerator.
2. DANGER or WARNING: Risk of child entrapment. Child entrapment and suffocation pose a serious problem and children should not be let near the appliance unsupervised. Junked or abandoned appliances are still dangerous... even if they will "just sit in the garage for a few days."
3. Before you throw away your old refrigerator:
 - Take off the door.
 - Dismantle the Shelves into pieces so that children may not climb inside easily.
4. Never allow children to operate, play with, or crawl inside the appliance.



1. The refrigerator must be plugged into its dedicated 220/240V, 50/60Hz AC electrical outlet.
2. The plug must be accessible when the fridge is in position.


3. It is essential that the power point is properly grounded. Consult a qualified electrician if you are unsure.
4. Don't use extension cords or adapter plugs with this fridge.
5. If the power cord is damaged, have it replaced by a qualified service technician.
6. Unplug the fridge before cleaning it, or changing the light bulb to avoid electric shock.
7. Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.
8. Never unplug the fridge by pulling the electrical cord as this may damage it. Grip the plug firmly and pull straight out.
9. Choose a location for your fridge that isn't too cold. The ambient room temperature should be above 50° F.
10. Stand your fridge in a dry place – avoid areas of high moisture or humidity.
11. Don't put the fridge in frosty or unprotected areas like a garage or on the verandah.
12. Keep the fridge out of direct sunlight.
13. Don't locate the fridge near stoves, fires or heaters.
14. Do not store in the vicinity of any other appliance. Do not store near gasoline or any other flammable vapors. The fumes can create an explosion or lead to a fire hazard.
15. When installed correctly, your fridge should:
16. Have adequate space at the back and sides for air circulation. (See Page 5)
17. Be aligned to the surrounding cupboards.
18. Have doors that will self-close from a partially open position
19. Please inspect and clean the filter in front venting grill every month. Failure to clean will void the warranty and increase the running costs.

BEFORE USING YOUR WINE COOLER

- Remove the exterior and interior packing.
- Before connecting the refrigerator to the power source, let it stand upright for approximately 24 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.

FEATURES

PART II DIAGRAM & DESCRIPTION OF REFRIGERATOR

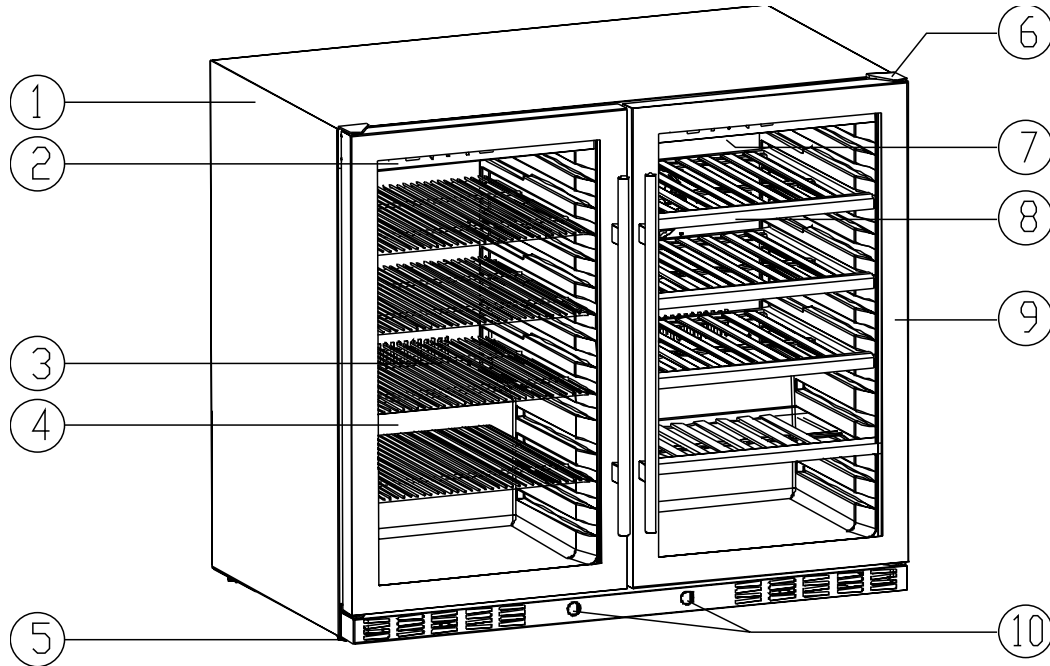

- | | | |
|-----------------------------|---------------------------|--------------|
| 1 Housing | 5 Adjustable stand feet | 9 Glass Door |
| 2 Display and Control Panel | 6 Top door hinge | 10 Lock |
| 3 Sliding metal shelf | 7 Interior Side LED Light | |
| 4 Cabinet | 8 Sliding wooden shelf | |


YOUR REFRIGERATOR ALSO INCLUDES THE FOLLOWING:

- Instruction manual
- Two keys

INSTALLATION

PART III INSTALLATION INSTRUCTIONS

CUTOUT DIMENSION ILLUSTRATED (MINIMUM CAVITY SPACE REQUIRED)

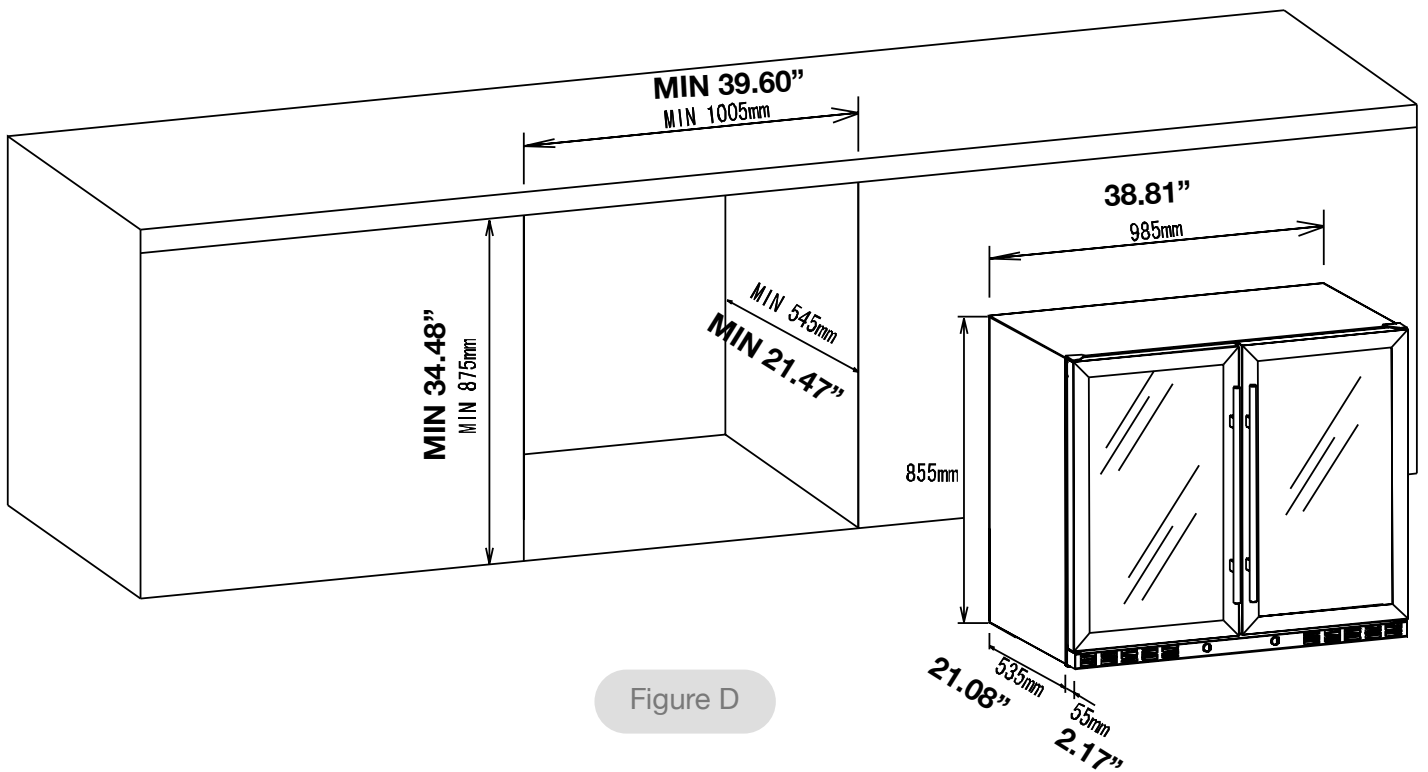

The cutout dimension illustrated in figure (D) allows for door swing and access to the pull-out shelves when installed as a built-in appliance. If installing between frameless cabinets, a 20mm wide filler strip or side panel may be needed on hinge side. The filler strip will act as a spacer between the appliance case and adjacent cabinet door swing.


Failure to allow minimum clearances will void all warranties

INSTALLATION

PART III INSTALLATION INSTRUCTIONS

INSTALLING YOUR WINE FRIDGE

1. Move the unit into its final position.
2. If the unit is not tilting back, minor adjustments can be made to the leveling legs.
3. Compare the alignment of the appliance to the surrounding cupboard. The top of the appliance should be level side to side (see diagram below).
4. If the unit now rocks from one corner to the opposite rear corner, this means that the floor is uneven. You may need to put some

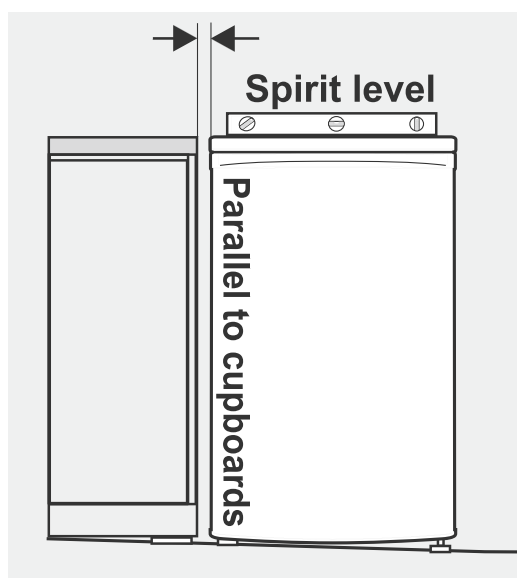

packing under the ridge to the rear of the appliance. You could use thin pieces of a solid material such as a thin board, vinyl floor tiles or laminate.

5. You may now need to fine tune the installation by repeating steps 2, 3 and 4.
6. Wipe off any dust that has accumulated during shipping and clean following the directions in Part VI (Care & Maintenance)
7. Plug the appliance into the power point. Don't use a double adaptor or extension cord.
8. It is recommended that you allow the unit to rest an hour or two before you put any wine bottles in it. This will confirm that it is operating correctly and make the conditions appropriate for wine storage.

Congratulations! You have successfully installed your refrigerator.

DOOR LOCK

This unit comes with an optional key lock. The keys are located inside the plastic bag that contains the user manual. To lock the door, simply insert the key into the lock and turn clockwise making sure the metal pin is engaged completely. Then remove the key and place it in a secure place for safekeeping. To unlock the door, insert the key into the lock and turn counterclockwise.


PART IV

OPERATING YOUR REFRIGERATOR

LEFT SIDE



RIGHT SIDE

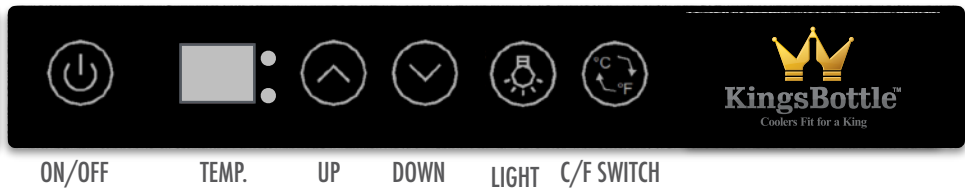

Each refrigerator includes an operating panel on the front of the unit. This operating panel includes several features to operate and control the temperature of both the LEFT and RIGHT zones of the refrigerator.

The operating panel includes the following features:

ON/OFF: Turns the refrigerator power on or off.

TEMP. Adjusts and displays, via LED, the desired temperature and the actual temperature.

LIGHT: Turns the interior refrigerator light on or off.

C/F SWITCH: Switch between °C and °F

SETTING THE TEMPERATURE CONTROL

1. Make sure the power cord is connected to a properly grounded outlet.
2. Turn Power ON.
3. Press the “C/F SWITCH” button to choose and display Fahrenheit or Celsius temperature.
4. Set the temperature as you desire by pushing the UP or DOWN button.

NOTE: The desired temperatures may fluctuate depending on whether the interior light is ON or OFF, the ambient temperature, the location of the unit and the orientation of the bottles. The display is just a guide, be guided by how cold your drinks are at consumption. Remember units go into defrost mode, and this will show a higher display, it's only for short periods and doesn't have time to affect drink temperature. In general, once the unit has settled, it will keep products within 5°F (2°C) of the set temp easily in temperatures up to and beyond 100°F (38°C).

CAUTION

1. In the event of a power interruption, all previous temperature settings will be automatically saved and each compartment will return to the previous temperature setting.
2. If the unit is unplugged, loses power, or is turned off, there will be a 6 minutes delay for the compressor to restart after the unit is powered ON.
3. When you use the beverage fridge. for the first time or restart the beverage fridge after having been shut off for a long time, there will be a few degrees variance between the temperature you select and the one indicated on the LED readout for the first few hours of operation. After a few hours of operation, the temperature will normalize to the displayed temperature.

OPERATION

ERROR CODE AND ALARM

Code	Description	Solution
E1	When the temp. In the UPPER zone is 4°F (2°C) higher than the LOWER zone, E1 displays on the panel.	With the temp. changes, and temp. in the UPPER zone is lower than the LOWER zone, E1 will disappear automatically. So, just wait for about one hour and check again.
F1	When the evaporator temperature is lower than 0°F (-18°C) F1 displays on the panel F1 meaning the fridge is at defrosting mode. During DEFROSTING period, evaporator fan is operating, but the compressor stopped. After evaporator temp. is higher than 39°F (4°C), F1 will disappear	It's normal; nothing needs to be done. Wait for 3 hours and check again. Or, turn OFF the power, open the door and wait for 3 hours, then check again.
F2	If the compressor keeps operating continuously for over 8 hours, the fridge will automatically enter DEFROSTING mode and F2 displays on the panel F2 meaning the fridge is at defrosting mode. During DEFROSTING period, evaporator fan is operating, but the compressor stopped. F2 will disappear after 20 minutes.	It's normal; nothing needs to be done. Wait for 30 minutes and check again.
C1	C1 displaying on the panel means the sensor in the UPPER zone is open-circuit. Compressor stop operating and no cooling	Need an engineer to check Socket/plug with UP mark in PCB is badly connected. The sensor is damaged, need to replace it Repair or replace the PCB
C2	C2 displaying on the panel means the sensor in the LOWER zone is open-circuit. Compressor stop operating and no cooling * This does not apply to SINGLE zone models	Need an engineer to check Socket/plug with DOWN mark in PCB is badly connected The sensor is damaged, need to replace it Repair or replace the PCB
C3	C3 displaying on the panel means evaporator sensor is open-circuit. Compressor stops operating and no cooling.	Need an engineer to check Socket/plug with PTC mark in PCB is badly connected The sensor is damaged, need to replace it Repair or replace the PCB
U1	U1 displaying on the panel means a sensor which is in the UPPER zone is short-circuited. Compressor stops operating and no cooling.	Need an engineer to check The sensor is damaged, need to replace the sensor which is connected to UP socket/plugin PCB Repair or replace the PCB
U2	U2 displaying on the panel means a sensor which is in the LOWER zone is short-circuited. Compressor stop operating and no cooling * This does not apply to SINGLE zone models	Need an engineer to check The sensor is damaged, need to replace the sensor which is connected to DOWN socket/plugin PCB Repair or replace the PCB
U3	U3 displaying on the panel means evaporator sensor is short-circuited. Compressor stops operating and no cooling.	Need an engineer to check The sensor is damaged, need to replace the sensor which is connected to PTC socket/plugin PCB Repair or replace the PCB
No Code	After the temp. is lower than 32°F (0°C) or higher than 69°F (20°C), the buzzer will alarm and remind the user needs to pay attention.	Normal, nothing needs to be done.

PART VI CARE AND MAINTENANCE

CLEANING YOUR BEVERAGE FRIDGE



BEFORE CLEANING: Turn off the power, unplug the appliance, and remove all items including all the shelves.

- Wash the inside surfaces with warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda with a quart of water.
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wash the outside cabinet with warm water and a mild liquid detergent. Rinse well and wipe dry with a clean, soft cloth.
- After installation, we recommend that owners apply a thin layer of Olive Oil with a clean rag, to all exposed Stainless Steel areas. This should then be polished in and buffed off with another clean rag to a non-oily finish. This process will aid protection against dirt and other corrosive contaminants, by providing a temporary food-safe shield. The Olive Oil layer also makes later polishing and removal of fingerprints easier. This process should be repeated frequently every 3-4 months. ALL stainless steel can rust; it is a myth that stainless steel doesn't rust.

POWER FAILURE

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

VACATION TIME

Short vacations: You may leave the beverage fridge operating during vacations of less than three weeks.

Long vacations: If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent mold growth, leave the door open slightly, blocking it open if necessary.

MOVING YOUR BEVERAGE COOLER

1. Remove all items.
2. Securely tape down all loose items (shelves) inside your appliance.
3. Turn the adjustable leg up to the base to avoid damage.
4. Tape the door shut.
5. Be sure the appliance stays secure in the upright position during transportation. Also, protect the outside of the appliance with a blanket or similar item.

ENERGY SAVING TIPS

- The beverage fridge should be located in the coolest area of the room, away from heat-producing appliances, and away from direct sunlight. Ventilation at the rear also helps a lot with energy usage, to create a positive air flow where possible, although with this range they are designed to be fully built in.
- When you are not using fridge during weekdays etc. it is recommended to set the temp at a higher level, so set at 64°F (18°C) during periods of non-usage, this will not only mean less run time, it will also keep drinks at a temp that won't get them spoiled. It saves energy also which these days are a growing concern for most households.
- Keep the fridge stocked; an empty fridge will run longer, believe it or not.

TROUBLESHOOTING GUIDE

PART VII TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	Solution
Refrigerator does not operate	Not plugged in The appliance is turned OFF at the control panel The circuit breaker has tripped, or a fuse has blown out	Press ON/OFF Check and make sure the power plug is well connected Ask an engineer for help
Refrigerator is not cold enough; can not cool down to the preset temp.	The compressor does not start	ask an engineer for help / check the connection of the compressor
	Compressor self-protected and has stopped operating	The ambient temperature is too high (over 38°C) The air venting is not smooth, check that the air duct is not blocked Fan operates slowly or is faulty and has stopped functioning. The door is not closed completely, or the door opened too long The compressor, or its components are faulty.
	Fans stop working or operate at low speed	Ask an engineer for help. Power the refrigerator ON and OFF. Check the fan and whether the voltage is normal. If the voltage is normal, then the fan could be damaged.
	Evaporator ices up	Turn OFF the refrigerator for one hour and open the door. The ice on the evaporator will melt. Check the door seal for any air gaps.
	The door is not closed properly	Check the door lock, shelves, or other objects; make sure the door is well closed. Check the rubber seal for any air gaps. Check the door hinges; make sure they are not loose.
	Condenser is dusty	Wash and clean the condenser
	Cooling system faulty (Gas leakage or blockage)	Ask an engineer for help
Compressor starts and stops frequently	The door gasket does not seal properly.	Use low heat on a hair dryer to make the door seal take shape.
	The sensor connection is wrong.	Read the wiring diagram to make the correct connection of the sensor.
	The sensor is faulty.	Replace with a new sensor
	The door is opened too often.	Reduce the times/frequency of door openings.
The light does not work.	Not plugged in, or the light button is "OFF." The light itself is faulty.	Check and make sure the light button is ON, or ask an engineer for help.
The Refrigerator seems to make too much noise.	The stand feet is not leveling; vibrations lead to noise	Adjust the stand feet and ensure they are leveled.
	Copper pipe hits other objects and makes noise	Gently adjust the position of the pipe.
	When the compressor shuts down or starts, it is normal for noise due to vibrations to be generated by the internal moving parts due to inertia. A liquid plumbing noise may come from the flow of the refrigerators gases, which is normal. As each cycle ends, you may hear gurgling sounds.	Take no action Take no action
The door will not close properly.	The door is blocked by the door lock, shelves, or other objects.	Remove the barrier
	Door sealing rubber is deformed	Repair or replace the rubber seal
	Door hinges are loose.	Adjust and fasten the hinges.
Ice up	Outlet/suction outlet blockage	Remove the barrier
	Fans stop working or operate at low speed.	Ask an engineer for help. Power the refrigerator ON and OFF. Check the fan and the voltage. If the voltage is normal, the fan may be damaged.
	The door gasket does not seal properly, or door is opened too often	Use low heat on a hair dryer to make the door seal take shape.
	Gas leakage or cooling system blockage	Ask an engineer for help
External cabinet seems too hot	Ambient temperature is too high, or direct sunshine	Operating conditions need to be improved
	Front grill outlet/suction outlet blockage	Remove the barrier
	Fans stop working or low speed operating	Ask an engineer for help, power on the refrigerator, check the fan whether the voltage is normal or not. If the voltage is normal, the fan could be damaged.
Water drop on glass door	Ambient humidity is high	Use a soft cloth to clean the water
	The door is opened too often	Reduce the times/frequency of door opening.
	The door gasket does not seal properly	Use low heat on a hair dryer to make the door seal take shape.

TECHNICAL DATA

PART X TECHNICAL DATA

MODEL NO.	KB28LRX
VOLUME	110 Liter*2
TYPE OF COOLING	compressor with air-circulated fan cooling
CLIMATE TYPE	N
ELECTRICITY PROTECTION GRADE	I
NOMINAL VOLTAGE/FREQUENCY	220/240V/50-60HZ
RATED CURRENT	3.0 A
RATED POWER(W)	200W
AMBIENT TEMPERATURE	32 - 100 °F (0 -38°C)
TEMPERATURE RANGE	34-64 °F (1 -18°C)
NET WEIGHT	181 lb (82 kg)
GROSS WEIGHT (INC. PALLET)	225 lbs (102 KGS)
DIMENSION	985W x590D x 860H mm

PART IX WARRANTY INFORMATION

Registering online is quick and easy!

<https://kingsbottle.com.au/apps/product-registration>

Please speak to your retailer before calling us if you did not purchase your refrigerator directly from KingsBottle.

WHO IS COVERED: This warranty is extended only to the original end-user purchaser or the person receiving the product as a gift, and shall not be extended to any other person or transferee.

LIMITED WARRANTY – If your refrigerator is not operating properly, KingsBottle reserves the right to repair or replace the refrigerator. KingsBottle may request the consumer to contact a local refrigeration company to service the refrigerator. All cost for labor and materials is covered for 2-year from the date of receipt. If KingsBottle deems the unit not repairable, KingsBottle will use the value of your original order toward a replacement (Any replacement unit will follow the warranty terms of the initial purchase). For customer service, please e-mail us via service@kingsbottle.com.au.

THE LIMITED WARRANTY DOES NOT COVER: Damage due to such things as an accident, misuse, abuse, mishandling, neglect, unauthorized repair or any other cause beyond the control of the seller whether similar or dissimilar to the foregoing. Purchaser understands and acknowledges that the goods sold here are WINE & BEVERAGE COOLERS, which house beer and other wines. Purchaser assumes all the risk of using these units, including the risk of spoilage, humidity variations, temperature variations, leaks, fires, water damage, mold, mildew, dryness and similar perils that may occur.

SPECIAL NOTE: Warranty is only honored for the unit which is purchased and used in Australia. And, if your product was purchased at any 3rd party retailer and not directly from KingsBottle, we do not offer an extended warranty policy. You MUST contact the retailer of purchase directly. In the event your retailer does not offer an extended warranty plan, we recommend you contact a third party warranty provider. However, regardless of point of purchase, all KingsBottle fridges are backed by a TWO YEAR manufacturer's warranty from date of sale.

COMPRESSOR WINE & BEVERAGE COOLERS



