

Wireless Resistance Temperature Detector

R718B

User Manual

Table of Content

1. Introduction.....	2
2. Appearance.....	3
3. Main Features.....	3
4. Set up Instruction.....	4
5. Data Report.....	5
6. Installation.....	7
7. Important Maintenance Instruction.....	7

1. Introduction

The R718B series equipment is the temperature detection based on the LoRaWAN open protocol. The external PT1000 measures the temperature and the device is compatible with the LoRaWAN protocol.

LoRa Wireless Technology:

LoRa is a wireless communication technology dedicated to long distance and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation method greatly increases to expand the communication distance. Widely used in long-distance, low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. Main features include small size, low power consumption, transmission distance, anti-interference ability and so on.

LoRaWAN:

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

2. Appearance

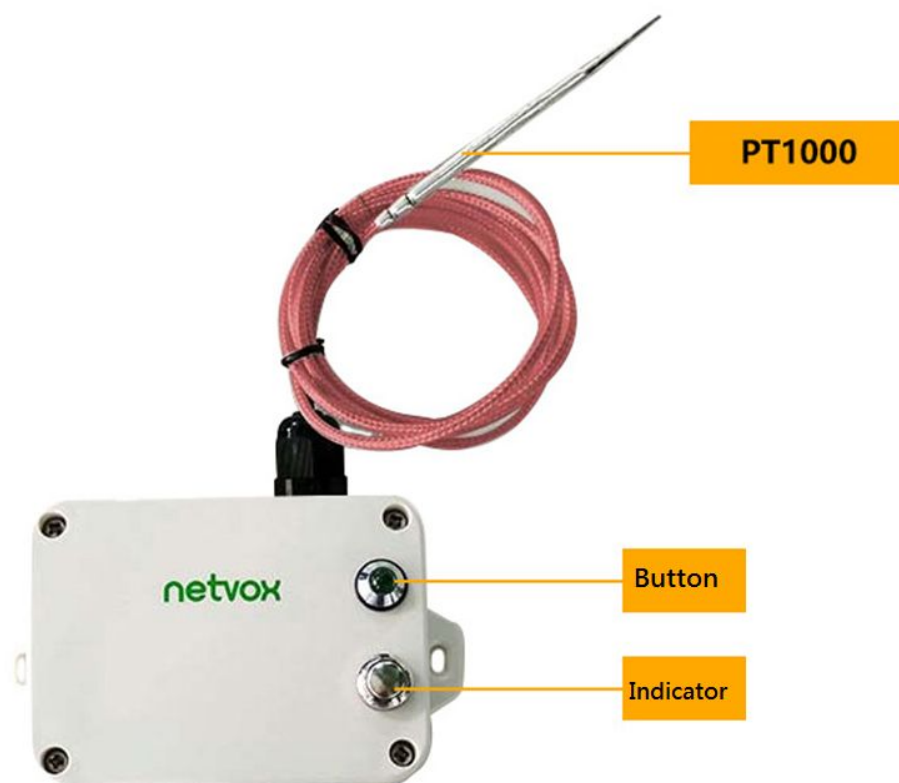


Fig.1 R718 Appearance

3. Main Features

- Adopt SX1276 LoRa wireless communication module
- 2 ER14505 battery AA SIZE (3.6V / section) parallel power supply
- Temperature check
- The base is attached with a magnet that can be attached to a ferrous object
- Protection class IP65
- Compatible with LoRaWAN™ Class A
- Frequency hopping spread spectrum
- Configuration parameters can be configured via a third-party software platform, data can be read and alerts can be set via SMS text and email (optional)
- Applicable to third-party platforms: Actility/ThingPark, TTN, MyDevices/Cayenne
- Low power consumption and long battery life

Note*:

Battery life is determined by the sensor reporting frequency and other variables, please refer to

http://www.netvox.com.tw/electric/electric_calc.html

On this website, users can find battery life of various models in different configurations.

4.Set up Instruction

On/Off

Power on	Insert batteries. (users may need a flat blade screwdriver to open)
Turn on	Press and hold the function key for 3 seconds till the green indicator flashes once.
Turn off (Restore to factory setting)	Press and hold the function key for 5 seconds till green indicator flashes for 20 times.
Power off	Remove Batteries.
Note:	<ol style="list-style-type: none"> 1. Remove and insert the battery; the device is at off state by default. Press and hold the function key for 3 seconds till the green indicator flashes once to turn on the device. 2. On/off interval is suggested to be about 10 seconds to avoid the interference of capacitor inductance and other energy storage components. 3. At 1st -5th second after power on, the device will be in engineering test mode.

Network Joining

Never joined the network	<p>Turn on the device to search the network.</p> <p>The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p>
Had joined the network (not at factory setting mode)	<p>Turn on the device to search the previous network.</p> <p>The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p>
Fail to join the network (when the device is on)	<p>First two mins: wake up every 15 seconds to send request.</p> <p>After two mins: enter sleeping mode and wake up every 15 minutes to send request.</p> <p>Note: Suggest to remove batteries if the device is not used to save power.</p> <p>Suggest to check the device verification information on the gateway or consult your platform server provider.</p>

Function Key

Press and hold for 5 seconds	<p>Restore to factory setting / Turn off</p> <p>The green indicator flashes for 20 times: success</p> <p>The green indicator remains off: fail</p>
Press once	<p>The device is in the network: green indicator flashes once and sends a report</p> <p>The device is not in the network: green indicator remains off</p>

Sleeping Mode

The device is on and in the network	<p>Sleeping period: Min Interval.</p> <p>When the reportchange exceeds setting value or the state changes: send a data report according to Min Interval.</p>
The device is on but not in the network	<p>First two mins: wake up every 15 seconds to send request.</p> <p>After two mins: enter sleeping mode and wake up every 15 minutes to send request.</p> <p>Note: Suggest to remove batteries if the device is not used.</p> <p>Suggest to check device verification on gateway.</p>

Low Voltage Warning

Low Voltage	3.2V
-------------	------

5. Data Report

The device will immediately send a version package Report and a report data with temperature and voltage values when the device is powered on. The device sends data in the default configuration before any configuration is done.

Maximum time: Max Interval

Minimum time: Min Interval (by default, the current voltage value and the temperature value are detected every Min Interval)

Default reportchange: batteryvoltagechange ---- 0x01(0.1V)

Temperaturechange ---- 0x01 (0.1° C)

Note: The device send data cycle has been programmed to be correct.

The interval between two reports must be the minimum time

R718B default Max Interval = 60min, Min Interval = 60min

(if there is special custom shipment, the setting is changed according to customer requirements)

The data can be decoded by the Netvox LoraWAN Application Command document and <http://www.netvox.com.cn:8888/page/index>

Report configuration example:

Description	Device	CmdID	DeviceType	NetvoxPayloadData					
ConfigReportReq	R718B	0x01	0x95	MinTime(2 bytes Unit:s)	MaxTime(2bytes Unit:s)	BatteryChange (1byte Unit:0.1v)	Temperature change (2byte Unit:0.1°C)	Reserved	
ConfigReportRsp		0x81		Status(0x00 _success)	Reserved (8Bytes,Fixed 0x00)				
ReadConfigReportReq		0x02		Reserved (9Bytes,Fixed 0x00)					
ReadConfigReportRsp		0x82		MinTime(2 bytes Unit:s)	MaxTime(2bytes Unit:s)	BatteryChange (1byte Unit:0.1v)	Temperature change (2byte Unit:0.1°C)	Reserved	

(1) Configure device parameters MinTime = 1min, MaxTime = 1min, BatteryChange = 0.1v, Temperaturechange = 0.1° C

Downlink: 0195003C003C0100010000

Devices return:

81950000000000000000000000000000 (configuration is successful)

81950100000000000000000000000000 (configuration is failed)

(2) Read device parameters

Downlink: 02950000000000000000000000000000


Devices return:

8295003C003C0100010000 (current device configuration parameters)

Report cycle configuration:


Min Interval (Unit:second)	Max Interval (Unit:second)	Reportable Change	Current Change ≥ Reportable Change	Current Change < Reportable Change
Any number between 1~65535	Any number between 1~65535	Can not be 0.	Report per Min Interval	Report per Max Interval

Example#1 based on MinTime = 1 Hour, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange=0.1V

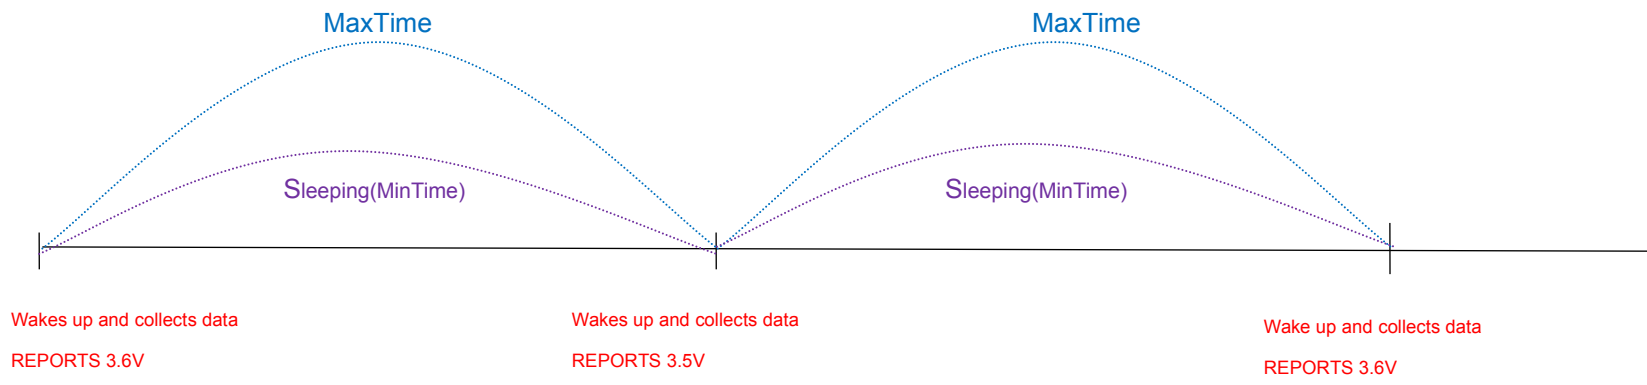


Note: MaxTime=MinTime. Data will only be report according to MaxTime (MinTime) duration regardless BtteryVoltageChange value.

Example#2 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

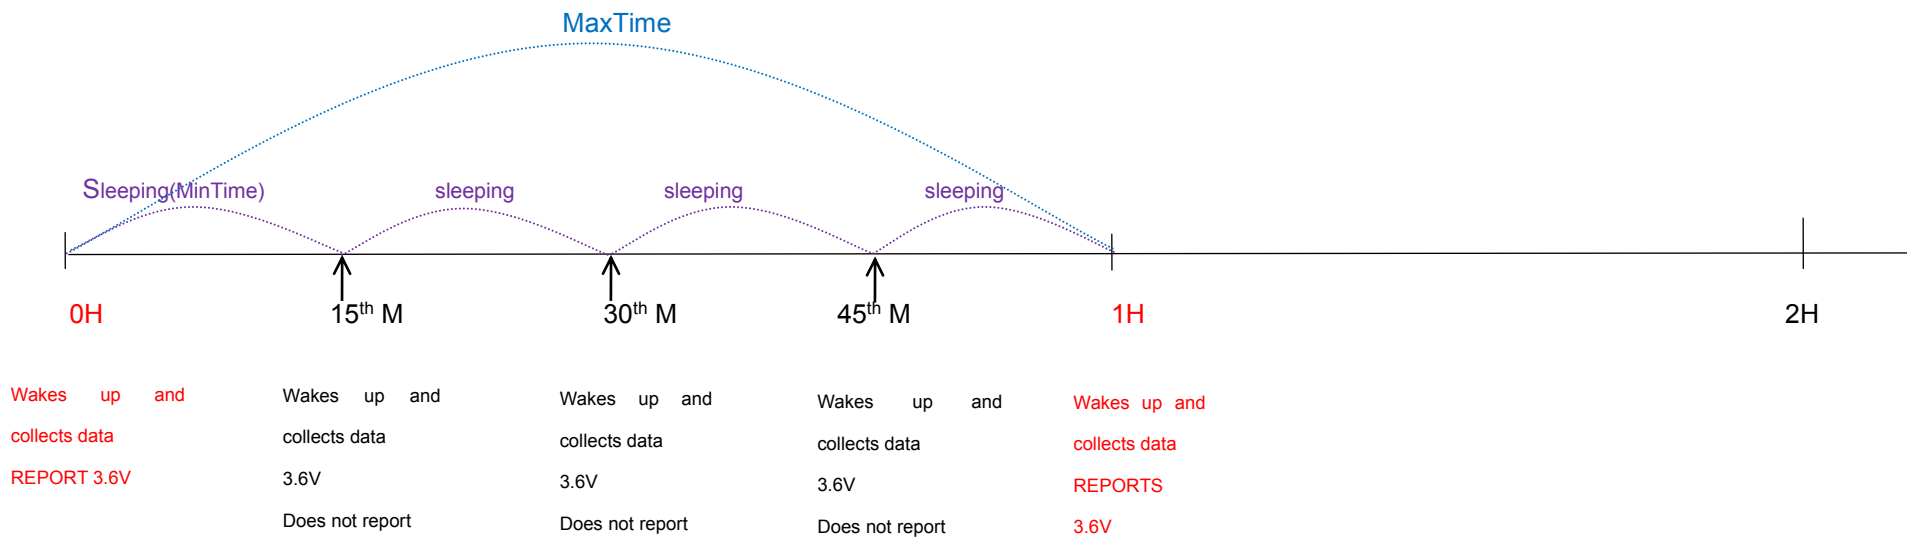

Example#3 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

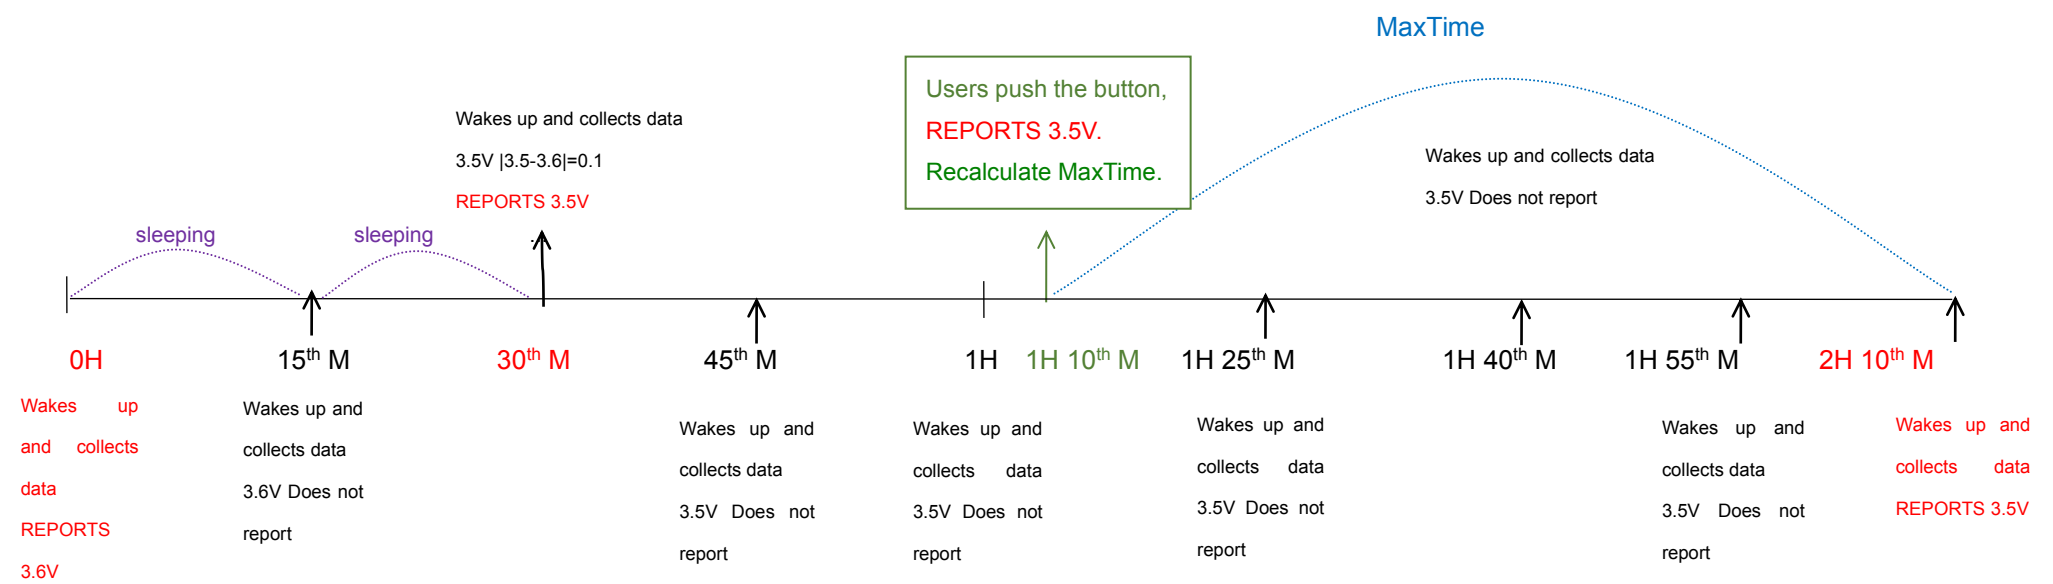

- Notes :
- 1) The device only wakes up and performs data sampling according to MinTime Interval. When it is sleeping, it does not collect data.
 - 2) The data collected is compared with the last data reported. If the data variation is greater than the ReportableChange value, the device reports according to MinTime interval. If the data variation is not greater than the last data reported, the device reports according to MaxTime interval.
 - 3) We do not recommend to set the MinTime Interval value too low. If the MinTime Interval is too low, the device wakes up frequently and the battery will be drained soon.
 - 4) Whenever the device sends a report, no matter resulting from data variation, button pushed or MaxTime interval, another cycle of MinTime/MaxTime calculation is started.

6. Installation

This product comes with waterproof function. When using it, the back of it can be adsorbed on the iron surface, or the two ends can be fixed to the wall with screws.

Note: To install the battery, use a screwdriver or similar tool to assist in opening the battery cover.

7. Important Maintenance Instruction

Your device is a product of superior design and craftsmanship and should be used with care. The following suggestions will help you use the warranty service effectively.

- Keep the equipment dry. Rain, moisture, and various liquids or moisture may contain minerals that can corrode electronic circuits. In case the device is wet, please dry it completely.
- Do not use or store in dusty or dirty areas. This can damage its detachable parts and electronic components.
- Do not store in excessive heat. High temperatures can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store in a cold place. Otherwise, when the temperature rises to normal temperature, moisture will form inside, which will destroy the board.
- Do not throw, knock or shake the device. Rough handling of equipment can destroy internal circuit boards and delicate structures.
- Do not wash with strong chemicals, detergents or strong detergents.
- Do not apply with paint. Smudges can block debris in detachable parts and affect normal operation.
- Do not throw the battery into a fire to prevent the battery from exploding. Damaged batteries may also explode.

All of the above suggestions apply equally to your device, battery and accessories. If any device is not working properly.

Please take it to the nearest authorized service facility for repair.