

# EZ-ZONE<sup>®</sup> PM Limit Controller



For Part Numbers:  
PM6 [C,R,B,J,N,E] \_ [E,F,C] [J,C] - \_ AAA \_ \_ \_

Follow the steps in this quick start guide to wire and set up your new Watlow controller

For assistance contact Watlow: [www.watlow.com](http://www.watlow.com)  
+1-(507)-494-5656  
[wintechsupport@watlow.com](mailto:wintechsupport@watlow.com)

## 1 INSTALLATION

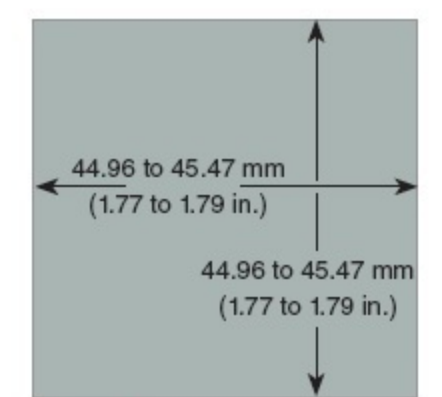


figure 1.

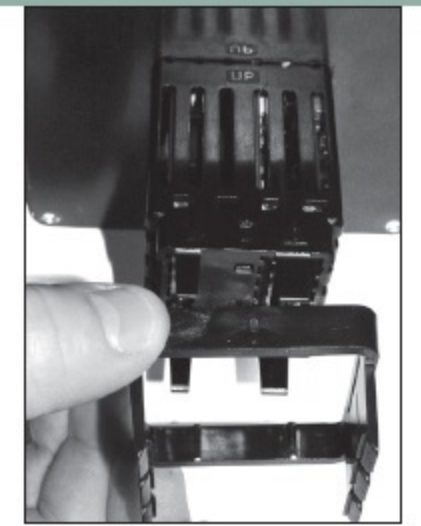


figure 2.





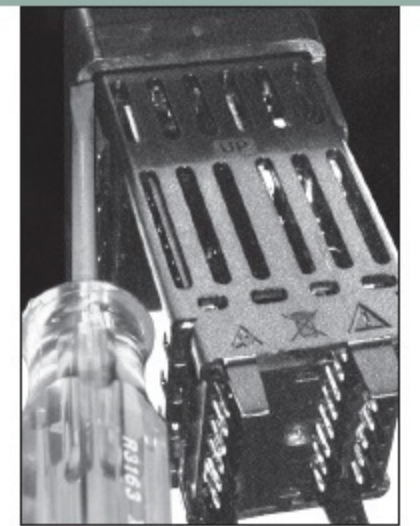


figure 3.

1. Make the panel cutout (see figure 1).
2. Remove the green screw terminal connectors from the controller.
3. Insert the case assembly into the panel cutout and slide the mounting collar over the back of the controller (see figure 2).
4. Push the collar to the panel and secure into position.
5. Place the blade of a screwdriver against each of the four corners of the mounting collar and apply pressure to achieve IP65 seal (see figure 3).
6. Reinstall the screw terminal connectors on the controller now or first connect field wiring as indicated in the steps that follow.

**Caution:** ⚠  
Reinstall screw terminal connectors in their original locations

## 2 SENSOR INPUT

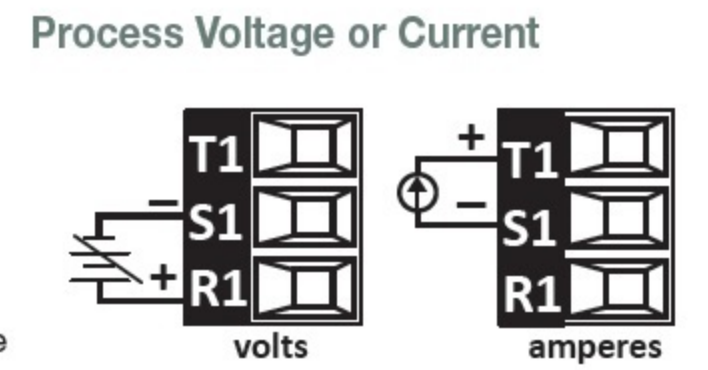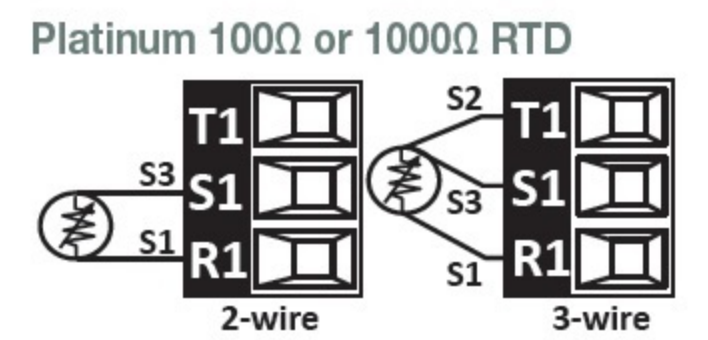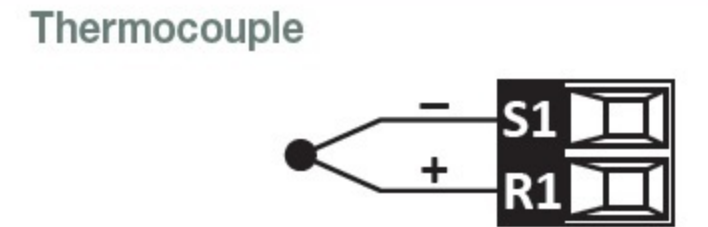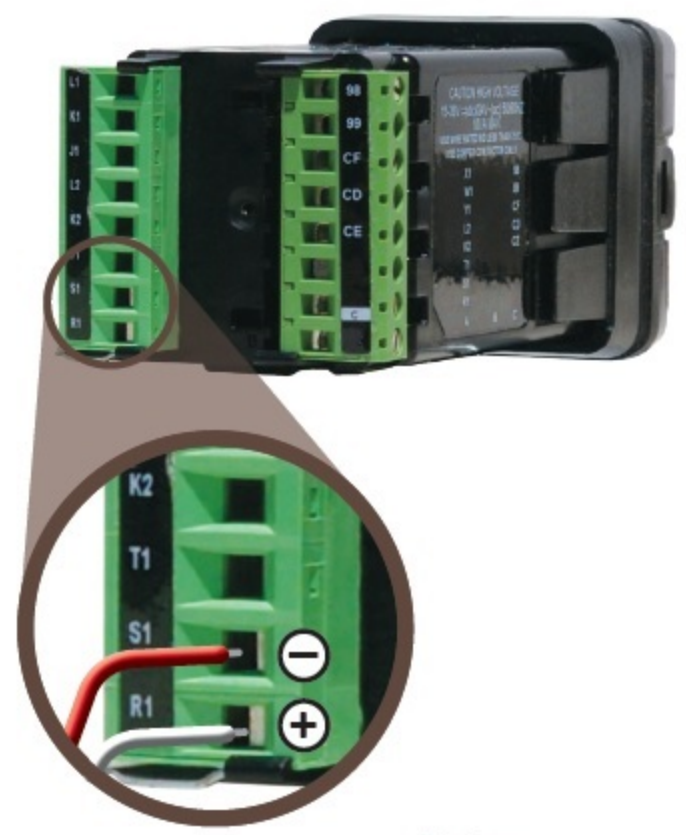


Connect your sensor as indicated in the corresponding diagram.

- Notes:**
- RTD: 20Ω maximum round trip lead resistance
  - Voltage: 0 to 50 mV or 0 to 10V @ 20kΩ
  - Current: 0 to 20 mA @ 100Ω


For other sensor types see the User's Guide

## 3 OUTPUT 1

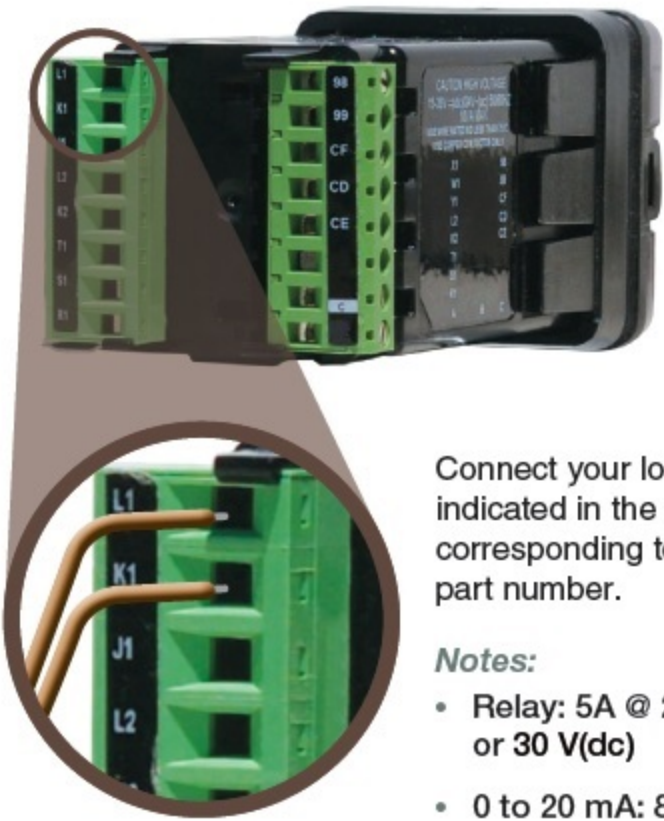


- Connect your load as indicated in the diagram corresponding to your part number.
- Notes:**
- Relay: 5A @ 240 V(ac) or 30 V(dc)
  - 0 to 20 mA: 800Ω max. load
  - 0 to 10V: 1kΩ min. load


PM6 E - : 5 A Form C Relay

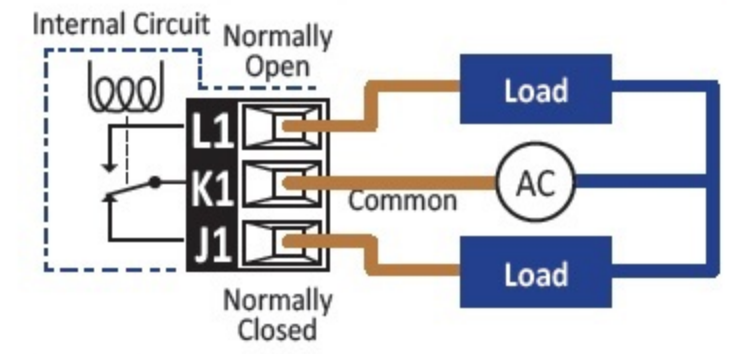


PM6 F - : Universal Process

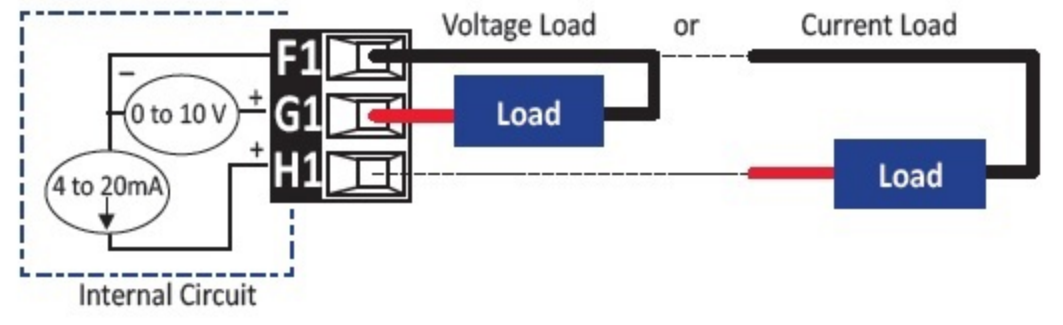


PM6 C - : Switched DC or Open Collector

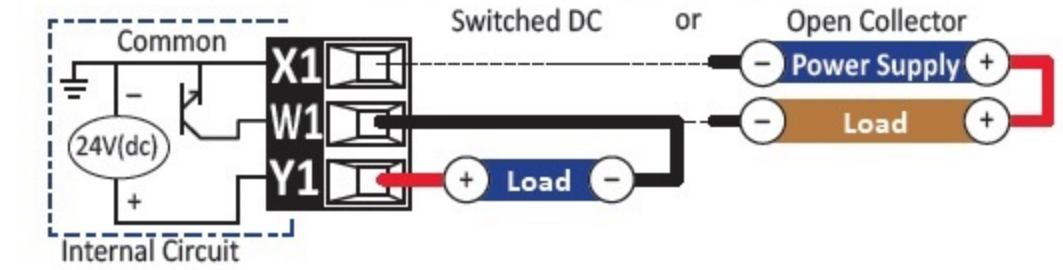


## 4 OUTPUT 2

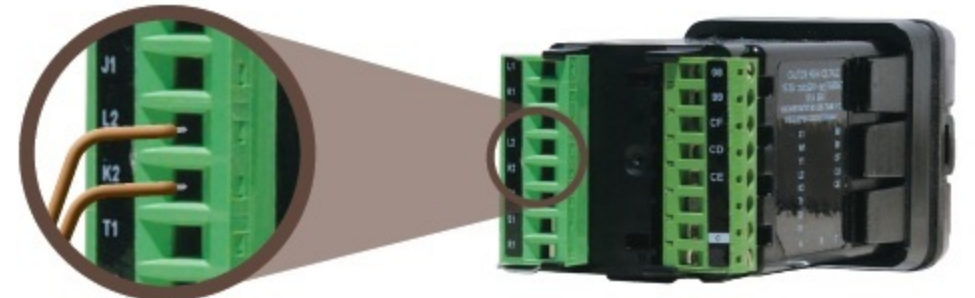

PM6 J - : 5A Form A Relay

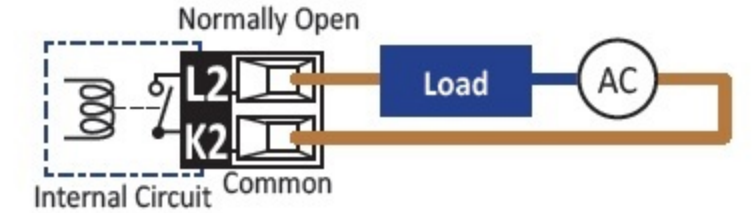

PM6 C - : Switched DC


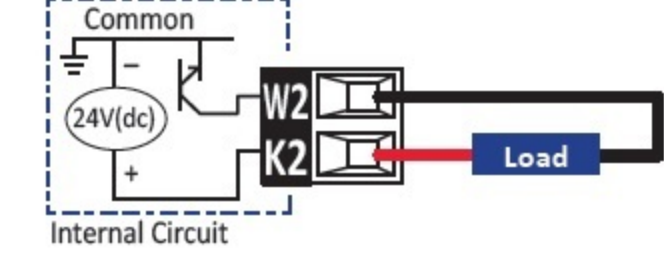


Connect your load as indicated in the diagram corresponding to your part number.

- Notes:**
- Relay: 5A @ 240 V(ac) or 30 V(dc)

For other output types see the User's Guide

## 5 POWER

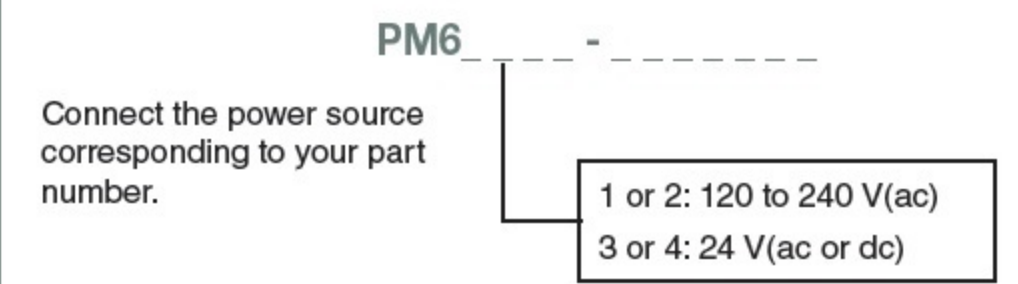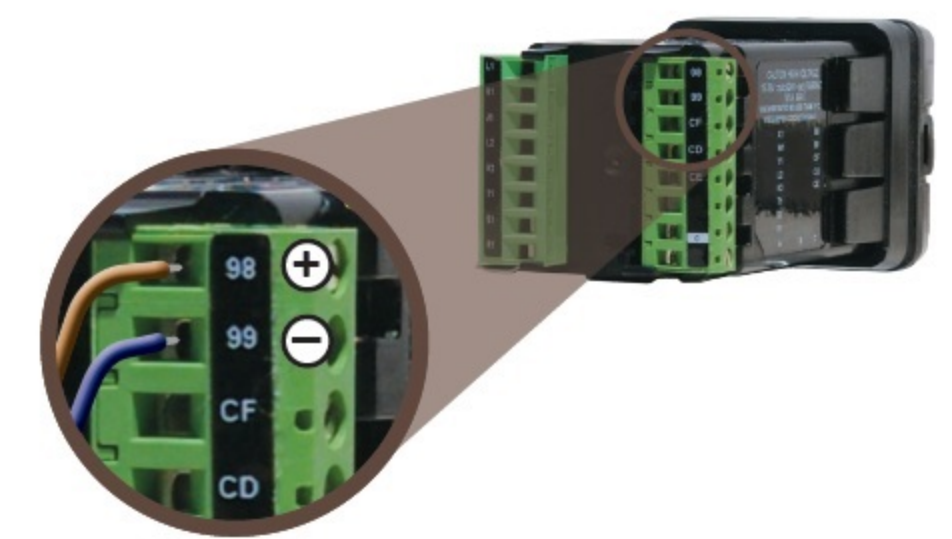

Connect the power source corresponding to your part number.

**Caution:** ⚠  
Do not connect high voltage to a controller that requires low voltage.

For other output types see the User's Guide

## USER INTERFACE



### Special Display Characters

h = H, h    H = K, k  
 i = I, i    I = 1  
 u = U, u    u = V, v  
 m = M, m    W = W, w  
 t = T, t    z = Z, z, 2

## 6 SET UP THE INPUT

### Starting at the Home Page:

- To enter the Setup Page press and hold and until "SEt" appears in lower display.
- Press to enter the Analog Input menu.
- Press to view the Sensor Type setting.
- To change the sensor type from thermocouple "tC" to another type, press until the desired type is displayed.
- Press and continue with the instructions for that sensor type below.



### Thermocouple (tC):

- To change the sensor type from "J" to another type, press until the desired type is displayed.
- To exit the Analog Input menu, press twice to return to the Setup Page.



### 100Ω or 1000Ω RTD (r.0.1H or r.1.0H):

- Set the number of RTD leads to 2 or 3 according to the sensor you are using. To change this press until the desired setting is displayed.
- To exit the Analog Input menu, press to return to the Setup Page.

#### Note:

This takes about six seconds and you will see the operations page first. If you release the arrow keys too soon, press once and then start again.

#### Sensor Types:

tC thermocouple  
 mV millivolts  
 v volt  
 mA milliamp  
 r.0.1H 100Ω RTD  
 r.1.0H 1000Ω RTD  
 Pot potentiometer  
 oFF analog input off

For other sensor types see the user manual.

## 7 SET UP OUTPUTS FOR HEAT, COOL AND ALARM

### Starting at the Setup Page:

- To view the output menu, press until "oLPE" appears in upper display.
- To enter the Output menu press .
- If the controller has more than one output, use and to select the output and press to view the output's function.
- To set what the output does in the controller, use and to select the desired function.
- For hEAt or CoOL, press and continue with the hardware specific options below (step 6).  
 For an ALm, press and use and to select which alarm drives the output.

### Form A, Form C or No-Arc Relay:

- Use and to set the time base, the length of an on-off cycle.

### Switched DC or Open Collector:

- Use to set the method the controller uses to switch the output (Output Control).  
 For fixed time base use and to set the length of the on-off cycle.
- Press to return to the top of the Output menu or press it twice to return to the Setup Page.

#### Output Functions:

hEAt heat control output  
 CoOL cool control output  
 EnEA event output a  
 EnEb event output b  
 ALm alarm  
 oFF output off

#### Output Control:

FtB fixed time base:  
 output switches per time base setting  
 vtb variable time base:  
 output switches up to 20 times per second.

Repeat for other outputs

For other output types and settings see the user manual.

## 8 Set Up the High Limit

### Starting at the Setup Page:

- To view the Limit menu press until "Lm" appears in the upper display.
- Press to enter the Limit menu.
- Press until "Lsd" appears in the lower display and use to set on which sides of the process value Limits occur.
- Press until "LH" appears in the lower display and use to set The Hysteresis

#### Limits Sides:

hgh high: Limit only when process is above high Limit set point.  
 low low: Limit only when process is below low Limit set point.  
 both both: high and low Limit are active.



Press until "SPLh" appears in the lower display and use to set High Limit of the Temperature Range



Press until "SPLl" appears in the lower display and use to set Low Limit of the Temperature Range



Press until "Lh5" appears in the lower display and use to set The High Limit Set Point



## 9 Set Up Another Alarm

### Starting at the Setup Page:

- To view the alarm menu press until "ALm" appears in the upper display.
  - Press to enter the alarm menu.
  - Press to select the alarm and press to view the alarm type.
  - Press to set the alarm type.
  - Press until "ASd" appears in the lower display and use to set on which sides of the process value alarms occur.
- To return to the top of the Alarm menu, press or press it twice to return to the Setup page.

#### Alarm Types:

P-AL process alarm: alarm set points are set directly.  
 dEAL deviation alarm: alarm set points are set relative to the control loop's set point.  
 oFF alarm does not occur.

#### Alarm Sides:

hgh high: alarm only when process is above high alarm set point.  
 low low: alarm only when process is below low alarm set point.  
 both both: high and low alarms are active.

For other alarm settings see the user manual.

Repeat for other alarms

## 10 Set Other Alarm Setpoint

### Starting at the Home Page:

- To enter the Operations Page press and hold and until "oPEr" appears in lower display.
  - To view the alarm menu, press until "ALm" appears in the upper display. Then press to enter the alarm menu.
  - Press to select the alarm and press to view the alarm set point.
  - Use and to set the desired alarm set point and press to go on to the next menu.
- To return to the top of the Alarm menu, press or hold it for the Home page.

#### Note:

To get to the home page, hold until the process value and set point appear in the display.

#### Note:

Whether you can set a high alarm, a low alarm or both depends on how the Alarm Sides is set.

#### Note:

The low set point for a deviation type alarm should be set as a negative number.

Repeat for other alarms

For assistance contact Watlow: [www.watlow.com](http://www.watlow.com)  
 +1-(507)-494-5656  
[wintechsupport@watlow.com](mailto:wintechsupport@watlow.com)

<http://www.watlow.com/downloads/en/manuals/pmpmi.pdf>

