

SDM210-DR

Single-Phase Two Module DIN rail Meters



- Measure A/V/W/kWh
- Two pulse outputs
- Din rail mounting 35mm
- 100A direct connection
- Better than Class1/B accuracy

User Manual V1.0

2022



Statements

All rights reserved. Without the written permission of the company, no paragraphs or chapters in this manual can be extracted, copied or reproduced in any form. Otherwise, the violator shall bear all consequences. The company reserves all legal rights.

The company reserves the right to amend the product specifications in this manual without prior notice. Before placing an order, please contact our company or local agent to get the latest specifications.



Application

The energy-meters "with a back-lighted LCD screen for prefect reading" are used to measure single-phase like residential, Utility and Industrial application. The unit measures and displays various important electrical parameters.

PART 1 Specification

General Specifications

230V Voltage AC (Un)

176~276V AC Voltage Range

Base Current (Ib) 10A 100A Max. Current (Imax) Mini Current (Imin) 0.5A Starting current 0.4% of Ib Power consumption <2W/10VA

Frequency 50Hz/60Hz(±10%) non-MID

50Hz(±10%) MID

AC voltage withstand 4KV for 1 minute 6KV-1.2uS wavform Impulse voltage withstand Overcurrent withstand 30Imax for 0.01s Pulse output rate 1000imp/kWh LCD with backlight Display

999999.9kWh Max. Reading

Accuracy

Class 1 IEC62053-21 Active energy

Class B EN50470-1/3

Environment

-25°C to +55°C Operating temperature

Storage and transportation

-40°C to +70°C temperature 23°C ±2°C Reference temperature

Relative humidity 0 to 95%, non-condensing

up to 2000m Altitude

Warm up time 5s CAT III Installation category Mechanical Environment M1 Electromagnetic environment E2 Degree of pollution 2

Pulse Output



The meter provides pulse output. Pulse output is passive type. constant 1000imp/KWh, pulse width 100ms, non-configurable

Mechanics

Din rail dimensions 36x99x63 (WxHxD) DIN 43880

Mounting DIN rail 35mm Ingress Protection IP51 (indoor)

Material self-extinguishing UL94V-0

PART 2 Operation

Start up screens

When it is powered on, the meter will initialize and do self-checking.



Scroll display by Button

After initialization and self-checking program, the meter display the measured values. The default page is total kWh. If the user wants to check other information, he needs to press the scroll button on the front panel.

The display order by scroll button :

Total kWh→ partial KWh (resettable)→ import kWh→export kWh→power→voltage→current

Page	Display	Descriptions
1	000000.26	Total active energy Example:0.26kWh




2	Σ°3	Total partial energy (resettable)
3	00000.19	Import energy
4	— 000000.05	Export energy
5	w	Active Power Example: 0W
6	29,7.3	Voltage Example: 297.3V
7	0.00	Current Example: 0A

Long press button for 3s to clear the partial energy.




Wiring diagram

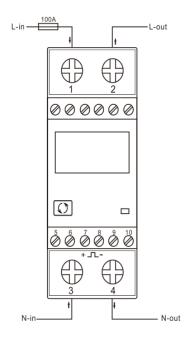

Torque Value of Terminals


Terminals Capacity	Pulse	0.5~1.5 mm ²
Terminals Capacity	Load	4~16 mm ²
Sarour Torquio	Pulse	0.4Nm
Screw Torque	Load	3Nm

Dimensions

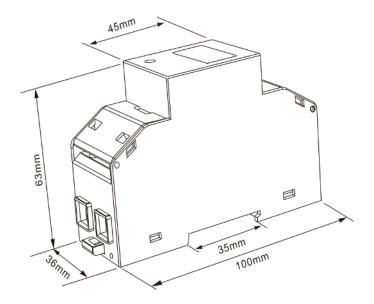



Installation

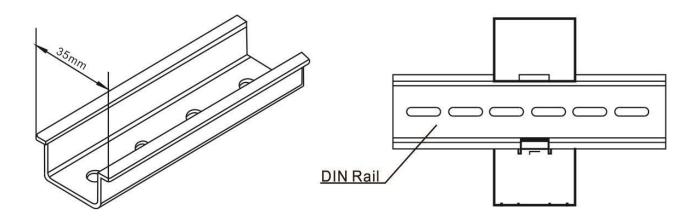

IF you have any question, please feel free to contact our sales team.

Zhejiang Eastron Electronic Co., Ltd.

No.1369, Chengnan Rd. Jiaxing, Zhejiang, 314001, China

Tel: +86-573-83698881 Fax: +86-573-83698883

Email: sales@eastrongroup.com

www.eastrongroup.com