

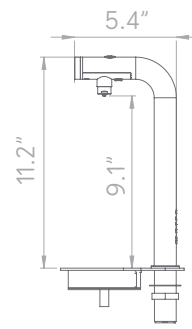
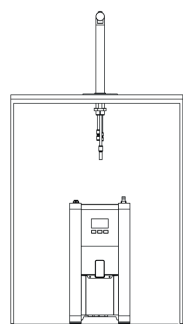


# 1B UNA FONT WITH UNDERCOUNTER BOILERS



1B UNA FONT 1000859		DIMENSIONS	SYSTEM SET-UP
			
<p>&gt; Space-saving countertop font</p>		<p>&gt; Vacuum insulated tank for up to 70% more energy-efficiency</p>	

MIX UC3 - 220v / 110v 1000880US / 1001880US	MIX UC8 - 220v 1000887US	OPTIONAL - DRIP TRAY 2300268
	OR 	

FONT	NAME ORDER CODE	DIMENSIONS INCL. DRIP TRAY (D x W x H inches)	DIMENSIONS EXCL. DRIP TRAY (D x W x H inches)	TAP TO COUNTER (T inches)
	1b Una Font 1000859	6.6 x 4.7 x 11.2	5.4 x 1.1 x 11.2	9.1

BOILERS	PRODUCT INFO		WATER TYPE	SIZE DIMENSIONS	PERFORMANCE SPECS			PLUMBING & ELECTRICAL REQS	
	NAME ORDER CODE	ADJUSTABLE TEMP	DIMENSIONS (D x W x H inches)	IMMEDIATE DRAW OFF	GAL /HR	CUPS /HR	POWER	NEMA	PLUMBING REQS
	MIX UC3 - 110v 1001880US	Y	15.1 x 8.2 x 17.4	0.8 GAL	3.6 GAL	75	1.4kW @ 110v	5-15p	3/8" Compression or 3/8" John Guest
	MIX UC3 - 220v 1000880US				7.3 GAL	156	2.8kW @ 220v	L6-20P	
	MIX UC8 - 220v 1000887US		15.1 x 8.2 x 24.2	2.1 GAL					

PACKAGING	NAME ORDER CODE	PACKAGING DIMENSIONS (L x W x H inches)	PACKED WEIGHT	QTY / PALLET
	1b Una Font 1000859	11.4 x 22.4 x 8.4	4.4lbs	30
	MIX UC3 - 220v / 110v 1000880US / 1001880US	17.7 x 11.4 x 21.2	25lbs	24
	MIX UC8 - 220v 1000887US	17.7 x 11.4 x 27.5	30.8lbs	18

# 1B UNA FONT WITH UNDERCOUNTER BOILERS



1 BUTTON UNA FONT WITH MIX UC3/UC8		
COUNTER CUT-OUT WITH DRIP TRAY	1b UNA FONT 1000859	
	MIX UC3 (220/110v) 1000880US/1001880US	MIX UC8 (220v) 1000887US
	<p>* Hosing should be trimmed to ensure continuous drop from font to boiler</p>	<p>* Hosing should be trimmed to ensure continuous drop from font to boiler</p>

## VENTILATION REQUIREMENTS

50mm/1.9" clearance required at each side and back of machine if installed in an enclosed cabinet.

## ELECTRICAL INSTALLATION PROCEDURE

When installing the machine, always observe the local regulations and standards. The appliance is supplied with a NEMA L6-20P moulded power cord. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

## PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 - 145psi (100 - 1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine requires either a 3/8" compression, or 3/8" John Guest water connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through. Especially for new installations.

- Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.
- Turn on water and check for leaks.

## OPERATING BOILER FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
- Ensure water valve is on.
- Plug boiler into suitable socket.
- Turn on the power switch.
- The "Wait" progress circle will be visible on the screen and the machine will fill to a safe level, above the elements, before heating.
- The "Ready" tick will come up on screen when the machine is full and up to normal operating temperature (approx. 10/20 mins.).
- The boiler is now ready for use - the display will show the button settings and the "Ready" status tick.
- The Boiler may now be used to dispense Hot Water to the preset factory settings.

**NOTE:** Because the boiler is electronically controlled no priming is necessary. The element cannot switch on until a safe level of water is reached.