




Jet 6 Twin

SERVICE MANUAL

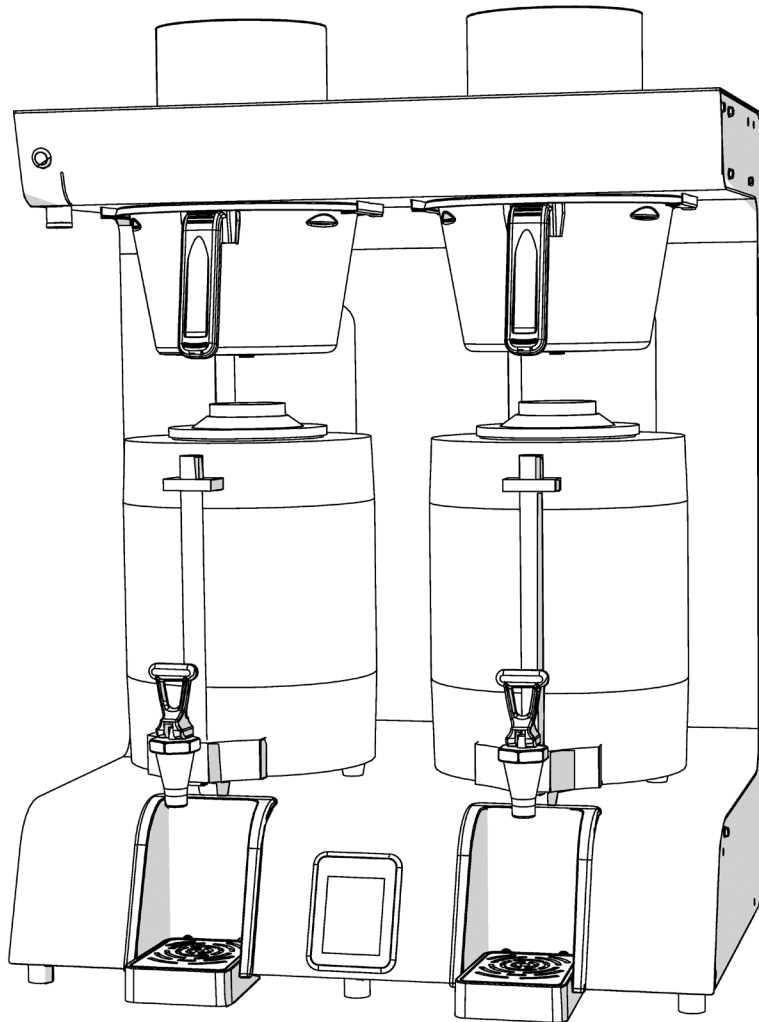

Marco Beverage Systems Ltd. 63d Heather Road, Sandyford Industrial Estate, Dublin 18, Republic of Ireland	Ireland Tel: (01) 295 2674 Ireland Fax: (01) 295 3715
	UK Tel: (0207) 274 4577 UK Fax: (0207) 978 8141

CONTENTS

	PAGE
INTRODUCTION	3
SERIAL NUMBER & MACHINE MODEL INFORMATION	3
GENERAL DESCRIPTION	4
ASSEMBLY & PARTS DRAWINGS	
FRONT PANEL REMOVAL	5
TOP PANEL & BACK PANEL REMOVAL	6
ELEMENT REMOVAL	7
SPARE PARTS LOWER & DESCALING	8
SPARE PARTS UPPER & DISPENSE VALVE REMOVAL	9
TROUBLESHOOTING –LCD DIAGNOSTIC GUIDE	10
TROUBLESHOOTING –GENERAL DIAGNOSTIC GUIDE	12
WIRING DRAWINGS	
WIRING SCHEMATIC 5.6kW	13
WIRING SCHEMATIC 3.6kW MJ VERSION	14
WIRING SCHEMATIC 5.6kW US VERSION	15
GENERAL SPARE PARTS LIST	16

INTRODUCTION

The information provided in this manual is intended to assist in the maintenance of the Marco Jet 6 Twin Brewers. For basic user information & operation of the machine please consult the User Manual which comes with the machine.

This manual is not a substitute for any safety instructions or technical data affixed to the machine or its packaging. All information in this manual is current at the time of publication and is subject to change without notice.

Only technicians or service providers authorised by Marco should carry out installation and maintenance of these machines.




Marco accepts no responsibility for any damage or injury caused by incorrect or unreasonable installation and operation.

SERIAL NUMBER & MACHINE MODEL INFORMATION

Every unit will have a rating plate with a machine serial number. The format is MMYXXXXX

The first four digits of the serial number denote the month and year of manufacture. The remaining four digits represent a factory assigned identification number.

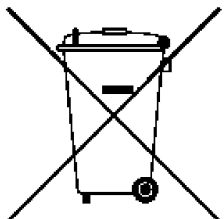See example below. This machine was made in June 2015 and was machine number 1234.


Model: Jet 6 Twin 230V 5.6kW	1000855
Serial No: 11150636	
<hr/> Rated Voltage: 230-240 V a.c.	
Rated Power Input: 5.6 - 6.1kW	
Rated Current: 24.3-25.4 A	
Rated Freq Input: 50-60HZ	
Water Inlet Pressure: 8-145 PSI	
<hr/> Marco Beverage Systems Ltd	
Tel: IRL +353 (0)1 2952674 UK +44 0207 2744577	

GENERAL DESCRIPTION

1000855# Jet 6 Twin 5.6kW		
Electrical	Connection	5.6kW, 230Vac c/w 1.5m flex
Plumbing	Fittings Pressure	0.75" BSP (US: Inlet hose 3/4" WRC) Food grade inlet hose supplied 8-145 psi (35-1000 kPa) Standard inlet hose protrudes out 47mm measured from the flat back panel.
Dimensions	Height Width Depth (no plumbing or driptray) Depth (including plumbing fitting, no driptray) Depth (including plumbing fitting & including driptray) Tap Height to counter Tap Height to driptray	840mm 615mm 410mm 445mm 490mm 162mm 132mm
Performance	<u>Hot Water (if tap is installed):</u> Immediate Draw Off Total Recovery rate at 5.6KW	Approx. 16L + 0.9 litres/minute 0.9 litres/minute



Removing only the left plastic panel allows access to the tank temperature Port above the left element where a thermometer probe can be inserted

The tank drain hose is also accessible without removing the full metal panel

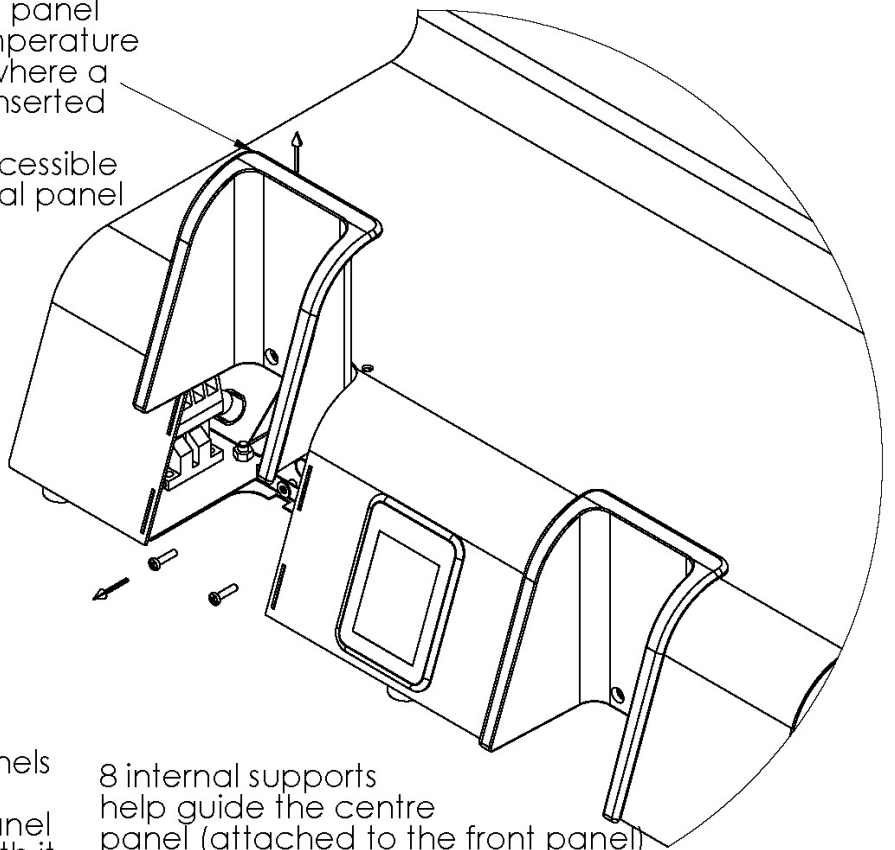

These central panels is attached to the main front panel so it comes off with it


8 internal supports help guide the centre panel (attached to the front panel) back into place

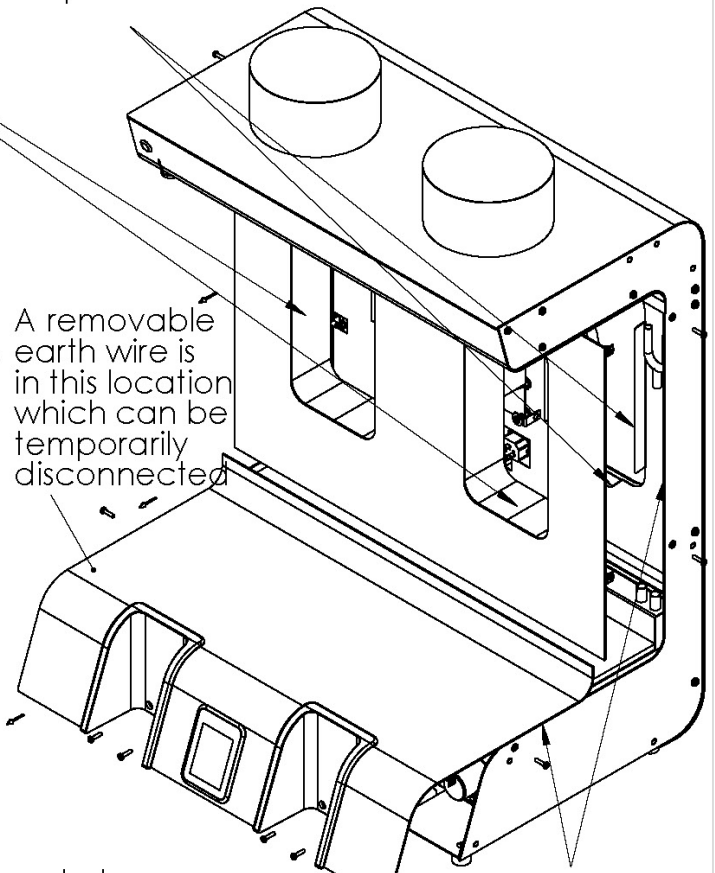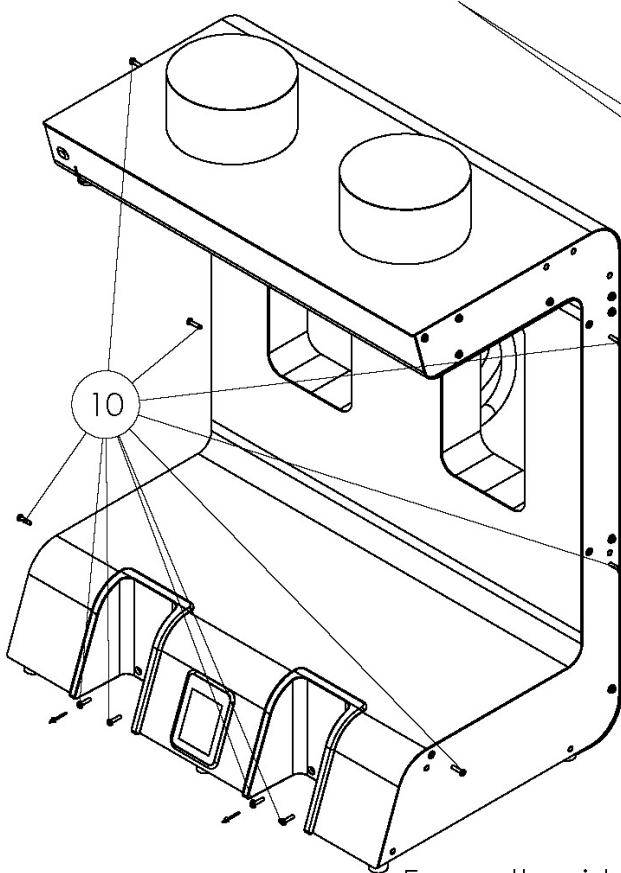

A removable earth wire is in this location which can be temporarily disconnected

Ensure the side brackets do not scratch the side panels

Ensure no wires or tubes are trapped on either side when replacing the panel

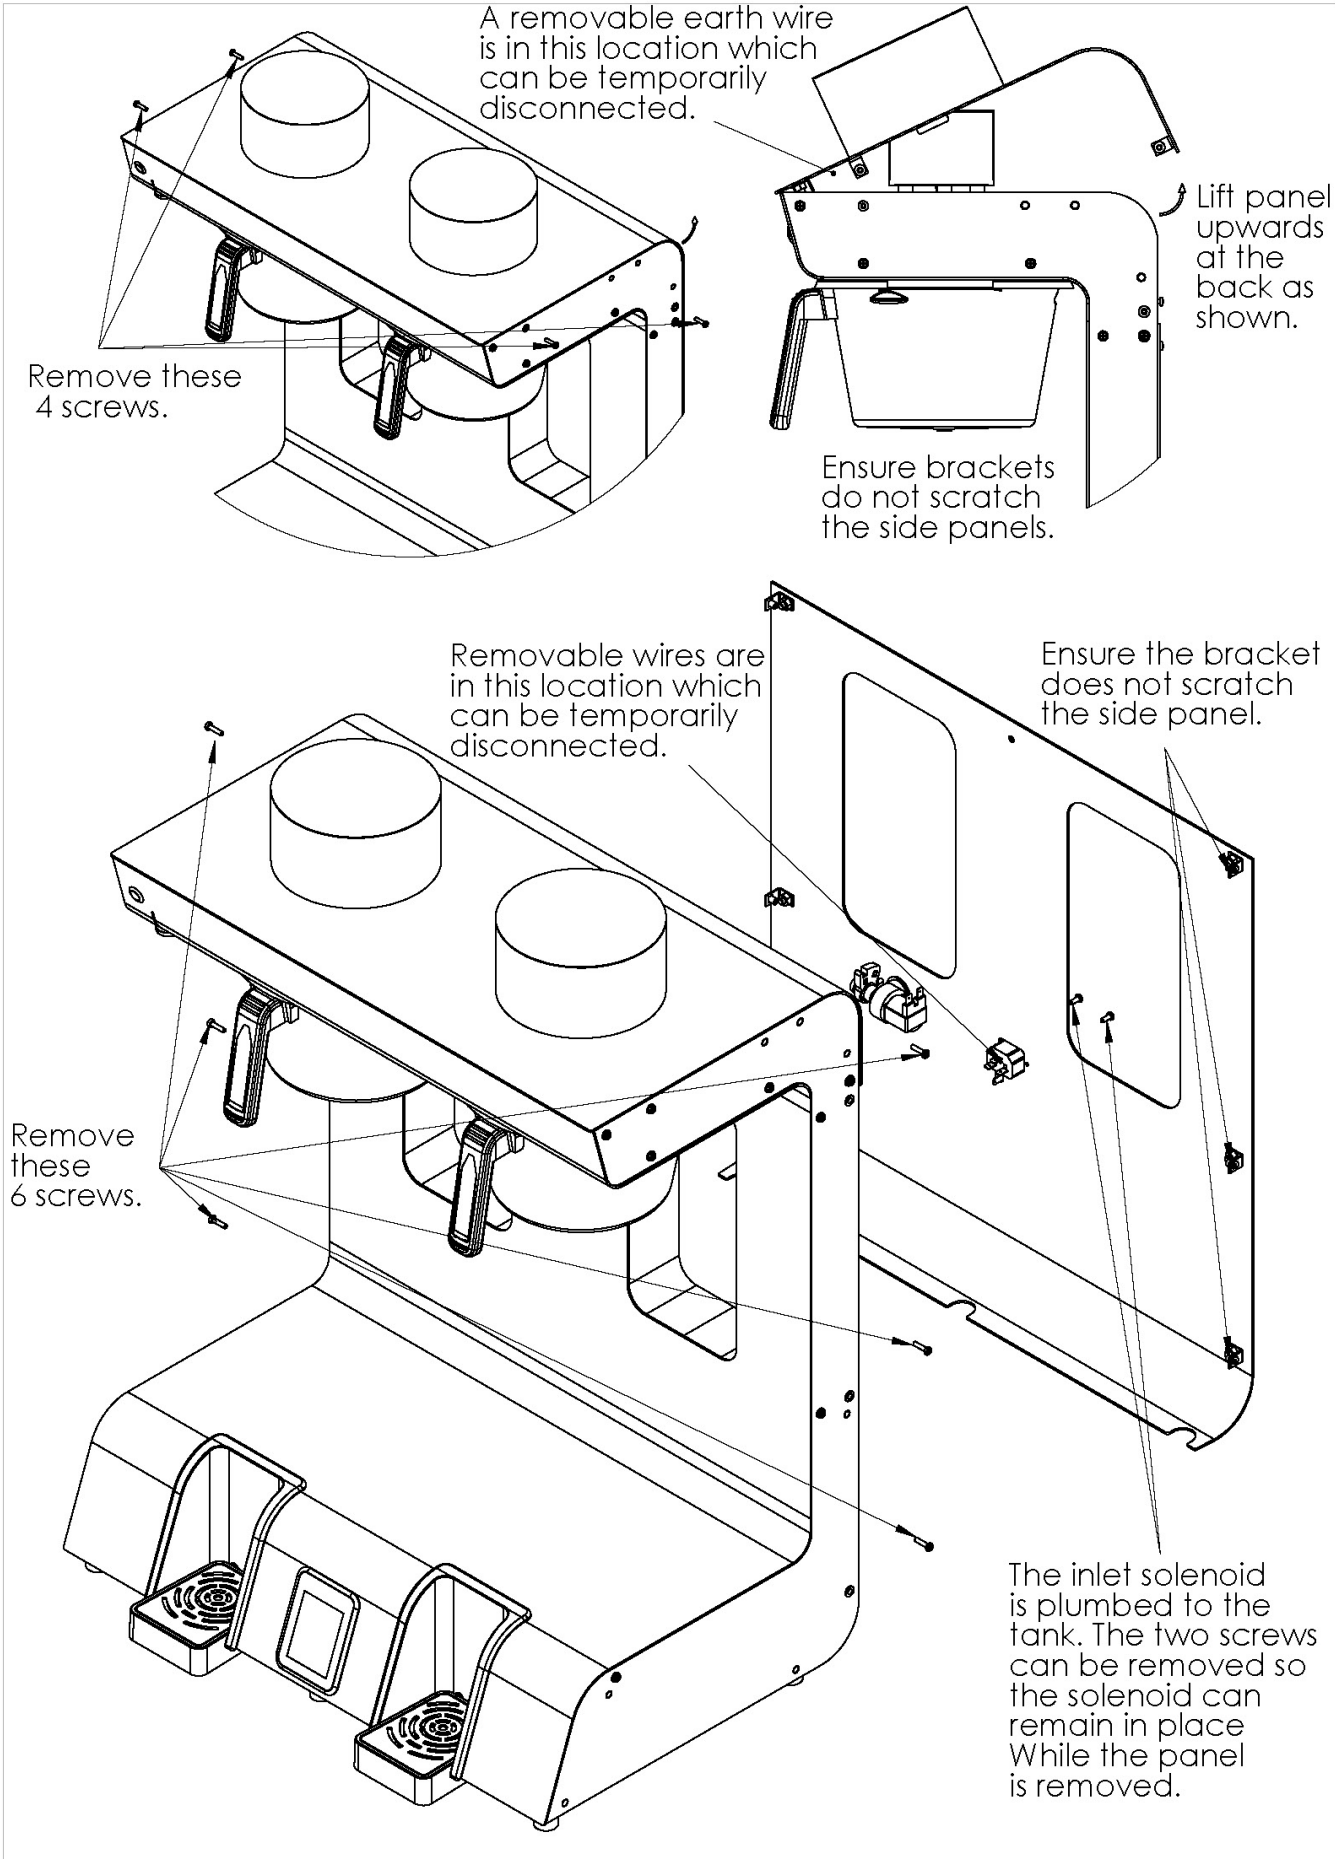

A removable earth wire is in this location which can be temporarily disconnected.

Lift panel upwards at the back as shown.

Remove these 4 screws.

Ensure brackets do not scratch the side panels.


Removable wires are in this location which can be temporarily disconnected.

Ensure the bracket does not scratch the side panel.

Remove these 6 screws.

The inlet solenoid is plumbed to the tank. The two screws can be removed so the solenoid can remain in place while the panel is removed.

DESCRIPTION:	PANEL REMOVAL	DWG NO.:	JT6T-031A	DRAWN BY	BB	20-08-15	C.O.	270
--------------	---------------	----------	-----------	----------	----	----------	------	-----

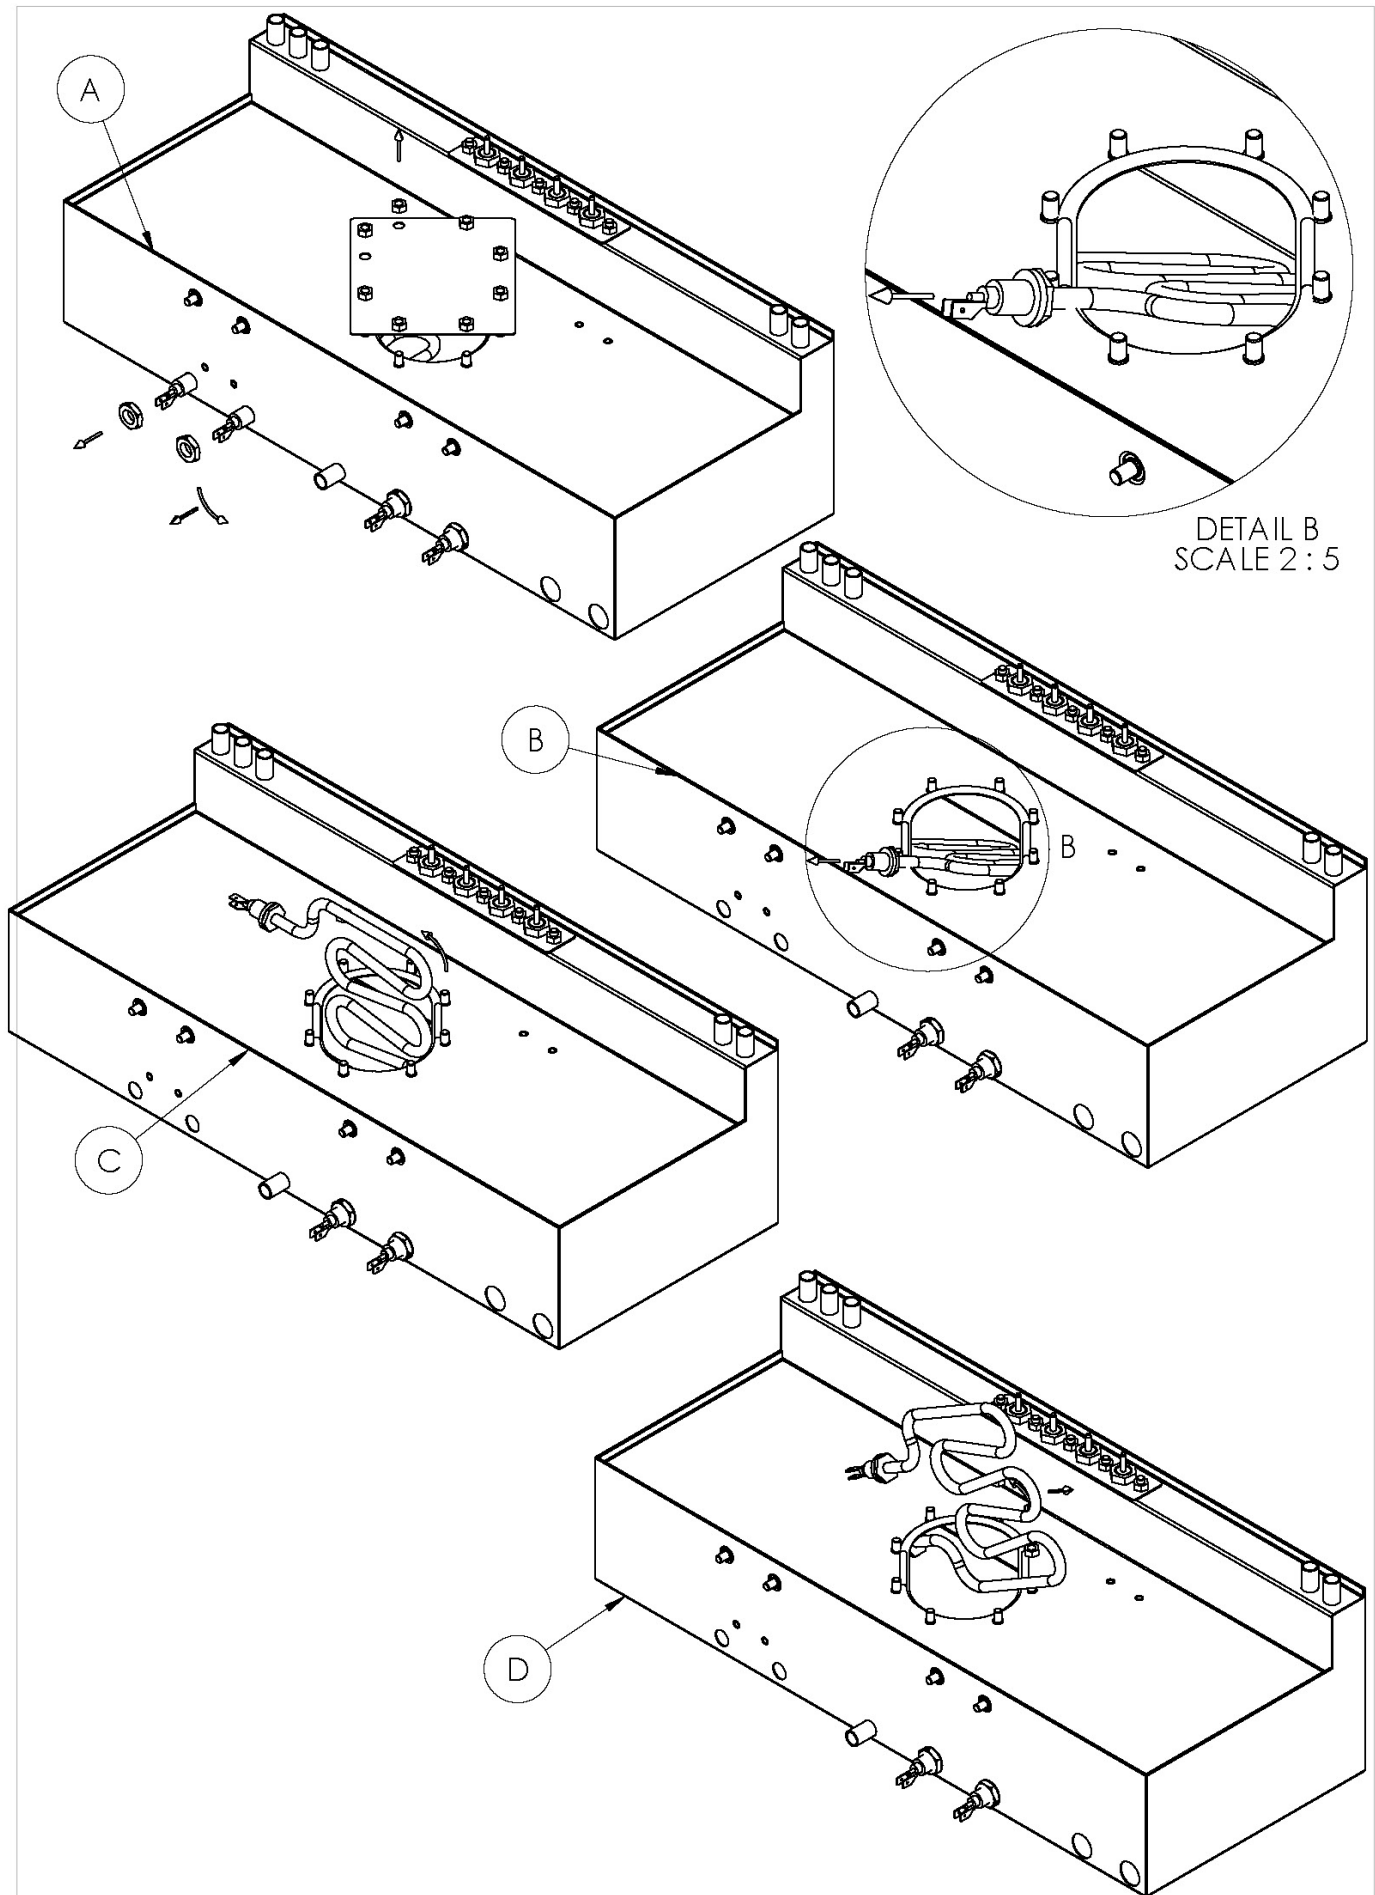


DESCRIPTION: ELEMENT REMOVAL

DWG NO.: JT6T-032A

DRAWN BY: BB

17-09-14 C.O. 270

ITEM NO.	PART NUMBER	DESCRIPTION
1	1502171	Valve Inlet 90 Deg 220V - 2L/min
2	2301339	Probe Quad 125mm/85mm/65mm/no tab
3	1800770	O RING 4" RED SILICONE
4	1600203	P.C.B Jet Twin Control
5	1801230	PILLAR SUPPORT PCB
6	1401150	NUT M6 BRASS
7	1502159	Mount Tank Wall Silicone 14mm Valve ELEMENT 2.8kW 230V
8	1500985	
8a	1500987	Element 1.8kW 200V (US & MJ)
9	1500842	CONTACTOR B&J 240V AC
10	1502000	TERMINAL 6mm
11	1800356	1Locknut Nylon M20
12	1801202	Strain Relief Screw Adjust
13	1401877	Spacer Flange 9.2x5.2x7.9-10mm LxDxOD
14	1401767	Screw M4 x 16mm Pozi Pan Black SS
16	1501153	Socket IEC C13 10A Female Panel Mnt
17	1401760	Screw M4 X 10mm Pozi Pan S/S
18	2200628	Bezel Touchscreen 3.2inch Rear (no threaded inserts)
19	1402442	Washer M4 Nylon Black 4.3x9x0.8mm
20	1600202C	P.C.B. Touchscreen 3.2inch Integrated Memory Complete
21	1401723	Screw M2x6mm S/S Pan Posi
22	1800337	Gasket Silicone Bezel 3.2inch
23	2200627	Bezel Touchscreen 3.2inch Front
24	1900225	Label Touchscreen 3.2inch
25	2300277	Dripray Complete JET
27	1800690	Hose Water Inlet 3/4" WRC
27a	1800692	Hose Water Inlet 3/8 NPT (only for US)
27b	1800693	Hose Water Inlet 9/16"-24 UNEF(3/8 Compression) (only for US after 5/N 0917xxxx)
28	1800550	Clip Hose Plastic 20.2mm Type G
30	1600691	THERMISTOR ASSEMBLY
31	1501183	16 Way Ribbon Cable Assembly 700mm
32	1502074	Thermal Switch Man Reset 130deg Horiz Term
33	1402216	Tee Piece 1/2" 36x60mm
34	1501559	Pump Topsflo 24V DC
35	1601000	Power Supply 24V Dc
36	1600496	Relay 24VDC SPDT
37	1501094	FNM-6 FUSE (US ONLY)

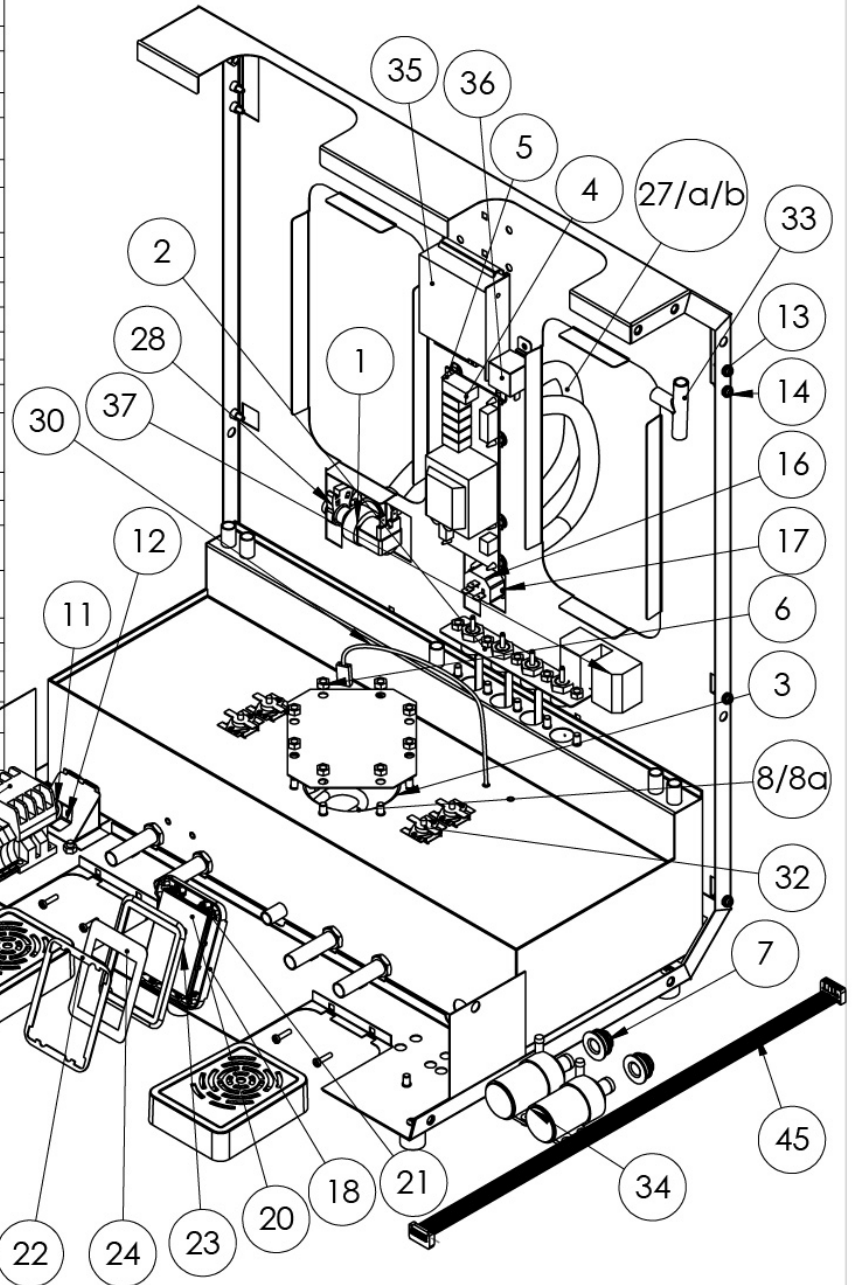

Descaling solution can be poured into the top of the tank through the probe holes using a funnel. For heavy scaling remove the cleanout door and remove scale by hand. The machine can be drained via the drain at the bottom of the tank near the pump



When replacing the cleanout door be careful not to overtighten the nuts as it could break the threaded studs on the tank. To remove the probes take off the 4 nuts and lift the probe assembly upwards out of the tank. Heavy scaling on the high level probe can cause the tank to overflow and may cause the overflow probe to be triggered

The pumps are held in place by a friction fit in the silicone mount and a bracket pushed against the back of the pumps. To remove the pump drain the machine fully, remove the bracket hold the silicone mount against the tank & pull the pump directly out of the tank.

DESCRIPTION: Spare Parts Lower & Descaling

DWG NO.: JT6T-033A-e DRAWN BY: JL 14-05-19 C.O. 498


ITEM NO.	PART NUMBER	DESCRIPTION
1	2300023	Basket Complete 233*136mm with syphon
2	1800301	GASKET SPRAYHEAD 186x146x6mm
3	1501218	Push Button Metal Domed 16mm DI
4	1502260	Solenoid 24VDC Basket Lock
5	1800402	Grommet Silicone 4mmID 7mmPanel di
6	1502147	Valve Dispense Solenoid Plug M0084
7	1502158	Valve 12mm Bore 230V 30E Vent Vend
7a	1502161	Valve 12mm Bore 230V 40E Vent Vend (US & Japan)
8	1502151	VALVE DUMP 240Vac
8a	1502164	Valve 12mm Bore 230V U35E (US ONLY)
9	1502162	Mount Panel Silicone Red 14mm Valv
10	2301219	Tube 22.2mmOD x19.8mmID x15mm 304S
11	1400088	Adapter 1/4BSP M x 9.5mm 304SS
12	1402442	Washer M4 Nylon Black 4.3x9x0.8mm
13	1401767	Screw M4 x 16mm Pozi Pan Black S
14	1401830	Screw M4 X 6mm S/S Pan Pozi
15	1800545	Clip Hose Plastic 13mm Type E
16	1401000	LOCKNUT 1/4" BSP BRASS
17	1401150	NUT M6 BRASS
18	2301204	Tube 9mmOD x7mmID x18mmL 304S
19	1800630	Hose Silicone 8mm I.D. X 12mm O.
20	1801175	Sprayhead Disc 156mm with grommet
21	1800672	Silicone Basket Syphon

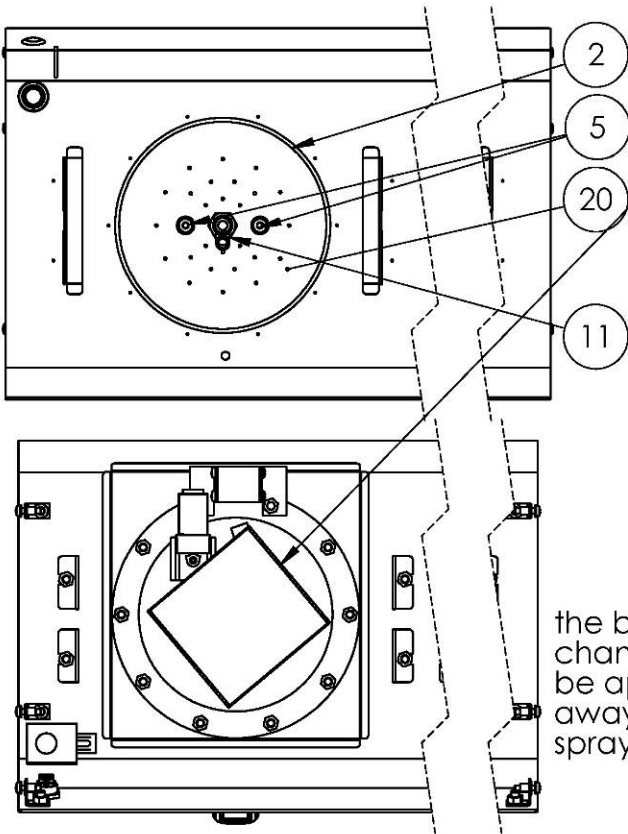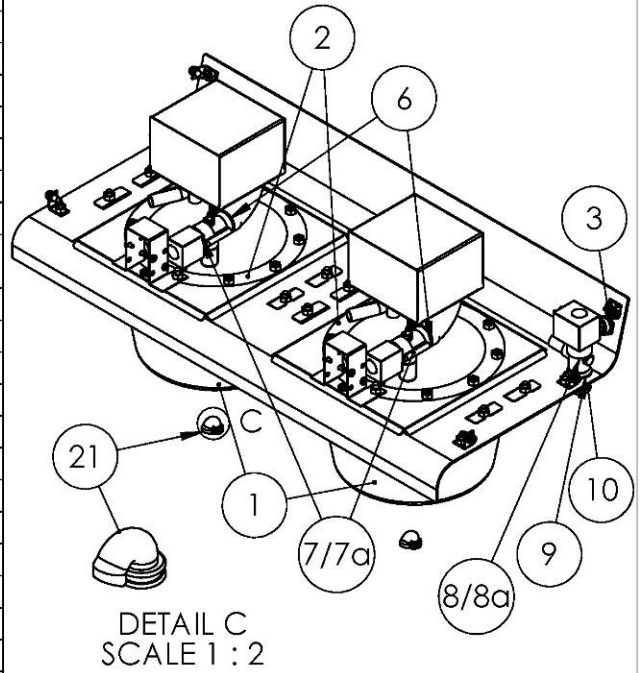

Place some absorbent material under the solenoid and peel back the solenoid plug. A small amount of retained water will drain out of the chamber

To change the sprayhead dispense valve first loosen the lock nut and twist the circulation chamber as shown. The solenoid can now be pulled up vertically off its metal mounting tube. When replacing the valve place the plug on the valve and peel it back, then twist the chamber into position and pull the plug over the large metal elbow.

the bottom of the chamber should be approx 76mm away from the spray head

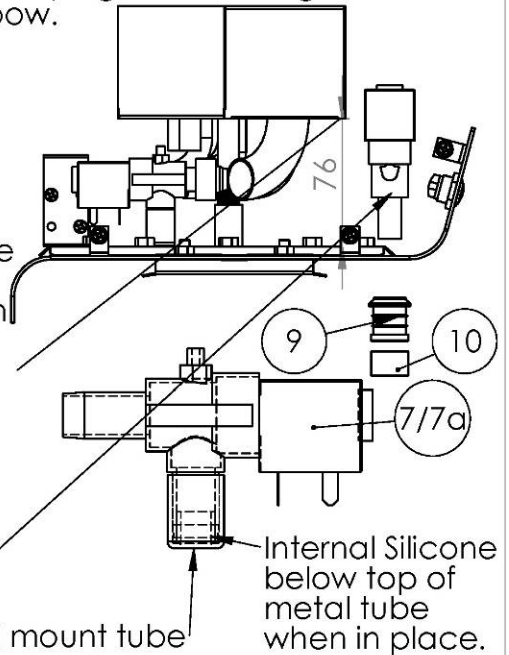

The water dispense valve is held in place by a compression fit into the silicone mount. To remove the valve pull it upwards with force. The metal shroud can come off and should be in place on the mount before reinsertion of the solenoid

Metal mount tube

Internal Silicone below top of metal tube when in place.


DESCRIPTION: Spare Parts Upper & Dispense Valve Removal

DWG NO.: JT6T-034A-d DRAWN BY BB 28-03-18 C.O. 270

TROUBLESHOOTING – LCD DIAGNOSTIC GUIDE:

The Jet 6 Twin uses an electronic diagnostic system to help determine faults. If an error is detected a message is displayed through the LCD screen.

THERMISTOR ERROR

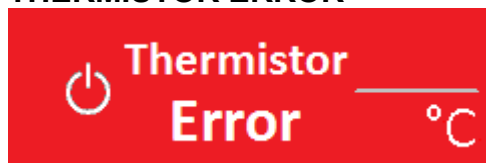

Electronic check:

- This indicates that the thermistor is possibly measuring such a large resistance that it assumes the thermistor circuit is open.
- This indicates that the thermistor is possibly measuring zero resistance. It assumes the thermistor has failed short circuit.
- The element and inlet valve are turned OFF when this error is detected
- This is a recoverable error. When the correct range of resistance is measured, normal operation resumes

Probable causes:

1. The thermistor probe is unplugged from the 4way connector on the PCB or the thermistor has failed open circuit.
2. The thermistor has failed in a closed circuit manner.

Action required:

1. Check that the thermistor is plugged in to the PCB correctly. If it is, replace the thermistor.

OVERFILL ERROR



Electronic check:

- This indicates that the overflow water level probe has been reached
- The element and inlet valve are turned OFF when this error is detected
- This is a recoverable error. When the water drops off the overflow water level probe, normal operation resumes.


Probable causes:

1. The machine is wired incorrectly, e.g. the high level probe wire is connected to the overflow probe.
2. The tank has overfilled since the inlet solenoid has failed or is “weeping”. If the machine is turned off for a long time but still plumbed in this can cause it to fill.
3. The high level probe may have become coated in limescale and is allowing too much water in before it registers to stop.
4. If a brew is cancelled water circulating in the plumbing will return to the tank and possibly cause it to reach the low level probe (this is also more likely if the high level probe is scaled up)
5. Bubbles from the element can cause splashing inside the small tank which can trigger the overflow probe momentarily.

Action required:

1. Dispense some water via the hot water outlet and see if the problem recurs.
2. Descale the tank paying special attention to the high level probe.
3. Check water pressure, if it is too low the solenoid may allow small amounts of water in.
4. Check the solenoid for debris which may cause it to jam partially open.

PROBES ERROR

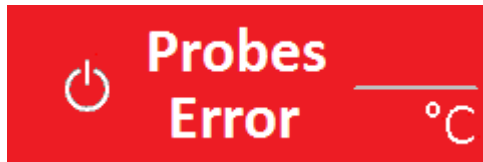

Electronic check:

- This indicates that the high level probe has been reached but the low level probe has not been detected.
- The element and inlet valve are turned OFF when this error is detected
- This is a recoverable error. If the low level probe is detected, normal operation resumes.


Probable causes:

1. The low level probe is disconnected or has a faulty wiring connection. The probe will not function and so the machine will fill until the high level probe is reached.
2. The probes are connected incorrectly, so the water reaches the first/lowest probe but it is incorrectly wired as the high level probe.
3. The low level probe may have become coated in limescale and is not being detected so water continues to fill the machine until the high level probe is detected.

Action required:

1. Re-wire the probes correctly.
2. Repair the faulty probe/connectors/wiring
3. Descale the low level probe.

HEATER ERROR

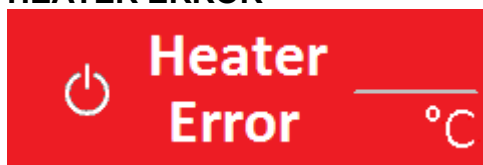

Electronic check:

- This indicates that the tank temperature has not risen in 20mins

Probable causes:

1. The element is disconnected or has failed.

Action required:

1. Replace the element.
2. Re-wire the elements correctly

WAIT LOW PRESSURE



Electronic check:

- This indicates that the tank temperature has not dropped in 6mins while the inlet solenoid is trying to allow in water.
- This is a recoverable error. When water is allowed in a temperature drop will occur and normal operation resumes

Probable causes:

1. The water supply has been cut off or is lower than 2L/min. This could be a temporary event if some other appliances on the same water line is taking in a lot of water.
2. The inlet solenoid may have failed or is has a wiring error.

Action required:

1. Replace the solenoid.
2. Check incoming the water supply.

TROUBLESHOOTING –GENERAL DIAGNOSTIC GUIDE:

The Jet 6 Twin may have problems which the electronics are unable to detect.

LOW WATER OUTPUT

The brew water should exit the sprayhead at approximately 2.1L/minute. During water calibration it should discharge 1000-1200g of hot water (960-1150ml) per side.

Probable causes:

1. The hose exiting the pump is kinked which restricts flow.
2. Other hoses exiting the upper circulation chamber are kinked which can effect flow.
3. The pump is faulty or is clogged/jammed.
4. Incorrectly calibrated.

Action required:

1. Check for kinks in all hoses.
2. Check pump operation. Although the pump may function it may not be outputting an adequate supply. During calibration it should output 1000-1200g of water per side, or if dispensing using the hot water dispense outlet it should be approximately 2L per minute. The tube coming from the pump may be temporarily removed from the metal Y piece and fed directly into the basket, this can rule out any plumbing issues, a higher flow rate of 4-6L/min will be expected from the pump when operated in this way.
3. Recalibrate the water dispense. If a faulty scales is used the volume will be incorrect.

HIGH WATER OUTPUT

The brew water should exit the sprayhead at approximately 2.1L/minute. During most brew cycles the solenoid valve feeding the sprayhead should close at which time no water should exit the sprayhead after a draining time of approx. 10 seconds after the solenoid closes.

Probable causes:

1. The valve feeding the sprayhead is faulty. The valve mounts onto a metal tube with some silicone tube. If too much tube is used it can rise up over the top of the metal mounting tube and cause the valve's plunger to be forced into an open position. As both the valve and silicone tube are transparent it may be possible to see if the silicone tube is past the top of the metal tube.
2. Kinks in any tubes can cause flow problems in the machine which could cause unusually high flowrates.
3. Incorrectly calibrated.

Action required:


1. Check the valve and remove and reseal it if necessary.
2. Check for kinks in all hoses.
3. Recalibrate the water dispense. If a dry basket is used during calibration then some water may be retained in the basket giving a lower estimate. If hot water is left to stand then some may evaporate giving a lower weight when weighed, so the machine will dispense too much as it thinks it has a lower flowrate than it actually has.

GRINDER OUTPUT

The grinder works on a timed basis, estimating how many grams are dispensed per second. During calibration if the grinder is empty and clean then grinds will cling to the grinder components and the 10 second calibration grind will dispense a lower weight than if the machine was in normal operation running for 10 seconds. So before calibrating a small amount of beans should be passed through the grinder.


Adjusting bean type, roast, humidity, grinder settings etc. can also result in higher/lower weights than expected.

WIRING SCHEMATIC 5.6kW

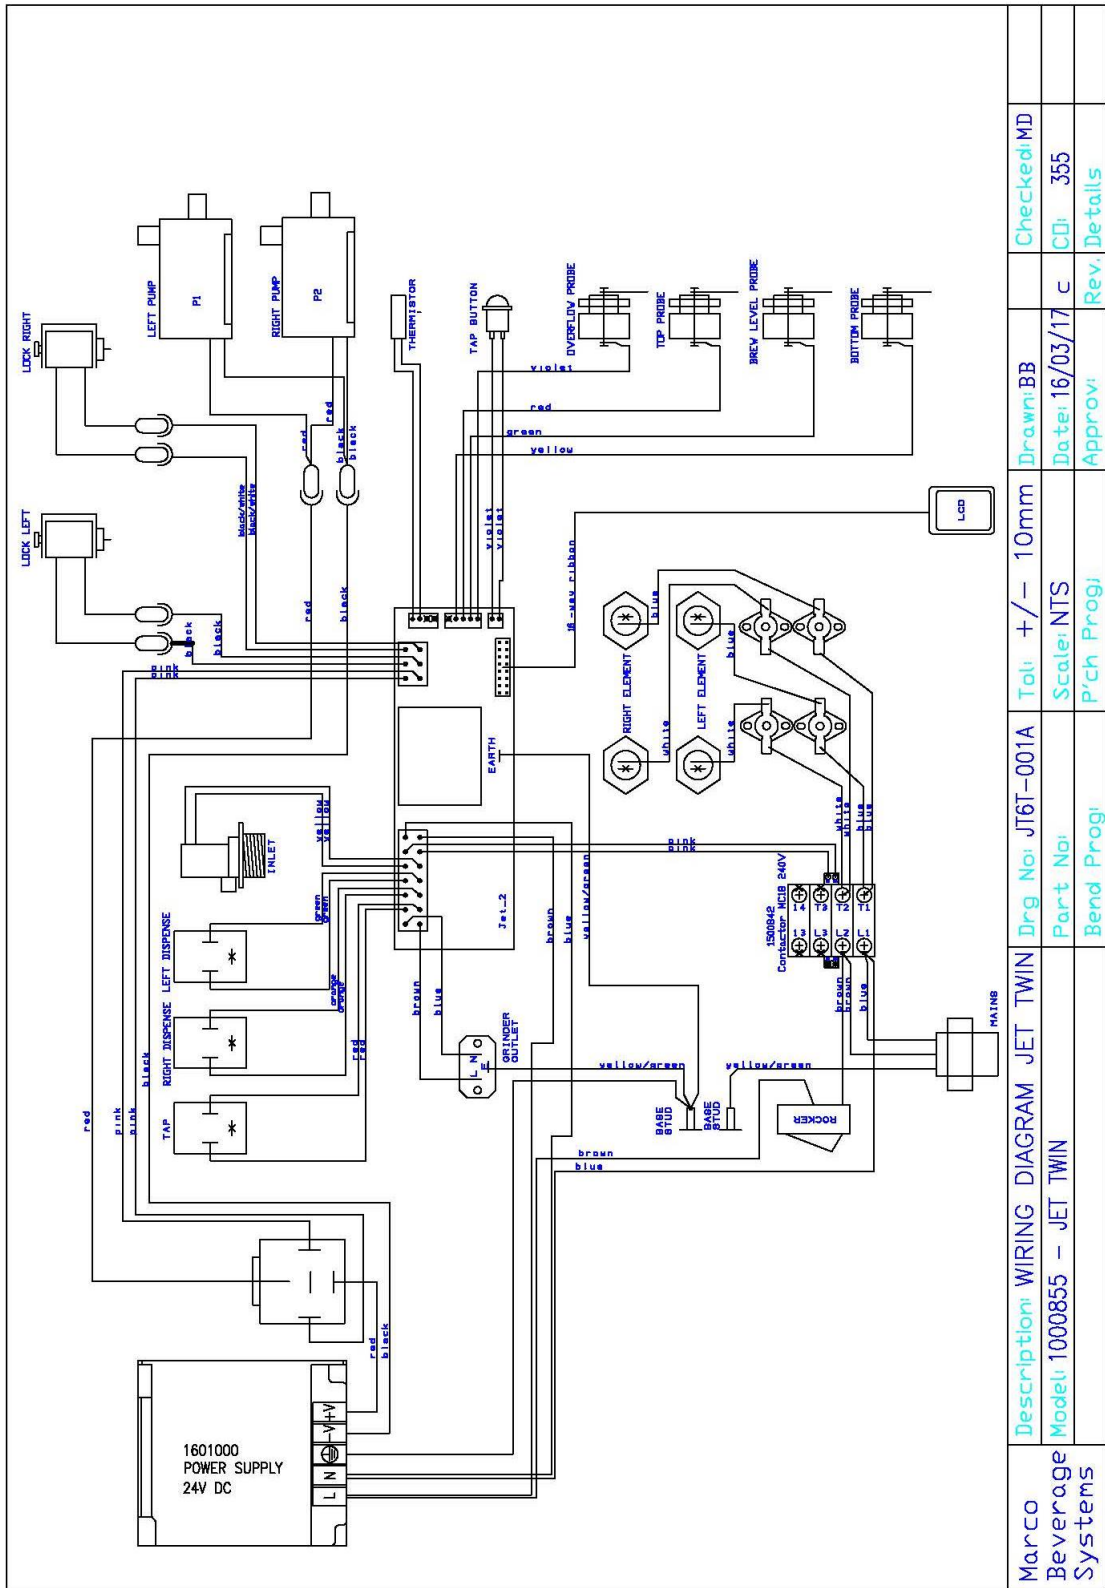


Marco Beverage Systems	Description: WIRING DIAGRAM JET TWIN	Dwg No: JT6T-001A	Tol: +/- 10mm	Drawn: BB	Checked: MD
	Model: 1000855 - JET TWIN	Part No:	Scale: NTS	Date: 16/03/17	CD: 355
		Bend Prog:	P'ch Prog:	Approv:	Rev. Details

WIRING SCHEMATIC 3.6kW MJ VERSION

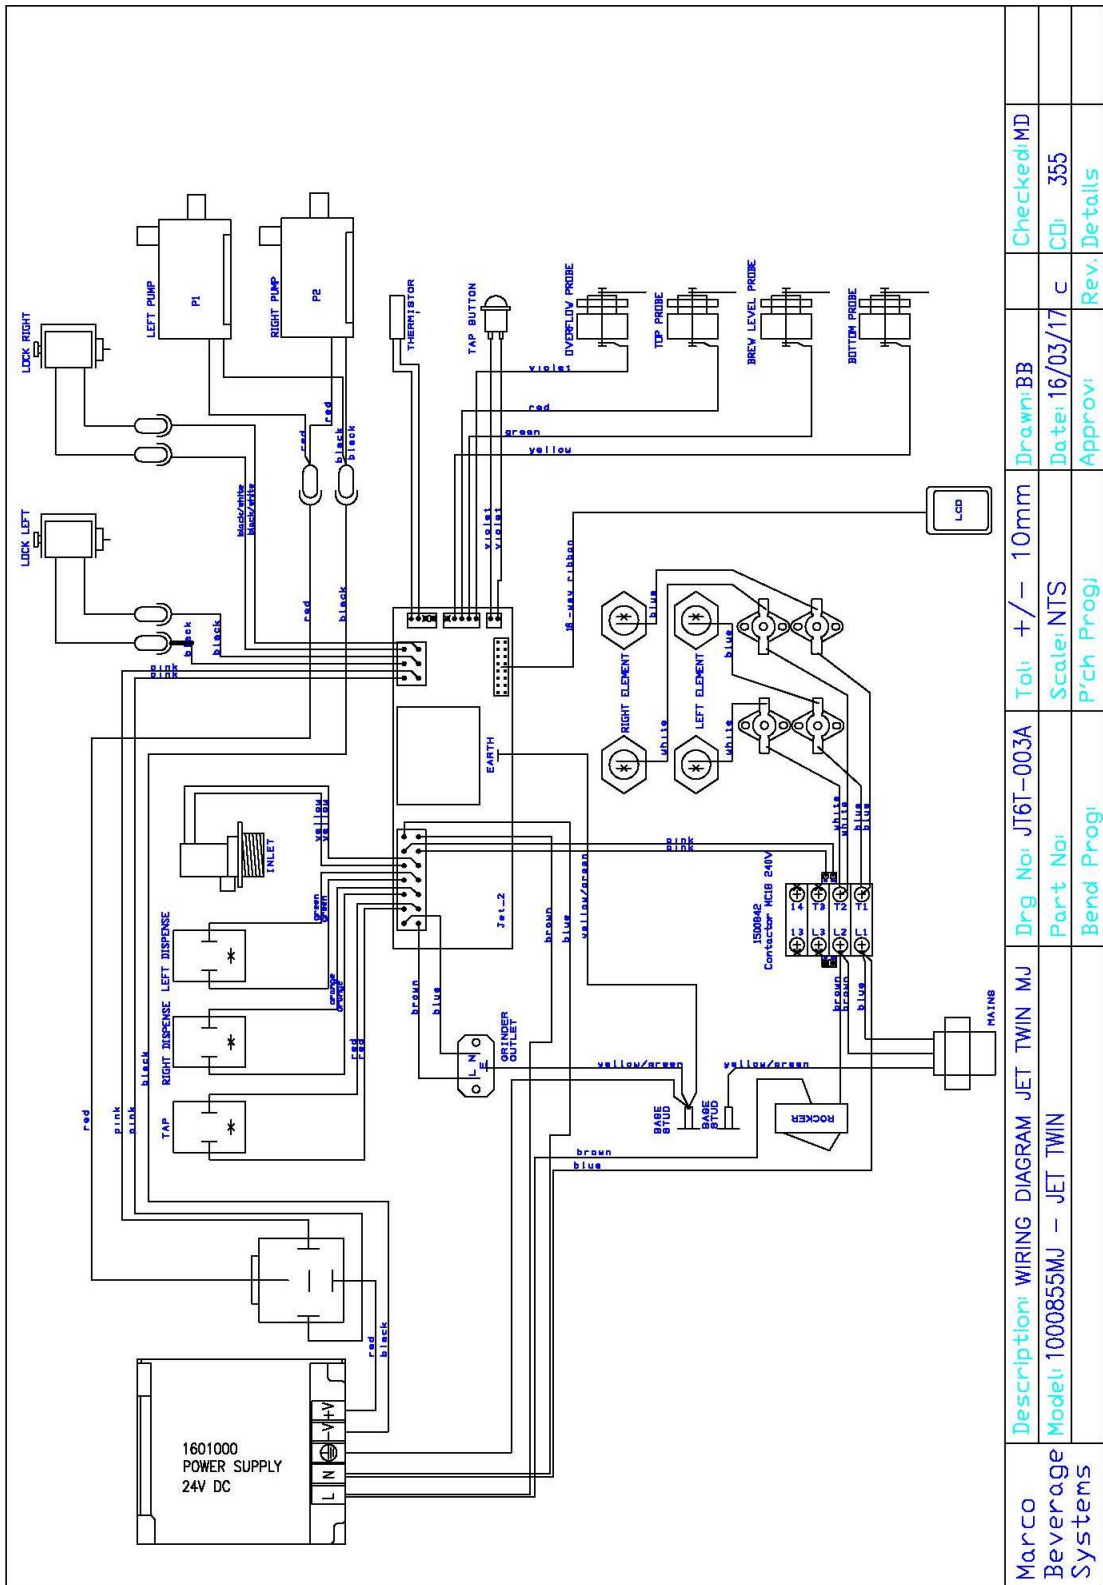

Marco Beverage Systems	Description: WIRING DIAGRAM JET TWIN MJ	Drwg No: JT6T-003A	Tol: +/- 10mm	Drawn: BB	Checked: MD
	Model: 1000855MJ - JET TWIN	Part No:	Scale: NTS	Date: 16/03/17	CD: 355
		Bend Progi:	P'ch Progi	Approv:	Rev: Details

WIRING SCHEMATIC 5.6kW US VERSION

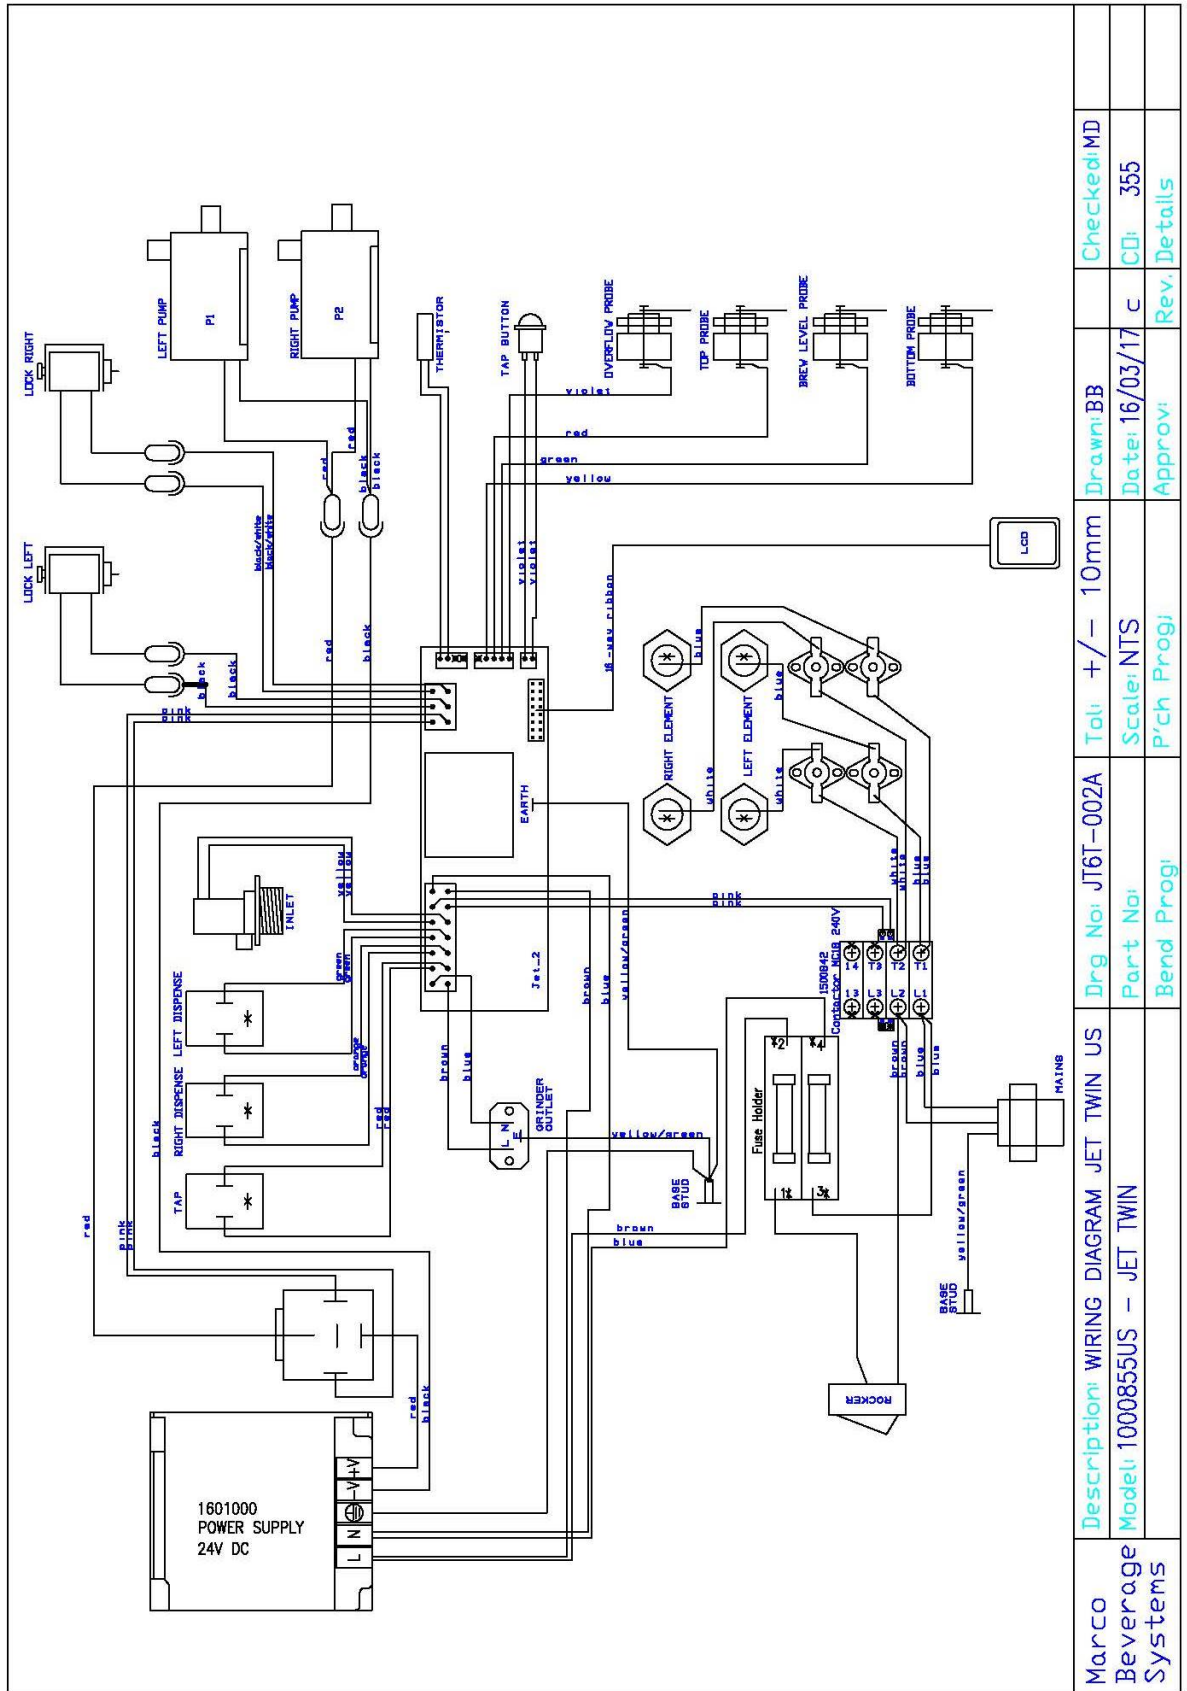

Marco Beverage Systems	Description: WIRING DIAGRAM JET TWIN US	Dwg No: JT6T-002A	Tol: +/- 10mm	Drawn: BB	Checked: MD
	Model: 1000855US - JET TWIN	Part No:	Scale: NTS	Date: 16/03/17	CD: 355
		Bend Progi:	P'ch Progi:	Approv:	Rev: Details

GENERAL SPARE PARTS LIST
(refer to earlier drawings for further parts listing)

Part Number	Description
1500985	ELEMENT 2.8kW 230V
1000987	Element 1.8kW 200V (US & MJ)
1600691	Thermistor Assembly
1502260	Solenoid 24VDC Basket Lock
1502158	Valve 12mm Bore 230V 30E Vent Vend
1502161	Valve 12mm Bore 230V 40E Vent Vend (US ONLY)
1502151	VALVE DUMP 240Vac
1502164	Valve 12mm Bore 230V U35E (US ONLY)
1502171	Valve Inlet 90 Deg 220V - 2L/min
1800301	Gasket Sprayhead 186x146x6mm
1801175	Sprayhead Disc 156mm with grommets
1800690	Water Inlet Hose WRC
1800692	Hose Water Inlet 3/8 NPT (only for US)
1800693	Hose Water Inlet 9/16"-24 UNEF(3/8 Compression) (only for US) after S/N 0917xxxx
1501559	Pump Topsflo 24V DC
1600203	P.C.B Jet Twin Control
1600202C	P.C.B. Touchscreen 3.2inch Integrated Memory Complete
1501183	16 Way Ribbon Cable Assembly 700mm
1500840	CONTACTOR B&J 240V AC
1800770	O RING 4" RED SILICONE
2300023	Basket Complete 233x136mm (with syphon)
2300277	Driptray Complete JET
1800402	Grommet Silicone 4mmID 7mmPanel dia
2301339	Probe Quad 120mm/85mm/65mm/no tab
1700169	Insulated Urn 6L
8000151	Filter Paper Jet 380-152 (52gsm)
8000240	Urn Cleanser (800g Tub)



