PACKAGING



- 3 or 8 litre options
- Vacuum insulated tank for up to 70% more energy-efficiency
- Counter cut-outs required
- 28 litre output per hour
- 156 cups (180ml) per hour



OPTIONAL	
<b>DRIP TRAY</b> 2300268	

NAME ORDER CODE	DIMENSIONS (D x W x H mm)	TAP TO COUNTER (T mm)
MIX 1 Button Font 1000878	30 x 30 x 242	200
MIX 3 Button Font 1000879	30 x 30 x 242	200

NAME ORDER CODE	POWER @ 230V	IMMEDIATE DRAW OFF	DIMENSIONS (D x W x H mm)	PLUMBING REQS
MIX UC3 1000880	2.8kW	3 L	385 x 210 x 444	3/4" BSP
MIX UC8 1000887	2.8kW	8 L	385 x 210 x 617	3/4" BSP


NAME ORDER CODE	PACKED WEIGHT	PACKAGING DIMENSIONS (L x W x H mm)	QUANTITY PER PALLET
MIX UC3 1000880	11kg	450 × 290 × 540	24
MIX UC8 1000887	14kg	450 × 290 × 700	18
MIX 1 Button Font 1000878	2kg	290 x 570 x 215	30
MIX 3 Button Font 1000879	2kg	290 x 570 x 215	30


STYLISH, SPACE-SAVING FONT WITH PROGRAMMABLE UNDERCOUNTER BOILER TO DISPENSE THREE TEMPERATURES, THREE VOLUMES IN AN INSTANT.

# MIX 1 OR 3 BUTTON FONTS WITH MIX UC3/UC8

### COUNTER CUT-OUT WITH DRIP TRAY

# Ø 1 ½"/32mm Ø 4.1"/ 105mm For drip tray only

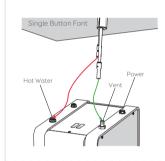


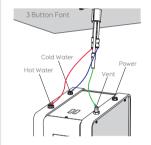


# MIX 3 BUTTON FONT 1000879 MIX 1 BUTTON FONT 1000878

### MIX UC3 1000880

# MIX UC8 1000887

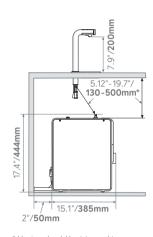



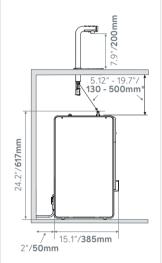

\* Hosing should be trimmed to ensure continuous drop from font to boiler

# **VENTILATION REQUIREMENTS**

50mm/1.9" clearance required at each side and back of machine if installed in an enclosed cabinet.

## **ELECTRICAL INSTALLATION PROCEDURE**

When installing the machine, always observe the local regulations and standards. The standard machine is supplied with a UK 3-pin plug. For EU models a 2-pin CEE-7 plug will be supplied. US models will be supplied with the suitable plug. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

# PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 145psi (100 - 1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine is supplied with a 3/4" BSP connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through. Especially for new installations.

- Connect the hose to the inlet valve of the boiler.
   Make sure a sealing washer is fitted.
- Turn on water and check for leaks.

## OPERATING BOILER FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
- Ensure water valve is on.
- Plug boiler into suitable socket.
- Turn on the power switch.
- The "Wait" progress circle will be visible on the screen and the machine will fill to a safe level, above the elements, before heating.
- The "Ready" tick will come up on screen when the machine is full and up to normal operating temperature (approx. 10/20 mins.).
- The boiler is now ready for use the display will show the button settings and the "Ready" status tick.
- The Boiler may now be used to dispense Hot Water to the preset factory settings.

**NOTE:** Because the boiler is electronically controlled no priming is necessary. The element cannot switch on until a safe level of water is reached.