

JET TWIN 1000855US

- Operator friendly and easy-to-use
- Vacuum insulated urn for energy-efficiency and temperature retention
- Two power options

DIMENSIONS

- Single (1.5 gallon) or Twin (3 gallon) options
- Pre-set recipe and volume options for morning, afternoon and evening
- Variable batch volumes
- Basket safety lock during brewing

PRECISE, PROGRAMMABLE BATCH BREWER FOR HIGHER VOLUME REQUIREMENTS.





	NAME ORDER CODE	DIMENSIONS (D x W x H inches)		
	Jet Grinder 1000891	22.8 x 11.8 x 31.4		
	Jet Urn 1700169	13.5 x 9 x 15		

NAME ORDER CODE	POWER @ 230V	FULL BREW	CUPS PER HOUR	DIMENSIONS (D x W x H inches)	NEMA	PLUMBING REQS
Jet 6 5.6kW 1000850US	5.6Kw	1.5 GAL	250	17.4 x 11.9 x 33.3	L6-30P	3/8" Compression or 3/8" John Guest
Jet 6 2.8kW 1000851US	2.8kW	1.5 GAL	156	17.4 x 11.9 x 33.3	L6-20P	3/8" Compression or 3/8" John Guest
Jet Twin 1000855US	5.6Kw	1.5 GAL (per urn)	250	17.5 x 24 x 35.2	L6-30P	3/8" NPT


JET 6 BATCH BREWER


DIMENSIONS

11.9"/303mm

CLEARANCE

JET 6 2.8KW 1000851US **JET 6 5.6KW** 1000850US

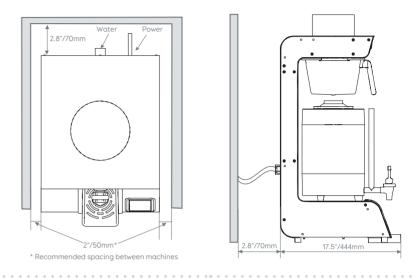

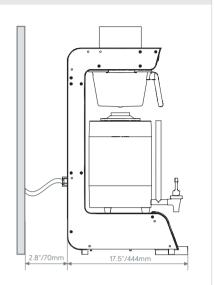

ELECTRICAL INSTALLATION PROCEDURE

1000850US - 5.6kW/200-230V ac

When installing the machine, always observe the local regulations and standards. The appliance is supplied with a NEMA L6-30P power cord. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

1000851US - 2.8kW/200-230V ac

When installing the machine, always observe the local regulations and standards. The appliance is supplied with a NEMA L6-20P power cord. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 -145psi (100 -1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine requires either a 3/8" compression, or 3/8" John Guest water connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through. Especially for new installations.
- Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.
- Turn on water and check for leaks.
- The SP9 Head has a drip tray attached with a drain outlet which should be plumbed to waste.