

## ⚠ Warning!

- You can use the Weego TWIN for children starting at 4lbs (1,8 kg) until the twins become too heavy for you, or have reached a joined max weight of 33lbs (15 kg).
- With premature babies ask your pediatrician before using the Weego TWIN.
- Small children can fall through a leg hole. Be sure to follow manufacturer's instructions for use and adjust inner pouch leg holes to the smallest size possible.
- Only use in front facing-in position.
- Only use when worn by an adult!
- Never use in a car!
- Always use the Weego TWIN with two babies.
- Always keep inner and outer pouch buckles and snaps fastened and zippers fully zipped during use!
- Before each use make sure all seams are sound and the pouch buckles and snaps are secure.
- Take special care when bending over or walking.
- Always pass the Weego on to other people with these instructions for use.



## Any more questions?

Then do not hesitate to contact us:

Weego GmbH  
Dubrowstrasse 29, D-14129 Berlin  
Tel. (+49) 30 - 80 10 92 62  
E-mail: [info@weego.de](mailto:info@weego.de)

# WEEGO TWIN INSTRUCTIONS FOR USE

*Please read all instructions before using your Weego Soft Baby Carrier, and keep the instructions handy for future use!*

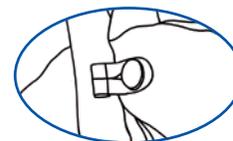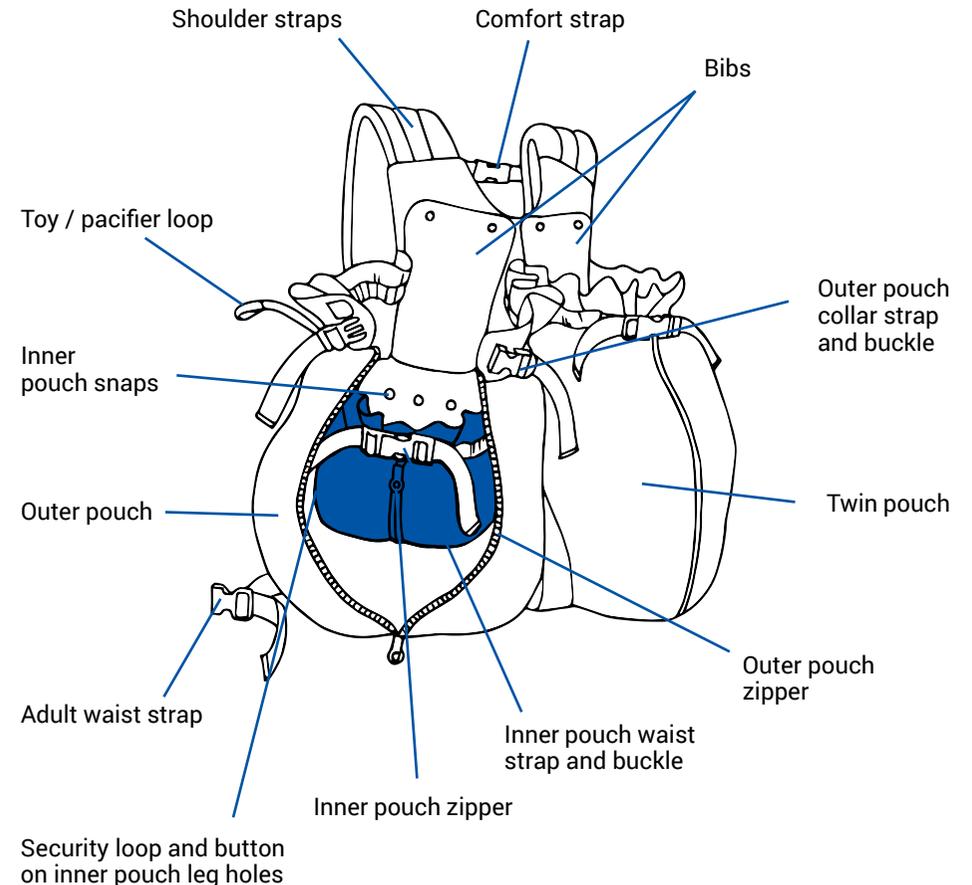

# How to use the Weego Twin

1



1. Adjust the height of the inner pouch according to the size and weight of your babies (→ see “How to use the inner pouch snaps”).

2



2. Put your arms through the shoulder straps. Grasp the comfort straps behind your head and snap the buckle 1. Fasten the waist strap and adjust to fit snugly. Adjust shoulder straps so the carrier fits high on your chest. Adjust the comfort strap for a snug fit (usually the lower it is positioned on the shoulder straps, the more comfortable it is).

3



3. With both inner and outer pouch completely opened, hold the first baby facing in and gently pull baby's legs through the leg holes of the inner pouch 2. Fasten buckle and then zip the inner pouch closed. If inner pouch seems too tight, check whether the security buttons should be opened. Before closing the zipper, pull both sides of the zipper together so it closes easily.

4




4. Close the buckle on the outer pouch collar. Then adjust the inner pouch waist strap so the inner pouch fits snugly around your baby's waist. Zip the outer pouch and adjust collar strap to cradle your baby's head. If the baby is small and the Weego outer pouch appears too big, fold the collar over to properly support the head.

5. Repeat steps 3. and 4. with the second baby.

6. Make sure your babies ride high on your chest 3. Adjust shoulder straps and waist strap again if necessary.

7. For older children, guide the babies' arms and legs through the holes in the outer pouch 4.

# How to use the security buttons and loops

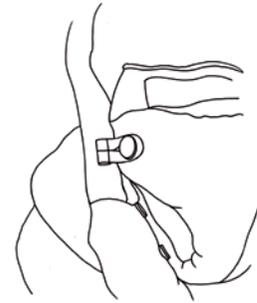

For infants weighing less than 7lbs (3.0 kg), fasten the security loops and buttons on each of the inner pouch leg holes to ensure that your babies cannot slip through the leg holes. Open the leg holes after your babies weigh 7lbs.

# How to use the inner pouch snaps

Selecting the correct inner pouch snap rows for each baby guarantees that your babies are carried at the optimum height according to their sizes.

- Before your babies can hold their own heads up steadily, make sure to properly support their heads and necks by snugly positioning the outer pouch collars at the correct point. Adjust the inner pouch positions accordingly, so that the outer pouch straps cradle over the back of the babies' heads when fastened.

- To change the height of the inner pouches:

Lay the Weego TWIN flat and fasten the inner pouches to the appropriate row of snaps. Make sure all four snaps are fastened.