GS100 Tech Sheet

Balboa Water Group System PN 54676

System Model # MM7-GS100-DCA-1.0K Software Version # 41 EPN # 3449

Base PCBA - PN 54677 PCB VS100 - PN 22964 Rev B

Base Panels VL200 (Mini) – PN 55123 VL240 (MVP240) – PN 55080 VL260 (MVP260) – PN 55081 VL401 (LCD Lite Duplex) – PN 54665 VL403 (LED Lite Duplex) – PN 54664





Template used: 40749_A.pdf 02/26/2007 54676_97_A.pdf 08/16/2010

Basic System Features and Functions

Power Requirements

- 230VAC, 1~, 16A, 50Hz
- 3 wires (line, neutral, ground)


System Outputs

Setup 1 (As Manufactured)

- 230V Pump 1, 2-Speed
- 230V Ozone
- 10V Spa Light
- 230V 1.0kW Heater

Additional Options

- MoodEFX Lighting Connects to Spa Light terminal J20
- FiberEFX Lighting Connects to Spa Light terminal J20 -

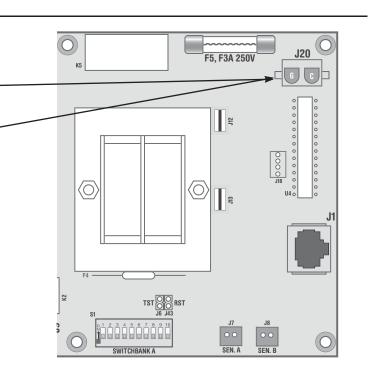

Basic System Features and Functions

Any time you change a DIP Switch, other than A1, you must reset Persistent Memory for your new DIP Switch Settings changes to take effect. If you do not reset Persistent Memory, your system may function improperly.

To reset Persistent Memory:

- Power down by disconnecting power source from spa.
- Put a jumper across J43, covering both pins. (See illustration below)
- Power up by connecting power source to spa.
- Wait until "Pr" is displayed on your panel.
- Power down again.
- Remove jumper from J43 (May also move to cover 1 pin only)
- Power up again.

About Persistent Memory and Time of Day Retention:

This system uses memory that doesn't require a battery to store a variety of settings. What we refer to as Persistent Memory stores the filter settings, the set temperature, and the heat mode.


Persistent Memory is not used for Time of Day. Only models with a Serial Deluxe panel installed (VS5xxDZ and GS5xxDZ) can display the time. However, during power loss to the spa, the system will lose the correct time, and reset to 12:00 PM when power is restored.

Power Up Display Sequence

Upon power up, you should see the following on the display:

- Three numbers in a row, which are the SSID (the System Softwai ID). The third display of these numbers is the Software Version, which should match the version of your system. For example, if three numbers are 100 E 7 3E, that is a VS511SZ at version
- Displayed next is: "24" (indicating the system is configured for a heater between 3 and 6 kW) or "12" (indicating the system is configured for a heater effectively* between 1 and 3 kW).
 "24" should appear for all VS models running at 240VAC.
 "12" should appear for all VS models running at 120VAC, as wel as all GS models. (*A heater which is rated at 4 kW at 240VAC v function as a 1 kW heater at 120VAC.)
- "*P*~" will appear to signal the start of Priming Mode.

At this point, the power up sequence is complete. Refer to the Refere Card for the VS or GS System model of your spa for information abou the spa operates from this point on, including how to adjust the Time Day if using a Serial Deluxe style panel.

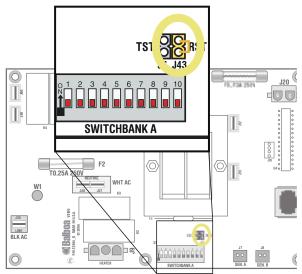

J43 on VS100/GS100 Series Main Board Shown.

Wiring Configuration and DIP Settings


Setup 1 (As Manufactured)

- 230V Pump 1, 2-Speed
- 10V Spa Light
- 230V Ozone


- 230V 1.0kW Heater
- VL401 Main Panel

HIPot Testing Note:

Disconnect slip terminal with green wires from J90 prior to performing HiPot test. Failure to disconnect will cause a false failure of the test. Reconnect terminal to J90 after successful completion of HiPot test.

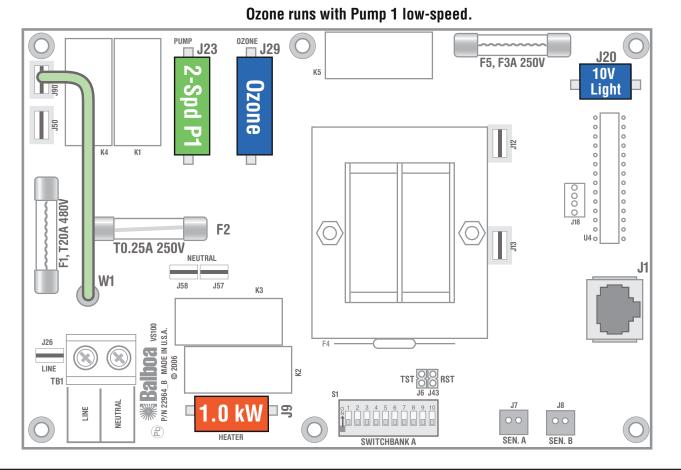

WARNING: Main Power to system should be turned OFF BEFORE adjusting DIP switches. WARNING: Persistent Memory (J43) must be RESET to allow new DIP switch settings to take effect. (See Persistent Memory page)

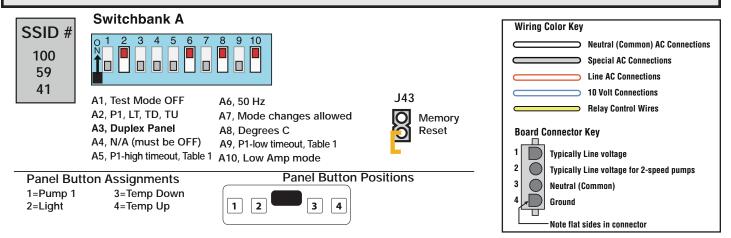

DIP Switches and Jumpers Definitions

SSID 100 59 41

Base Model GS100

DIP Switch Key

- A1 Test Mode (normally OFF)
- A2 "ON" position: Button layout will be: Pump 1, Light, Temp Down, Temp Up * "OFF" position: Button layout will be: Unused, Pump 1, Temp, Light
- A3 "ON" position: use Mini Panel * ••••• "OFF" position: use Lite Duplex or Digital Duplex panel ••• A4 N/A (must be OFF)

ump 1 Timeouts	
Low-spd Hi-sp	bu
2 hours 15 m	in
30 11111 30 11	

A10 "ON" position: heater is disabled while the high-speed pump is running (low amperage mode) "OFF" position: heater can run while the high-speed pump is running (high amperage mode)

* Panels with button layout 🗄 📲 🗉 are not compatible when A2 or A3 is ON.


Note: No blower or second pump available.

Jumper Key

J43 When jumper is placed on 2 pins during power-up, system will reset persistent memory. Leave on 1 pin only to enable persistent memory feature.

WARNING:


- •Setting DIP switches incorrectly may cause abnormal system behavior and/or damage to system components.
- •Refer to Switchbank illustration on Wiring Configuration page for correct settings for this system.
- •Contact Balboa if you require additional configuration pages added to this tech sheet.

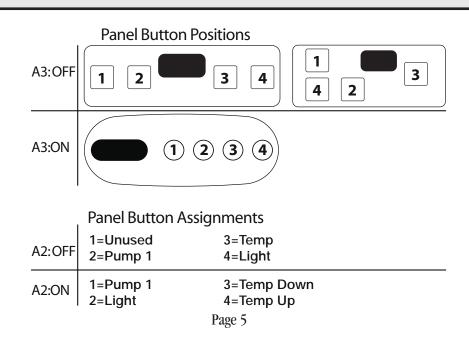


Ozone Connections

Note: A special tool is required to remove the pins from the connector body once they are snapped in place. Check with your Balboa Account Manager for information on purchasing a pin-removal tool.

Balboa Ozone connector configuration for 230VAC 50Hz:

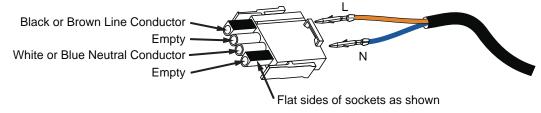

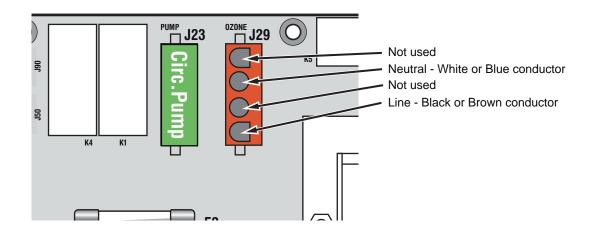

Duplex Panel Configurations



