




# SCORP Pro

Instructions V1.1

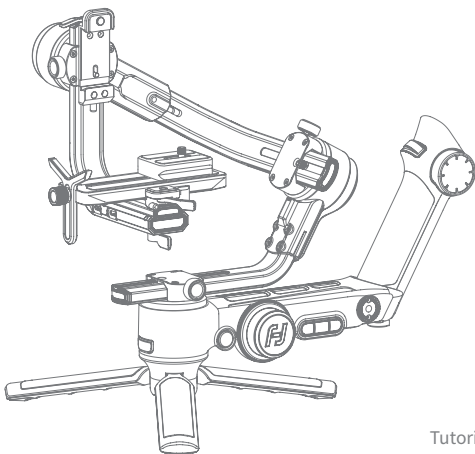

Tutorial Videos



# Catalogue

|  |           |
|--|-----------|
| <b>1. Overview</b>   | <b>1</b>  |
| <b>2. Getting started</b>  | <b>3</b>  |
| 2.1 Charging   | 3         |
| 2.2 Install the tripod   | 3         |
| 2.3 Install the remote control handle                                | 4         |
| 2.4 Adjust the gimbal to gimbal balancing position                   | 4         |
| <b>3. Mounting the Camera</b>  | <b>5</b>  |
| 3.1 Attach the quick release plate and camera backing base(Optional) | 5         |
| 3.2 Install lens holder (Optional)                                   | 5         |
| 3.3 Mount camera on gimbal   | 6         |
| <b>4. Gimbal Balancing</b>   | <b>8</b>  |
| 4.1 Balancing the tilt axis  | 8         |
| 4.2 Balancing the roll axis  | 9         |
| 4.3 Balancing the pan axis   | 9         |
| 4.4 Using the memory slider  | 9         |
| <b>5. Power ON/ OFF&amp; Wake up</b>                                 | <b>10</b> |
| 5.1 Power ON/ OFF  | 10        |
| 5.2 Lock/Unlock screen   | 11        |
| 5.3 Sleep/Wake up  | 11        |
| <b>6. Function/Modes introduction</b>                                | <b>11</b> |
| 6.1 Follow modes introduction  | 11        |
| 6.2 Other function introduction                                      | 12        |
| <b>7. App Connecting</b>   | <b>13</b> |
| 7.1 Connect with Feiyu SCORP APP                                     | 13        |
| 7.2 Function introduction of APP                                     | 13        |
| <b>8. Operation</b>  | <b>16</b> |
| 8.1 Button operation   | 16        |
| 8.2 Touch screen operation   | 20        |
| 8.3 Function operation   | 24        |
| 8.4 Remote control handle operation                                  | 29        |
| 8.5 Control ports  | 30        |
| <b>9. Specifications</b>   | <b>30</b> |

## Introduction

Feiyu SCORP Pro is a professional 3-axis stabilized handheld gimbal for DSLR and mirrorless camera which developed by Guilin Feiyu Technology Incorporated Company. It is compatible with popular DSLR and mirrorless cameras on the market.

Feiyu SCORP Pro is designed with button area, multifunction knob and touch screen, which can switch follow modes, control the rotation, image transmission transmitter and the parameters settings by one hand. The camera shutter cable is equipped for controlling the photo taking, video recording and focusing directly at handle.

Feiyu SCORP Pro also come with camera control port, image transmission port and 2 extension ports, which support to connect focus motor and other extension device at the same time.

## Tutorial

·The tutorial videos can be watched at FeiyuTech official website or scan the QR code.  
<https://www.feiyu-tech.com/play/>



## Download the App

Scan the QR code to download the app, or search for "**Feiyu SCORP**" in the App Store or Google Play.

\* Requires iOS 9.0 or above, Android 6.0 or above.




iOS




Android

## 1. Overview

\* Not include camera.

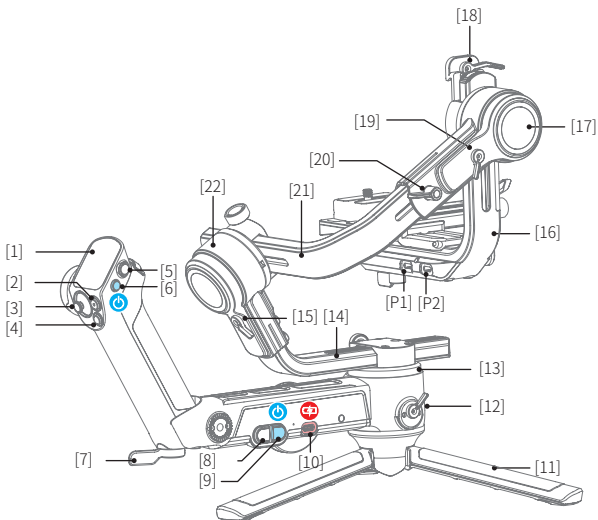

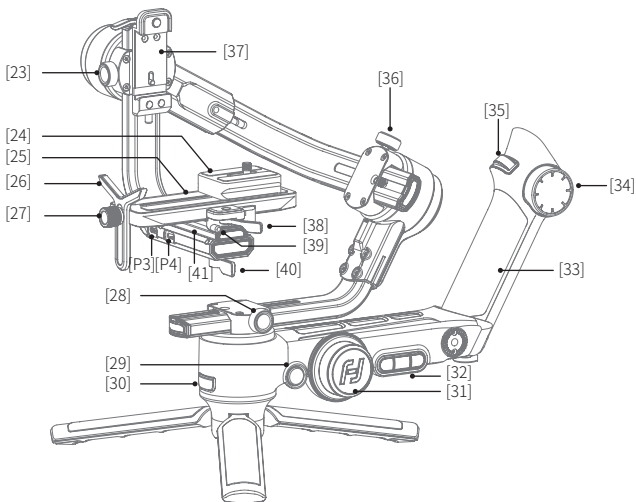


- |                           |   |                                       |
|---------------------------|---|---------------------------------------|
| [1] Touch Screen          | [18] Vertical quick release plate safety lock | [33] Remote control handle            |
| [2] Shutter button        | [19] Tilt lock                                | [34] Multifunction knob (Handle knob) |
| [3] Joystick              | [20] Cross arm extending position knob        | [35] Focusing wheel                   |
| [4] Handle mode button    | [21] Cross arm                                | [36] Cross arm lock knob              |
| [5] Customizable button   | [22] Roll axis                                | [37] Vertical mounting plate          |
| [6] Handle power button   | [23] Slide arm lock knob                      | [38] Quick release plate safety lock  |
| [7] Handle lock           | [24] Camera backing base                      | [39] Anti-drop column                 |
| [8] Gimbal mode button    | [25] Quick release plate                      | [40] Slider lock                      |
| [9] Gimbal power button   | [26] Lens holder                              | [41] Fixed plate slider               |
| [10] Type-C charging port | [27] Lens holder screw                        | [P1] Camera control port              |
| [11] Tripod               | [28] Vertical arm lock knob                   | [P2] Image transmission port          |
| [12] Pan lock             | [29] Knob function switching button           | [P3] Extension port 1                 |
| [13] Pan axis             | [30] Trigger button                           | [P4] Extension port 2                 |
| [14] Vertical arm         | [31] Multifunction knob (Main knob)           |                                       |
| [15] Roll lock            | [32] A /B /C button (Record Mark points)      |                                       |
| [16] Slide arm            |   |                                       |
| [17] Tilt axis            |   |                                       |

## 2. Getting started

### 2.1 Charging


Please fully charge the battery before power on the gimbal for the first time. Charging with USB2.0 to Type-C cable, supports quick charge.



① Gimbal charging port  
Charge for gimbal and handle





② Handle charging port  
Handle charging only

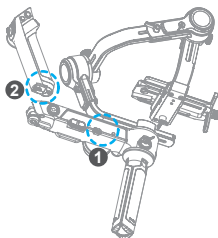

### 2.2 Install the tripod


Install the 3/8 - 1/4 inch thread insert ① with the slot side down on the 1/4 inch screw which is on the top of the tripod (The thread insert is factory mounted). Mount the tripod ② to the bottom of the gimbal, then unfold the tripod and place the gimbal on a flat surface.

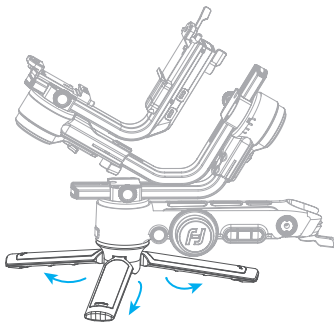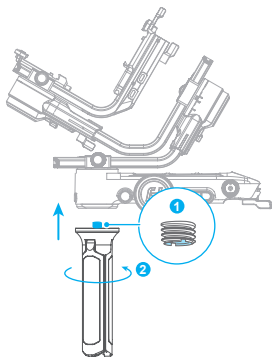

## 2.3 Install the remote control handle


When install the handle, please wedge in the buckle ①, then push down the handle from ②, until the handle lock ③ is engaged, then toggle the handle lock lever to the locked position to finish the installation.

When detach the handle, please toggle the handle lock lever to the unlocked position, and pull up the handle.

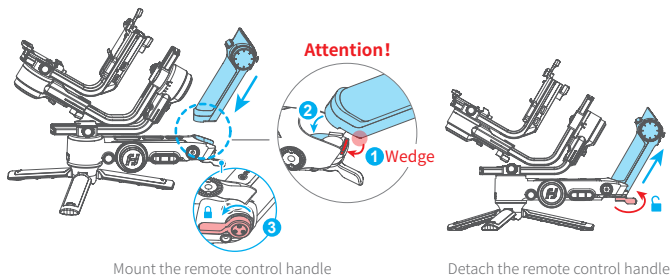

## 2.4 Adjust the gimbal to gimbal balancing position

The gimbal is folded by default, please toggle the tilt lock, roll lock, and pan lock levers to the unlocked position and adjust the gimbal to **gimbal balancing position**, and then toggle the three locks to the locked position.

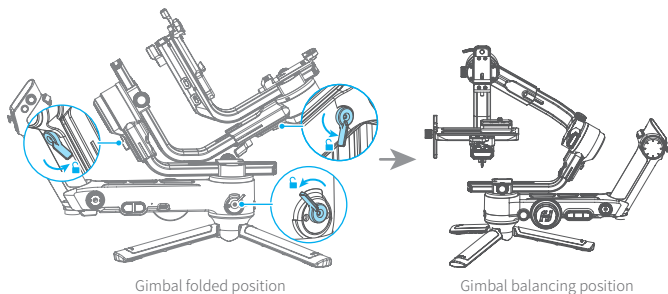


### 3. Mounting the Camera


Before mounting the camera, make sure the camera is ready for shooting (Install the camera lens, and the lens cover should be removed, the memory card and battery needs to be inserted to the camera, and battery is fully charged) , complete all the steps which mentioned in chapter "2. Getting started" and the gimbal is adjusted to **gimbal balancing position**. Make sure the gimbal is powered off or in sleep mode before mounting the camera.

#### 3.1 Attach the quick release plate and camera backing base(Optional)

Attach the quick release plate to camera by tightening the screw. User can choose to attach the camera backing base if needed ( For example, when using a long or heavy lens). Attach the camera backing base to camera, then attach it to quick release plate by tightening 2 screws.

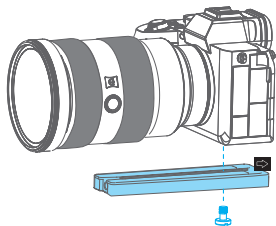


Attach with quick release plate only

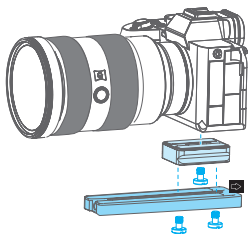

Attach with camera backing base and quick release plate

#### 3.2 Install lens holder (Optional)

Install the lens holder on the quick release plate if needed, the rubber of the lens holder must be directly under the lens. It is recommended to use the lens holder when using a long or heavy lens.

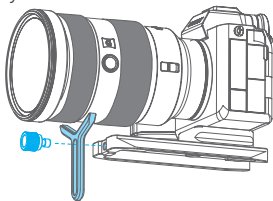





### 3.3 Mount camera on gimbal

#### Horizontal mounting

Unlock the quick release plate safety lock ①, push the plate with the mounted camera into the slot ② in direction of arrow, lock the safety lock ① once the camera is roughly balanced. It is recommended to push the camera against the tilt axis. Unlock the slider lock ③ to move the camera left or right according to camera's width, then lock the slider lock ③.

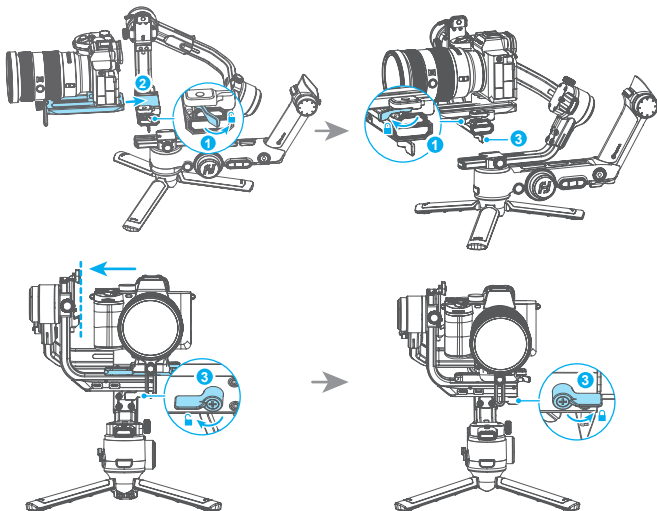


**Remove:** Unlock the quick release plate safety lock ①, remove the quick release plate while pressing anti-drop column ④.

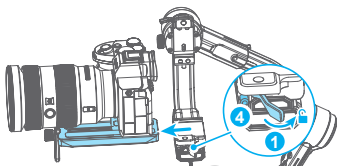

### **Vertical mounting**

Unlock the vertical quick release plate safety lock ⑤, push the plate with the mounted camera into the slot ⑥, lock the safety lock ⑤ once the camera is roughly balanced.

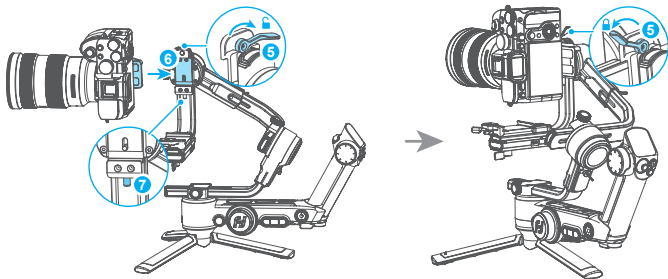

**Remove:** Please refer to the remove steps for horizontal mounting. Unlock the quick release plate safety lock ⑤, remove the quick release plate while pressing anti-drop column ⑦.

## 4. Gimbal Balancing

Please balance the gimbal before shooting. Make sure the camera and lens are ready for shooting, and the gimbal is powered off or in sleep mode before balancing. **It is recommended to hold up the camera first, then move the slide arm, cross arm and vertical arm.**




Tutorial Videos

Take horizontal mounting as an example.

### 4.1 Balancing the tilt axis


#### 4.1.1 Balancing the vertical tilt

- Toggle the tilt lock levers ① to the unlocked position, and loosen the slide arm lock knob ②.
- Rotate the tilt axis so that the camera lens is pointing upward. Check the direction which the lens tilts to.
- If the lens tilts to one side, then the camera is that side heavy, move the slide arm ③ to the opposite direction, until the camera is steady pointing upward.
- Tighten the slide arm lock knob ② while holding the camera.

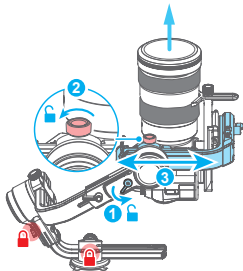

#### 4.1.2 Balancing depth for the tilt axis


- Rotate the tilt axis so that the camera lens is pointing forward. Check the direction which the lens tilts to.
- If the lens tilts to one side, then the camera is that side heavy, unlock the quick release plate safety lock ① and then move the quick release plate to the opposite direction, until the camera is steady pointing forward.
- Lock the quick release plate safety lock ① while holding the camera.

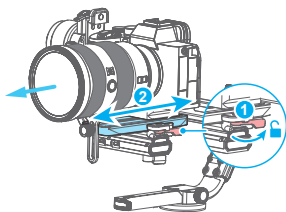

The tilt axis is balanced when the camera is steady while tilted up or down by 45°.

## 4.2 Balancing the roll axis


- Toggle the roll lock ① levers to the unlocked position, check the direction which the camera tilts to.
- If the camera tilts to one side, then the camera is that side heavy, loosen the cross arm lock knob ② and then move the cross arm ③ to the opposite direction, until the camera can stay still and horizontal to the ground.
- Tighten the cross arm lock knob ②.

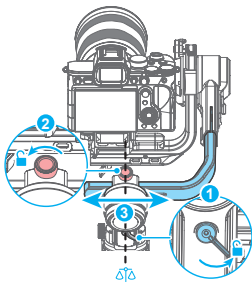

The roll axis is balanced when the camera can stay still and horizontal to the ground.

## 4.3 Balancing the pan axis

- Toggle the pan lock ① levers to the unlocked position. Hold the tripod, and tilt the gimbal forward until it is horizontal to the ground.
- If the camera tilts to one side, then the camera is that side heavy, loosen the vertical arm lock knob ② and then move the vertical arm ③ to the opposite direction, until the camera can stay still and horizontal to the ground.
- Tighten the vertical arm lock knob ②.


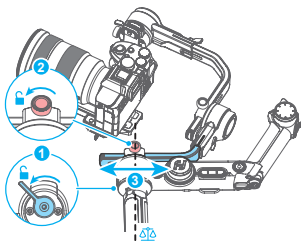


The pan axis is balanced when the camera can stay still and horizontal to the ground.

## 4.4 Using the memory slider

Feiyu SCORP Pro come with the memory slider which can make balancing easier. After balancing the gimbal, move the memory slider to the hole in axis, and make the red dot on the memory slider exposing from the hole, in order to mark the current position.

Next time, If the objects which users mount on are the same, users can just move the axis to the position which can make the red dot exposing from the hole to make the gimbal balanced.

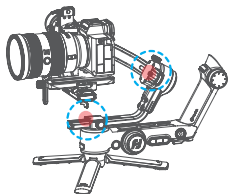

↑ Memory slider

← The position of memory sliders

## 5. Power ON/ OFF& Wake up

### 5.1 Power ON/ OFF



(1) Before power on the gimbal, make sure you have balanced gimbal, and unlocked all the three axes.

(2) If you haven't unlocked all the 3 axes, gimbal will enter sleep mode to protect itself. **Please single tap power button to wake up gimbal after unlocked all the 3 axes.**

(3) Please set motor power first after powering on gimbal for the first time or after changing a new camera/lens. (Please refer to chapter 8.3.1)




Long press the power button and release it when you hear the beep sound to power on/ off.

**Before using for the first time, please connect the gimbal with the handle and power on them, they will be paired automatically, and the handle can control the gimbal remotely when it is detached.**

#### **After pairing:**

- When the remote control handle is installed on gimbal, both two power buttons can power on/off the whole combination. When the handle is detached, please power on each part separately.

- Both two power buttons can power off the whole combination.

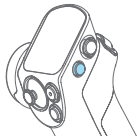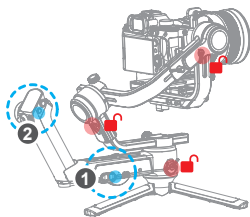


① Gimbal power button

② Handle power button


## 5.2 Lock/Unlock screen

**Lock screen:** Single tap to lock screen.

**Unlock screen:** Single tap again to unlock the screen.

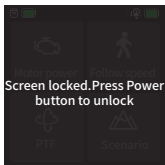


Lock screen

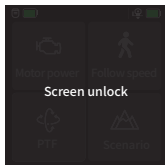


Unlock screen

## 5.3 Sleep/Wake up

**Sleep:** Double tap power button to enter sleep mode.

**Wake up:** Single tap power button or tap the  icon on the screen in sleep mode to wake up gimbal.

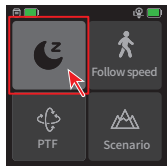

## 6. Function/Modes introduction

### 6.1 Follow modes introduction

① **PF** (Default mode)

Pan follow, only the pan axis follows the movement of user's hand.

② **PTF**

Pan and tilt follow, where both the pan and tilt axes follow the movement of user's hand, but roll axis does not.

③ **FPV**


Pan, tilt and roll follow, where all 3 axes follow the movement of user's hand.

④ **Lock**


All 3 axes do not follow the movement of user's hand, gimbal keeps the direction of the camera fixed.

⑤ **FFW**


Flash follow, where all 3 axes follow the movement of user's hand in high follow speed.

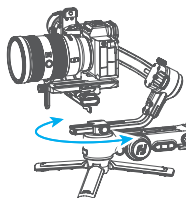


① PT

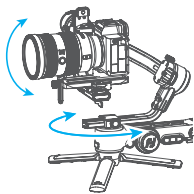


② PTF

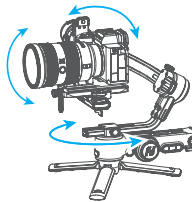

③ FPV

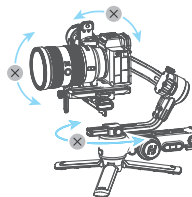

④ Lock

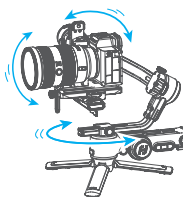

⑤ FFV

## 6.2 Other function introduction

### **Auto rotation** (Please refer to chapter 8.3.5)

Camera will auto rotate to shoot according to the rotation speed and direction that set by users. It can be used to achieve the image rotating scene which been used frequently in movie Inception.

### **Portrait mode** (Please refer to chapter 8.3.7)

Enter portrait mode for recording portrait video or live streaming.

### **Selfie mode** (Please refer to chapter 8.3.8)

The camera turns 180° horizontally, selfie shooting is available.

### **Track video** (Please refer to chapter 8.3.9)

Record track video according to the waypoints which has been set.

### **Manual lock**

Manually move camera to desired position, and hold for half a second. New tilt /pan positions are automatically saved.

## 7. App Connecting


### 7.1 Connect with Feiyu SCORP APP

(1) Turn on the gimbal

(2) Turn on the smartphone Bluetooth, run Feiyu SCORP APP, tap the top of the home page to connect gimbal.

After the connection succeeds, it's easy to control gimbal via APP, including control the pan and tilt axis angle with the virtual joystick, switch modes, set motor power/camera parameters/follow speed, set other functions, parameters, and update firmware.

### 7.2 Function introduction of APP

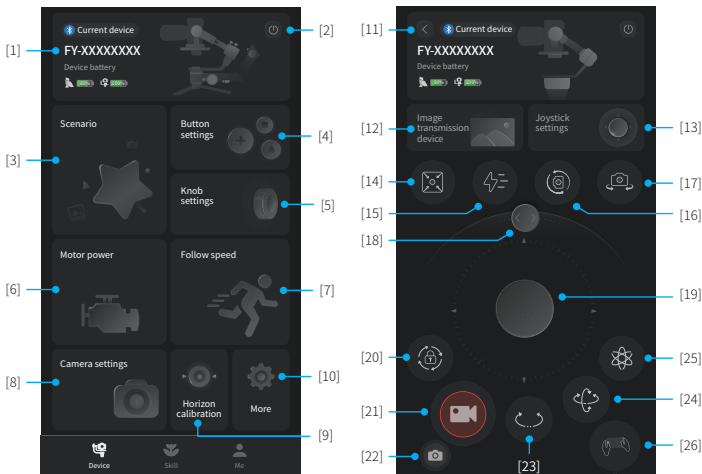

#### [1] Gimbal control access

Display the product name and device battery of current connecting gimbal, tap to enter gimbal operation interface, which allows user to use virtual joystick to control gimbal, switch follow modes, recenter gimbal, adjust horizontal angle manually.



When not connected to gimbal, prompt user to connect with gimbal.

## [2] Disconnect device

Tap to disconnect current connecting device.

## [3] Scenarios

Provide auto rotation (can be used to achieve the image rotating scene which been used frequently in movie Inception), panorama, timelapse (Motionlapse/Static timelapse/Hyperlapse) , track video and other usage scenarios for user.

## [4] Button settings

Set the function when press and hold the trigger button.  
Set auto focus time, attitude change time for A/B/C button.

## [5] Knob settings

Set the control object for multifunction knob (Main knob and aux knob), can be set as control axes, control electronic focus, control focus motor.

Set damp, speed, smooth, sound, indicator light and synchronous switch\* for two knobs in "More".

---

\*Main knob and aux knob will control the same object while the synchronous switch is turning on. And the control object of aux knob will change synchronously if user switch the control object of main knob now.

## [6] Motor power settings

Adjust tilt, roll, pan axes motor power manually or use auto tune function to tune the motor power automatically (Recommended).



Please set motor power first after power on gimbal for the first time or after change a new camera/lens.

## [7] Follow speed

Select different preset gimbal follow speed profiles: Slow/Med/Fast, or custom follow speed and dead zone.

## [8] Camera settings

Can set camera aperture, shutter speed and ISO parameters after connecting with camera.

### **[9] Horizon calibration**

Calibrate the gimbal with the auto calibration function(Recommended) or adjust it manually (When not in FPV or FFW mode).

### **[10] More**

Set boot silent, disable selfie, manual lock, check firmware information and update firmware, restore the default settings.

### **[11] Back**

Tap to return to home page.

### **[12] Connect with image transmission device**

Tap to connect image transmission device.

### **[13] Joystick settings**

Can set the joystick speed for controlling pan/tilt axis, and joystick as pan axis/tilt axis inverted.

### **[14] Recenter**

Tap to recenter the gimbal.

### **[15] Flash follow(FFW)**

Tap to enter Flash follow.

### **[16] Portrait mode**

Tap to enter portrait mode.

### **[17] Selfie mode**

Tap to enter selfie mode.

### **[18] Adjust horizontal angle**

Slide the slider to control roll axis to adjust the current horizontal angle.

### **[19] Virtual joystick**

Use virtual joystick to control pan and tilt axis.

## [20] Lock mode

Tap to enter lock mode.

## [21] Shutter

Tap to start/stop recording or take photo.

## [22] Switch between photo/video mode

Tap to switch between switch between photo/video mode

## [23] Pan follow (PF)

Tap to enter pan follow (PF) mode.

## [24] Pan and tilt follow (PTF)

Tap to enter pan and tilt follow (PTF) mode.

## [25] FPV

Tap to enter FPV mode.

## [26] Motion sensing mode

Tap to enter motion sensing mode which can control the pan and tilt axis to follow the movement of smartphone, can not switch follow modes in motion sensing mode (PF/PTF/FPV/Lock).

# 8. Operation

## 8.1 Button operation

### 8.1.1 Power button


#### Long press:

Power on/off the whole combination (Remote control handle installed)

Power on/off the gimbal (Remote control handle detached)

**Single tap:** Wake up

**Double tap:** Enter sleep mode

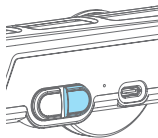

### 8.1.2 Handle power button


#### Long press:

Power on/off the whole combination (Remote control handle installed)

Power on/off the handle (Remote control handle detached)

**Single tap:** Wake up

**Double tap:** Enter sleep mode

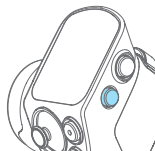


### 8.1.3 Gimbal mode button

**Single tap:** Pan follow/Lock mode (Switch in turn)

**Double tap:** PTF

**Triple tap:** FPV

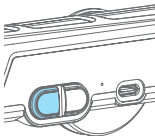

### 8.1.4 Handle mode button


**Single tap:** Pan follow/Lock mode (Switch in turn)

**Double tap:** PTF

**Triple tap:** FPV

**Long press:** Motion sensing mode (Release to exit)

Motion sensing mode is using while the handle is detached

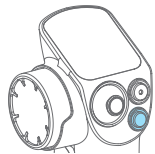


### 8.1.5 Trigger button

**Double tap:** Recenter

**Triple tap:** Enter/Exit selfie mode (Pan axis turn 180°)


**Press and hold:** PTF (Release to exit)

You can custom the function via APP.

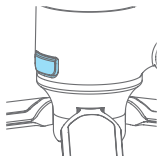

### 8.1.6 Joystick

**Push:** Control the movement of the tilt and pan axes.

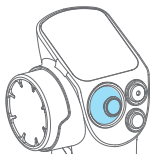


### 8.1.7 Shutter button\*

Press half way: Focus

Single tap (Fully): Start/Stop recording


Long press (Fully): Take photo

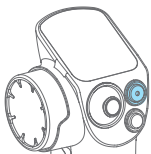

### 8.1.8 Focusing wheel\*

**Turn:** Control electronic focusing

The camera must support this function.

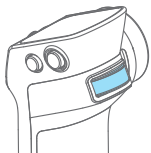


### 8.1.9 A/B/C button

**Long press:** Mark the current position as A/B/C

**Single tap:** Return to the position A/B/C that you have marked.

Can be used to mark axes/focus position.

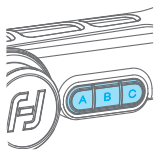


### 8.1.10 Home button

**Single tap:**

(1) Lock/Unlock screen (In home page)


(2) Return to home page (In other pages)

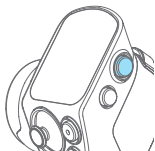

### 8.1.11 Knob function switching button

**Single tap:** Switch the control object while the multifunction knob (main knob) controlling the movement of the 3 axes (Tilt/Pan/Roll)

**Long press:** Switch the control options of multifunction knob (main knob) in turn (The movement of the 3 axes/ Electronic focus/Focus motor 1)

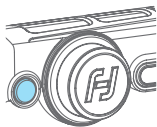


### 8.1.12 Multifunction knob (Main knob)

**Turn:**


- (1) Control the movement of the roll, tilt and pan axes.
- (2) Control focus.
- (3) Control **focus motor 1**.
- (4) Adjust the parameter in the touch screen.

Set current control option as option (1) or (2) or (3) through long press the knob function switching button or swipe up in home page.

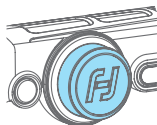

### Main knob indicator instruction

| Mode                  | Breathing light |
|-----------------------|-----------------|
| PF                    | Green           |
| PTF                   | Green / Yellow  |
| FPV                   | Red / Yellow    |
| Lock                  | Red             |
| FFW                   | Red / Yellow    |
| Downloading firmwares | Green           |
| Updating firmwares    | Red light flash |

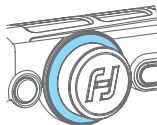


### 8.1.13 Multifunction knob (Handle knob)


**Turn:**

- (1) Control the movement of the roll, tilt and pan axes.
- (2) Control focus.
- (3) Control **focus motor 2**.
- (4) Adjust the parameter in the touch screen.

Set current control option as option (1) or (2) or (3) through swipe up in home page.

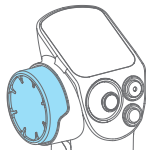


\*Need to connect with camera. Refer to the camera compatibility list on <https://www.feiyu-tech.com/feiyu-scorp-pro/>

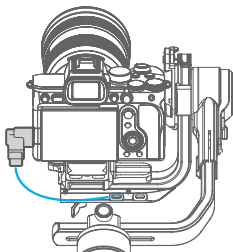

Connect camera with shutter cable

## 8.2 Touch screen operation

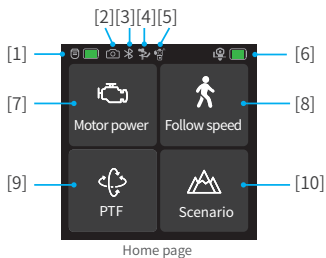

Home page

### [1] Handle battery

Show the current battery level of handle.

### [2] Camera connection

Icon appears after camera connect to the gimbal successfully. The icon won't be shown if camera doesn't connect to gimbal.

### [3] Bluetooth connection

Icon appears after Bluetooth is connecting. And the icon won't be shown if Bluetooth disconnect.

### [4] Gimbal connection icon

The icon appears when the handle is connected with gimbal, the icon won't be shown if the handle is detached.

### [5] Motion sensing icon

The icon appears after enter motion sensing mode, the icon won't be shown if gimbal is not in motion sensing mode.

### [6] Gimbal battery

Show the current battery level of gimbal.

### [7] Motor power


Use auto tune to adjust the motor power automatically, or adjust motor power for each axis manually.


### [8] Follow speed


Users can select different gimbal follow speed profiles, or customize follow speed.


### [9] Follow mode


Select gimbal follow mode.

 **PF:** Pan follow, only the pan axis follows the movement of user's hand.

 **PTF:** Pan and tilt follow, where both the pan and tilt axes follow the movement of user's hand, but roll axis does not.

 **FPV:** Pan, tilt and roll follow, where all 3 axes follow the movement of user's hand.


 **Lock:** All 3 axes do not follow the movement of user's hand, gimbal keeps the direction of the camera fixed.

 **FFW:** Flash follow, where all 3 axes follow the movement of user's hand in high follow speed.

### [10] Scenario


Select gimbal usage scenario (timelapse, auto rotation, panorama, portrait mode, selfie mode, track video, etc.)



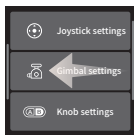

### Swipe from right to left

Joystick, gimbal and more settings

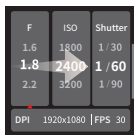

### Swipe from left to right


Shooting parameters settings



### Swipe up

Multifunction knob settings

## Swipe from right to left

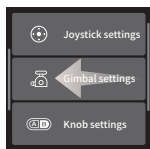

### - Joystick settings

Set the joystick speed for controlling pan/tilt axis, provide joystick direction switch.

### - Gimbal settings

Including disable selfie, manual lock, and horizon calibration settings.


### - A/B/C settings

Set auto focus time and attitude change time.

### - More

Silent switch, select language, restore the default settings, check version information.

## Swipe from left to right

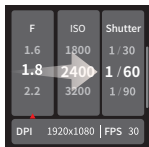

### **- Camera settings**

Set aperture, ISO, shutter speed and show current resolution, fps after connecting with camera.

## Swipe up



### **- Main knob settings**


Set the control object for multifunction knob (Main knob), can be set as control axes, control electronic focus, control focus motor.

Set damp, speed, smooth, sound, indicator light for main knob and synchronous switch for two knobs in "More".

### **- Aux knob settings**

Set the control object for multifunction knob (Aux knob), can be set as control axes, control electronic focus, control focus motor.

Set damp, speed, smooth, sound, indicator light for aux knob and synchronous switch for two knobs in "More".

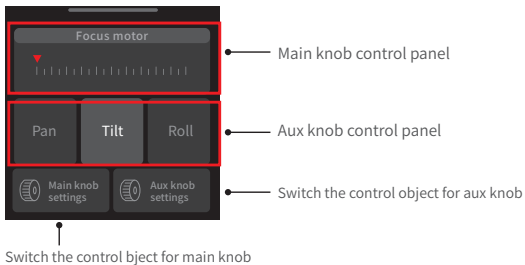

\*Main knob and aux knob will control the same object while the synchronous switch is turning on. And the control object of aux knob will change synchronously if user switch the control object of main knob now.

## 8.3 Function operation


### 8.3.1 Motor power settings

**⚠** Please set motor power first after powering on gimbal for the first time or after changing a new camera/lens.

**Auto tune:** Gimbal auto tune the motor power according to the load.


**Adjust motor power manually:** Adjust the motor power for each axis manually according to the load.

Tips: If the gimbal is vibrating in high frequency, it means the motor power is too strong. If the gimbal is shaking in low frequency and large amplitude, it means the motor power is too weak.

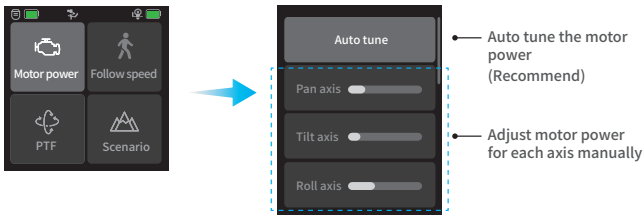


### 8.3.2 Follow speed settings

Tap "Follow speed" in home page, and select different preset gimbal follow speed profiles: Slow/Med/Fast, or custom follow speed and dead zone.

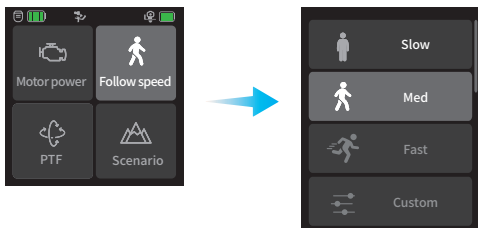



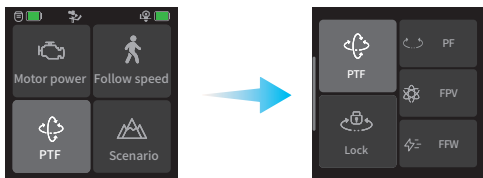


### 8.3.3 Follow mode settings

Tap the lower left icon in home page to select follow modes.




#### **Follow mode**

-  **PF:** Pan follow, only the pan axis follows the movement of user's hand.
-  **PTF:** Pan and tilt follow, where both the pan and tilt axes follow the movement of user's hand, but roll axis does not.
-  **FPV:** Pan, tilt and roll follow, where all 3 axes follow the movement of user's hand.
-  **Lock:** All 3 axes do not follow the movement of user's hand, gimbal keeps the direction of the camera fixed.
-  **FFW:** Flash follow, where all 3 axes follow the movement of user's hand in high follow speed.

### 8.3.4 Timelapse

Select “Scenario” in home page, then select “Timelapse” . Select motionlapse/static timelapse/hyperlapse according to what you need, and follow the tips to set the parameters to start shooting.

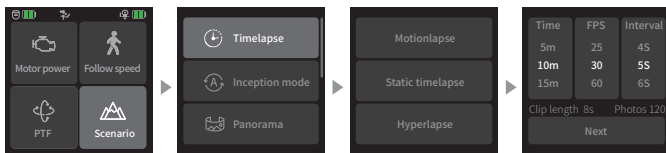

**Motionlapse:** Shoot timelapse photography according to the waypoints which has been set.

**Static timelapse:** Shoot timelapse photography with a fixed shooting angle.


**Hyperlapse:** Shoot timelapse photography while moving.

### 8.3.5 Auto rotation

Can be used to achieve the image rotating scene which been used frequently in movie Inception.


Select “Scenario” in home page, then select “Auto rotation” . The tilt axis will rotate 90° counterclockwise to make the camera pointing upward. Gimbal start to rotate after setting the rotation speed, direction, and rotational number.

**Exit:** Swipe from left to right to return to previous menu to exit auto rotation mode.

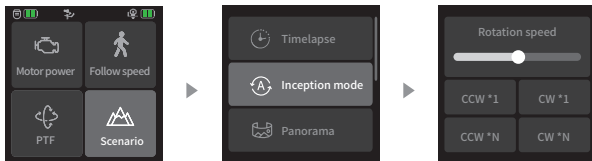

### 8.3.6 Panorama

Select “Scenario” in home page, then select “Panorama” . Choose a panorama mode to start shooting a series of interconnecting still images. Users can then generate a panorama using image processing software.

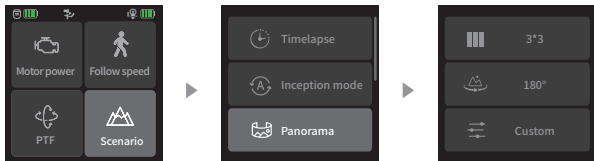

**3\*3:** Take 3 images above in every three layers (9 images in total).

**180° :** Take 4 lateral images.


**Custom:** Custom the shooting angle for pan/tilt axis, focal length, overlap and interval parameters to take panorama photos.

### 8.3.7 Portrait mode

Select “Scenario” in home page, then select “Portrait mode” . The tilt and pan axis will rotate 90° counterclockwise to make the camera pointing upward.

Hold the handle to make the lens horizontal to the ground to shoot in portrait mode.


**Exit:** Tap the icon at the bottom of the screen to exit.

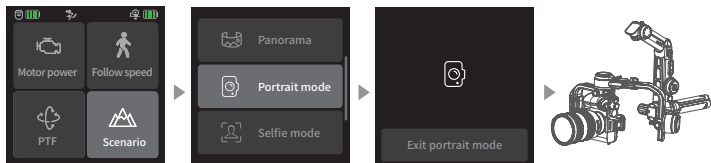

### 8.3.8 Selfie mode

Select “Scenario” in home page, then select “Selfie mode” . Gimbal turn 180° horizontally so that the camera faces you.


**Exit:** Tap the icon at the bottom of the screen to exit.

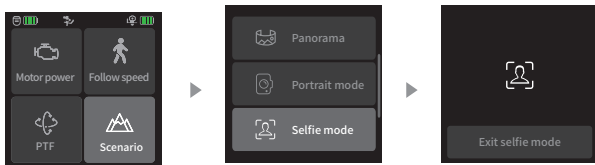


**Disable selfie:** Swipe from left to right in home page, then select “Gimbal settings” , enable the disable selfie switch, then the selfie mode will not be entered if the trigger button is tapped three times.

### 8.3.9 Track video


Select “Scenario” in home page, then select “Track video” , capture video with up to 10 waypoints.

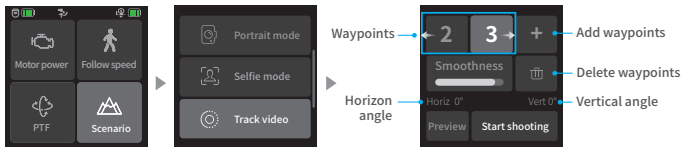

Use joystick or manually move camera to desired position, tap “+” icon to confirm the waypoint, repeat to add another waypoint. Track video is designed to capture video with up to 10 waypoints.

Select a waypoint number to check the position for this waypoint quickly, and tap “” icon to delete it.

After setting up the smoothness, tap “Start shooting” to start shooting.

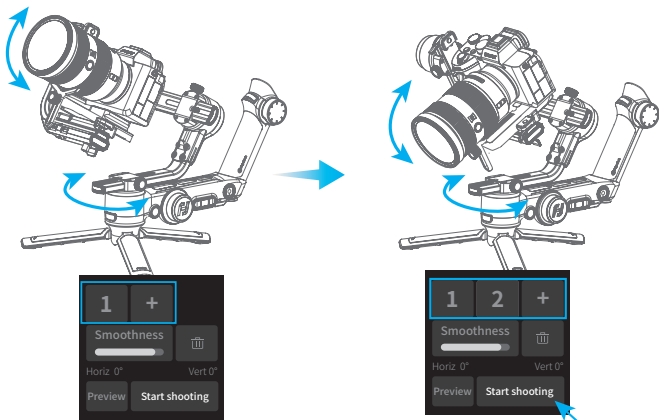

The shooting progress will show up on the screen, if need to stop it midway, tap “Stop shooting” to stop it.

After the shooting complete, tap “Confirm and return” to exit.

## 8.4 Remote control handle operation

### Using steps for remote control handle

- (1) **Connect and power on:** Connect the handle with the gimbal, long press one of the two power buttons to power on; or power on each part separately first, then install the handle on gimbal.
- (2) **Detach the handle:** Please refer to chapter 2.3 to detach the handle.
- (3) **Install the tripod:** After detach the handle, it's recommended to mount the tripod to the bottom of the gimbal for convenience
- (4) **Using remote control handle:** Can be used to remote control the gimbal wirelessly (Within 20 meters)

Remote control handle can control the gimbal remotely via touch screen and buttons.

### Using motion sensing mode


When use the handle to remote control the gimbal, long press the handle mode button (M button) to enter motion sensing mode, handle control the gimbal to move




up, down, left and right according to the movement of user's hand, release to exit.

## 8.5 Control ports

There is a camera control port, an image transmission port, and 2 extension ports on the fixed plate, to connect focus motor and other extension devices.

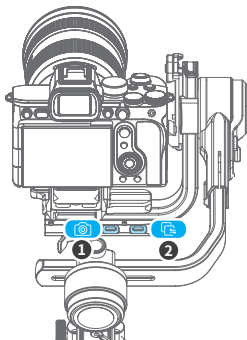

- ① Camera control port
- ② Image transmission port

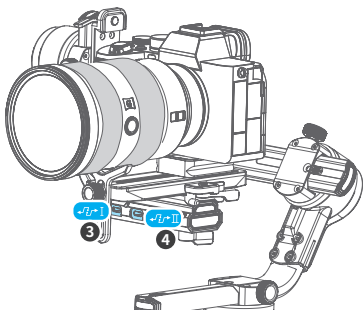

- ③ Extension port 1/Focus motor port 1
- ④ Extension port 2/Focus motor port 2

## 9. Specifications

|                    |   |
|--------------------|---|
| Product name       | Feiyu SCORP Pro 3-Axis Camera Handheld Stabilizer   |
| Product model      | Feiyu F4  |
| Max. Tilt Range    | 340°  |
| Max. Roll Range    | 340°  |
| Max. Pan Range     | 360°  |
| Weight             | About 2100g   |
| Payload Capability | About 4800g (Well-balanced)   |
| Battery life       | 12 Hours  |
| Battery            | 2500mAh   |
| Operating Voltage  | 16.8V-13V   |
| Compatible Cameras | Sony, Canon, Nikon, Panasonic camera etc. ( Please download the detailed manual for the specific compatible camera and lens ) |

## Accessories



USB 2.0 to Type-C  
×1



Type-C to Micro(A03)  
×1



Type-C to Mini (B02)  
×1



Type-C to Type-C (C02)  
×1



Type-C to TRS2.5 (T02)  
×1



Type-C to Multi  
Sony shutter cable  
×1



Type-C to 2.5mm Panasonic  
shutter cable (DC2.5mm)  
×1



Tripod  
×1



Quick release plate  
×1



Camera backing base  
×1



Lens holder  
×1



Lens holder screw  
×1



Camera fixed screw  
×3



3/8- 1/4 inch thread insert  
(The thread insert is factory  
mounted on tripod)  
×1

## Notice

1. Make sure motor spinning is not blocked by external force when the product is power on.
2. The product DO NOT contact water or other liquid if the product is not mark waterproof or splash-proof. Waterproof and splash-proof product DO NOT contact sea water or other corrosive liquid.
3. DO NOT disassembly the product except marked detachable. It need send to FeiyuTech after-sales or authorized service center to fix it if you accidentally disassembly and cause abnormal work. The relevant costs are borne by user.
4. Prolonged continuous operation may cause the product surface temperature to rise, please operate carefully.
5. DO NOT drop or strike the product. If the product is abnormal, contact Feiyu After-sales support.

## **Storage and Maintenance**

1. Keep the product out of the reach of children and pets.
2. DO NOT leave the product near heat sources such as a furnace or heater. DO NOT leave the product inside of a vehicle on hot days.
3. Please storage the product in dry environment.
4. DO NOT overcharge or overuse the battery, otherwise it will cause damage to the battery core. If does not use the product for a long time, please charge it at least once within one month.
5. Never use the product when the temperature is too high or too low.

## **FCC regulatory conformance:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### **NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **NOTE**

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

### **RF Exposure**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.



Website



Facebook



Youtube



Twitter



Instagram

This document is subject to change without notice. If you have any questions about this document, please contact us by the following ways.

Manufactured by: Guilin Feiyu Technology Incorporated Company  
Website: [www.feiyu-tech.com](http://www.feiyu-tech.com)  
E-mail: [support@feiyu-tech.com](mailto:support@feiyu-tech.com)  
Tel: +86 773-2320865

