

SERVICE INFORMATION:



Service In Canada:
SMWC Service Centre
1140 West 7th Avenue
Vancouver BC V6H 1B4 Canada

Service In The US:
SMWC Service Center
264 H Street, Suite D
Blaine WA 98230 USA

For a Repair Form and the latest address for the Momentum® Service Centre nearest you, (including service in Europe and the United Kingdom), please check our website (under "Service"):

Pour une formule s.a.v. et l'adresse du Centre de Service Momentum® le plus proche de chez vous, (y compris pour le s.a.v. en Europe et en Royaume Unie), veuillez regarder sur notre site web; (sous la rubrique « Service »)

Ein Service-Formular und die Adresse des nächsten Momentum® Service-Centre (auch für Europa und Großbritannien), finden Sie auf unserer Webseite, unter "Service".

www.momentumwatch.com

Thank you for your purchase. This quartz watch has been carefully designed to give you years of reliable service. The design incorporates the latest watchmaking technology. Please let us know if you have any comments or suggestions as to how we might improve our products.

USING THE SCREW CROWN:

Your watch is equipped with a screw-down, locking crown (located at the three o'clock position). This screws into the case, to ensure a reliable water tight seal. To set your watch, you must first unscrew the crown by turning it counter-clockwise 3-4 turns, then pull out gently from the case for setting. After setting or resetting the watch always ensure that you screw the crown back into the case by pressing it firmly into the case; then, applying a gentle pressure against the case, turn the crown clockwise 3-4 turns until snug. Always ensure that it turns smoothly and is not cross-threaded. Do not over tighten! (Finger-tight will ensure a good water tight seal.) Failure to do so may result in damage, even if the watch is not immersed in water. We recommend that this is always checked prior to contact with water. Moisture damage caused by failure to screw in the crown correctly is not covered under warranty.


SETTING THE TIME & DATE

To set the watch, first unscrew the crown to the neutral position (N). When the second hand reaches 12, pull the crown out all the way to the TIME Setting position (2). This will automatically reset the stopwatch hands to "0" position. Turn the hands forward until the date in the date window changes - this is midnight. Continue to turn the hands forward until the correct time is displayed. **NOTE:** If setting the watch in the afternoon, you must turn the hands forward at least 12 hours, otherwise, the date will change at noon, not midnight.

To set the date, push the crown in one stop to position 1. Turn counter-clockwise until today's date shows in the date window. It is recommended not to set the date after 9PM or before 5AM, as this could result in the date not changing correctly. Finally, always remember to press in the crown and screw it firmly into the case after setting.

USING THE CHRONOGRAPH

Before using the stopwatch, be sure to check

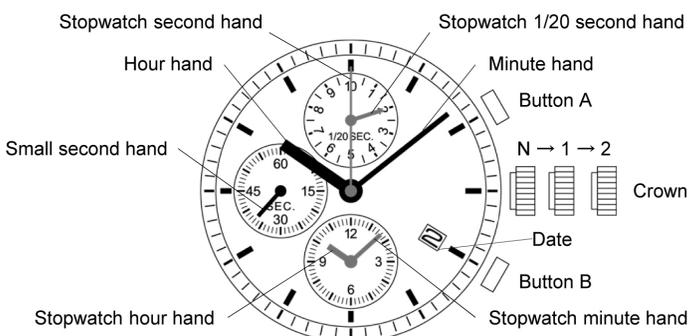

FLATLINE CHRONO

Field Watch with Chrono & Date

Fonction de chronographe
Messfunktion des Chronographen

OPERATING INSTRUCTIONS
& 2/4/6 YEAR WARRANTY
INFORMATION

GARANTIE 2/4/6 ANS & MODES
D'EMPLOI
GEBRAUCHSANLEITUNG UND 2/4/6
JAHRE GARANTIE

momentum® by / par / von
st. moritz watch corp.

that the crown is set at the normal position (threaded in against the case) and that the stopwatch hands are set to zero position. There are three small "eyes" inset in the main dial of your watch: the "eye" at the top shows 1/20 seconds and is capable of timing 10 minutes (1 second 600 times). The "eye" at the left hand side shows constant seconds, and the "eye" at the bottom of the main dial shows stopwatch minutes and hours elapsed (timing up to 12 hours).

TO START TIMING, press the START/STOP /RESTART pushbutton A. Timing will start, and the stopwatch second hand (the large hand in the centre of the dial) will start sweeping round the face in 1 second steps. After 1 minute has elapsed, the small "eye" at the bottom of the main dial will show 1 minute, and continue to record elapsed minutes, as long as the stopwatch is running. The same "eye" at the bottom will record elapsed hours. **TO STOP TIMING**, press pushbutton A again; the timing will stop. The 1/20 second hand will display 1/20 seconds. The timing range is 10 minutes and automatically stops at the zero position. **TO RESET**, press pushbutton B.

TO SPLIT TIME MEASUREMENT, press pushbutton A. Timing will start. Press RESET/SPLIT/SPLIT RELEASE pushbutton B. Measurement and release of split time can be repeated by pressing pushbutton B. **TO STOP TIMING**, press pushbutton A again; the timing will stop. **TO RESET**, press pushbutton B.

MEASURING TWO COMPETITORS

Press pushbutton A to start. Press pushbutton B at finish time of 1st competitor. Press pushbutton A when 2nd competitor finishes. Press pushbutton B for the final finish time of the 2nd competitor. **TO RESET**, press pushbutton B.

RE-ZEROING THE CHRONOGRAPH

If the watch is knocked, it is possible for the second hand (the large hand in the centre) to become misaligned: this will prevent the stopwatch from zeroing correctly. To re-align the hands, pull out the crown to position 2, then press & hold button A until the 1/20 sec hand does a full round. Press button B repeatedly to move the hand back to zero position. Repeat above steps for re-zeroing stopwatch second hand followed by stopwatch hour & min hands. If you press

Please read instructions carefully to understand how to operate your Momentum® watch. **Your model may not have all of the features described in this booklet.**

Veillez lire attentivement les modes d'emploi pour bien comprendre le fonctionnement de votre montre Momentum®. **Toutes les fonctions décrites ne sont pas disponibles sur tous les modèles.**

Lesen Sie bitte diese Anleitung für Ihre Momentum®-Uhr genau durch. **Es ist möglich, daß Ihr Modell nicht alle in dieser Gebrauchsanweisung beschriebenen Funktionen aufweist.**

& hold button A once more, you will resume the procedure for rezeroing 1/20 sec hand and so on. **Tip:** If button B is pressed and held, the hand(s) will move quickly. Finally, press the crown firmly into the case and screw it in. Press START (A) then STOP (A) then RESET (B) to check that it is zeroing correctly.

LOW BATTERY INDICATION

Your new watch offers a power depletion warning before the battery runs out. When the small second hand ("eye" at the 9 o'clock position) starts to jump at 2 second intervals, this indicates that the battery will soon run out. (Note that your watch will continue to run and keep accurate time, for a short period of time). When this happens, send your watch without delay to the nearest Momentum® Service Center.

CHOOSING THE RIGHT BAND

A selection of alternate bands are available to fit your watch: these may include natural rubber, fabric, various styles of high quality leather bands, or a matching metal bracelet. If you would like to order an alternate band for your watch, please contact your dealer, or visit www.momentumwatch.com

CRYSTAL

Your watch is fitted with an anti-glare sapphire crystal. Please note that while sapphire glass is almost impossible to scratch, an impact with a hard object can crack or shatter it. If this happens, return the watch to one of our Service Centres and the crystal can be replaced. (Impact damage is not covered under warranty.) Please check with our Service Department.

WATER PROTECTION

This watch is designed as a rugged sports watch. Each watch is waterproof tested to 10ATM (330 FT) and can be immersed in water, provided the crown is correctly screwed in. **Do not use the push buttons if the watch is immersed.** If the watch is regularly serviced and maintained, you can wear it in the shower, swimming, etc.

TEMPERATURE CARE

Avoid temperature extremes. Exposing your watch to high temperatures, such as placing it on the dashboard of a vehicle or use in a jacuzzi or hot tub may cause the watch to malfunction, shorten battery life, or cause deformations of certain components leading to mechanical failures. Leaving the watch in extreme cold temperatures may cause irregular time keeping until the watch returns to normal operating temperatures. For these reasons, you should remove your watch prior to exposure.

TWO YEAR WARRANTY

Great care has been taken to ensure that your watch will give you many years of reliable service. It is guaranteed for two years against any defect caused by a fault in its manufacture*. **Please retain your purchase receipt as proof of warranty.**



ATTENTION: Your watch is equipped with a screw-down crown system for maximum water-resistance. Please refer to your warranty / manual for important information about this feature.

A NOTER: Pour assurer une étanchéité optimale, votre montre est équipée d'une couronne spéciale vissée. On vous prie de bien vouloir lire attentivement les modes d'emploi, pour bien comprendre la mise à l'heure, et l'emploi de la couronne.

ACHTUNG: Ihre Uhr ist mit einer verschraubten Krone versetzt um eine optimale Wasserdichtigkeit zu gewährleisten. Bitte lesen Sie vorsichtig die Gebrauchsanweisung, um sicher zu sein, dass Sie die Einstellung der Zeit und Benutzung der verschraubten Krone genau verstehen

The best possible materials and components have gone into your watch. To keep it in top condition, please treat it with care and have it professionally serviced at regular intervals. * Loss or damage caused by accident, negligence, or opening, repair by unauthorized persons is excluded from this warranty, as is cosmetic deterioration of the case or bracelet caused by wear & tear or abuse and damage caused by cracked or broken crystals. Battery life is not covered under warranty. Moisture damage caused by failure to screw in the crown correctly is also not covered under warranty.

2/4/6 YEAR EXTENDED WARRANTY

Please retain your purchase receipt for proof of warranty. After the initial 2-year warranty expires, we recommend that you extend your warranty by sending your watch to a St. Moritz / Momentum® Service Centre for a Full Service*. This is a chargeable service which includes: battery replacement, cleaning, lubrication, and accuracy tuning of the movement as required, lubrication or replacement of all seals, pressure testing to original specification, return shipping and insurance (within Canada and the US only), and a 2 year warranty extension. After 4 years, send it in for another Full Service and extend the warranty for a final two years (for a total of 6 years from original purchase date). Nobody knows your watch like we do! Expert technicians, original parts and the latest equipment will ensure that your watch is serviced right. To check current Full Service pricing please visit our website at: www.momentumwatch.com

* Full Service Packages include an extension of the original warranty (up to 6 years from original purchase date), for as long as parts are available. Please note, however, that a Full Service for older, discontinued models may not include an extension of the warranty, if original parts are in limited supply or unavailable. Please check with our Customer Service Department to confirm whether any non-current models qualify for the extended warranty.

IF YOUR WATCH REQUIRES SERVICE, REPAIR, OR BATTERY CHANGE please return it to the appropriate SMWC Service Centre as shown in this manual. Our Service Centres can provide repairs, service, and replacement bands, promptly and at reasonable prices. For the most current Service Centre addresses and to download the Service and Repair form, please visit our website at: www.momentumwatch.com

Questions?
1-800-663-1881
(weekdays, 9am-5pm Pacific time)