

## Davey® Repair or Replacement Guarantee

In the unlikely event in Australia or New Zealand that this Davey product develops any malfunction within warranty periods beginning from the date of original purchase due to faulty materials or manufacture, Davey will at our option repair or replace it for you free of charge, subject to the conditions below.

### Davey Guarantee Period

'P', 'G', 'PHP16' or 'HP25' models - Five Years

Should you experience any difficulties with your Davey product, we suggest in the first instance that you contact the Davey Dealer from which you purchased the Davey product. Alternatively you can phone our Customer Service line on 1300 367 866 in Australia, or 0800 654 333 in New Zealand, or send a written letter to Davey at the address listed below. On receipt of your claim, Davey will seek to resolve your difficulties or, if the product is faulty or defective, advise you on how to have your Davey product repaired, obtain a replacement or a refund.

Your Davey Guarantee naturally does not cover normal wear or tear, replacement of product consumables (i.e. mechanical seals, bearings or capacitors), loss or damage resulting from misuse or negligent handling, improper use for which the product was not designed or advertised, failure to properly follow the provided installation and operating instructions, failure to carry out maintenance, corrosive or abrasive water or other liquid, lightning or high voltage spikes, or unauthorized persons attempting repairs. Where applicable, your Davey product must only be connected to the voltage shown on the nameplate.

Your Davey Guarantee does not cover freight or any other costs incurred in making a claim. Please retain your receipt as proof of purchase; you **MUST** provide evidence of the date of original purchase when claiming under the Davey Guarantee.

Davey shall not be liable for any loss of profits or any consequential, indirect or special loss, damage or injury of any kind whatsoever arising directly or indirectly from Davey products. This limitation does not apply to any liability of Davey for failure to comply with a consumer guarantee applicable to your Davey product under the Australian or New Zealand legislation and does not affect any rights or remedies that may be available to you under the Australian or New Zealand Consumer Legislation.

In Australia, you are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should your Davey product require repair or service after the guarantee period; contact your nearest Davey Dealer or phone the Davey Customer Service Centre on the number listed below.

For a complete list of Davey Dealers visit our website ([davey.com.au](http://davey.com.au)) or call:

 Davey Water Products Pty Ltd Member of the GUD Group ABN 18 066 327 517	<b>AUSTRALIA</b> <b>Customer Service Centre</b> 6 Lakeview Drive, Scoresby, Australia 3179 Ph: 1300 232 839 Fax: 1300 369 119 Email: <a href="mailto:sales@davey.com.au">sales@davey.com.au</a> Website: <a href="http://davey.com.au">davey.com.au</a>	<b>NEW ZEALAND</b> <b>Customer Service Centre</b> 7 Rockridge Avenue, Penrose, Auckland 1061 Ph: 0800 654 333 Fax: 0800 654 334 Email: <a href="mailto:sales@dwp.co.nz">sales@dwp.co.nz</a> Website: <a href="http://daveynz.co.nz">daveynz.co.nz</a>
	© Davey is a registered trademark of Davey Water Products Pty Ltd. © Davey Water Products Pty Ltd 2017. P/N 48995-14	

\* Installation and operating instructions are included with the product when purchased new. They may also be found on our website.



# Installation and Operating Instructions

## SUPERCELL Suffix 'P', 'G', 'PHP16' and 'HP25' PRESSURE TANKS



**WARNING:** MAXIMUM WORKING PRESSURE RATING FOR :-  
SUPERCELL Suffix 'P & G' is 1000kPa (145 psi)  
SUPERCELL Suffix 'PHP16' is 1600kPa (232 psi)  
SUPERCELL Suffix 'HP25' is 2500kPa (363 psi)



**WARNING:** Wherever it is possible that the pump system pressure may reach or exceed the tank pressure rating under any circumstance (e.g. pressure switch incorrectly set), it is strongly recommended that the system is protected by a suitable pressure relief valve set at or below the maximum tank pressure rating. Failure to install a pressure relief valve may result in tank failure causing property damage or serious personal injury.



**CAUTION:** To prevent personal injury, ensure all water pressure is released from the pressure system prior to work being performed. Ensure pumps are disconnected and/or electrically isolated.

Please pass these instructions on to the operator of this equipment.

## READ ALL INSTRUCTIONS BEFORE INSTALLING YOUR NEW SUPERCCELL TANK

These instructions have been prepared to acquaint you with the correct method of installing and operating your Supercell Tank. We urge you to study this publication carefully and follow its recommendations. In the event of installation difficulties or the need for further advice, you should contact the Dealer from whom you purchased the system or your nearest Davey Water Products Sales Office.


**NOTE:**

- \* All models (Supercell Suffix 'P', 'G', 'PHP16' and 'HP25') will accept water up to 90°C maximum.
- \* Be sure to protect the Supercell tank and all associated pumps and piping from freezing temperatures.

**INSTALLATION MUST BE IN ACCORDANCE WITH LOCAL PLUMBING CODES WHERE APPLICABLE.**


## TYPICAL INSTALLATIONS

**NOTE:**  
Isolation valves, draw valves and gauges will improve serviceability.

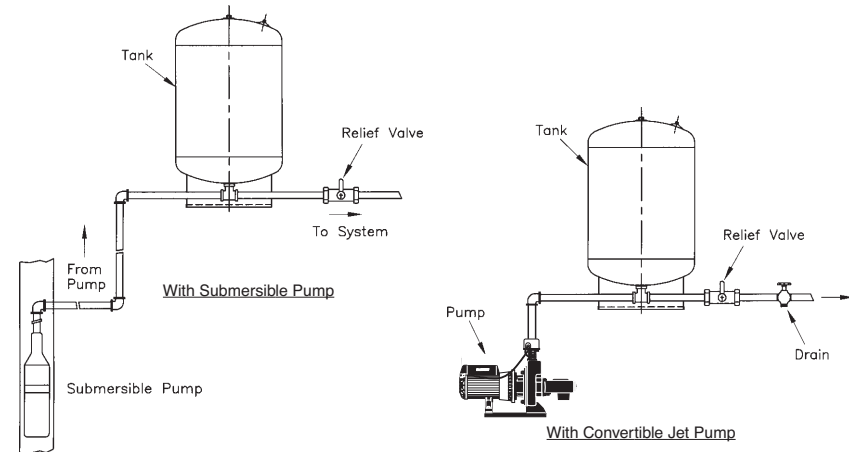


## TYPICAL MULTIPLE TANK INSTALLATIONS

**NOTE:**  
Isolation valves, draw valves and gauges will improve serviceability.

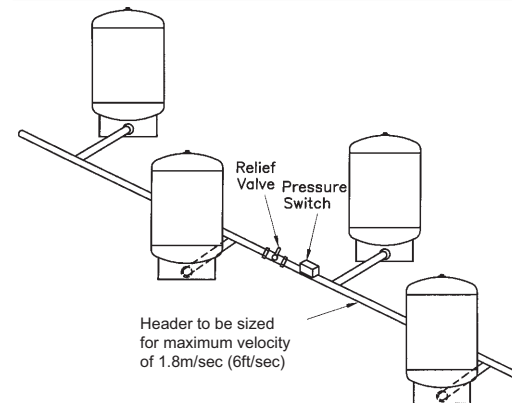

Either / or

**NOTE:** All tanks must have equal pre-charge.

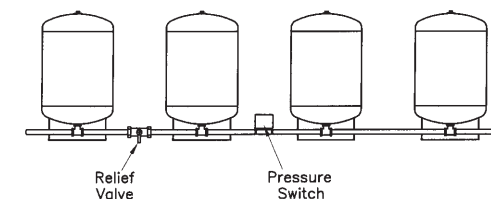

Tank Model	Tank Capacity (litres)	Max Pressure Rating (kPa)	Pressure Switch Range kPa (psi)										Diameter (mm)	Height (mm)	Dim.			
			Pressure Switch Range kPa (psi)												Inlet Size (BSP)	Inlet		
			150-250 (22-36)	150-300 (22-44)	200-400 (29-58)	250-400 (36-58)	250-500 (36-73)	300-600 (44-88)	500-800 (73-116)	500-1000 (73-145)	700-1200 (101-174)	1000-1600 (145-232)					1600-2000 (232-290)	2000-2500 (290-363)
Supercell 8P	8	1000	2.2	3.0	3.2	2.4	3.3	3.4	2.7	3.5	N/A	N/A	N/A	N/A	N/A	203	317	1" M
Supercell 18P	18	1000	5.0	6.7	7.2	5.4	7.4	7.6	6.0	8.0	N/A	N/A	N/A	N/A	N/A	279	368	1" M
Supercell 40P	40	1000	10.7	14.1	15.2	11.5	16.0	16.5	13.3	17.7	N/A	N/A	N/A	N/A	N/A	318	481	1" M
Supercell 60P	60	1000	16.1	21.2	22.8	17.2	23.9	24.8	20.0	26.6	N/A	N/A	N/A	N/A	N/A	388	626	1" F
Supercell 100P	100	1000	28.6	37.5	40.0	30.0	41.7	42.9	33.3	45.5	N/A	N/A	N/A	N/A	N/A	430	804	1" F
Supercell 200G	200	800	57.1	75.0	80.0	60.0	83.3	85.7	66.7	N/A	N/A	N/A	N/A	N/A	533	1033	1 1/4" F	
Supercell 18PHP16	18	1600	3.0	6.8	7.2	5.4	7.5	7.7	8.2	6.9	6.4	N/A	N/A	N/A	279	367	1" M	
Supercell 80PHP16	80	1600	21.5	28.2	30.4	23.0	31.9	28.7	26.7	35.5	30.2	27.9	N/A	N/A	388	790	1" F	
Supercell 24HP25	24	2500	6.3	8.3	9.0	6.3	9.4	10.3	8.0	10.5	9.1	8.4	4.5	4.6	260	445	1" M	
Supercell 100HP25	100	2500	26.3	34.5	37.3	28.3	39.3	41.3	33.3	43.9	37.7	34.8	18.9	19.1	460	935	1" M	

## Tank Pre-Charge

For correct operation pressure tanks should be pre-charged as follows:

- Pressure switch controlled pumps with differential pressure set at 140 kPa (20 psi), pre-charge the tank to 15kPa (2 psi) below the cut in pressure.
- For pumps controlled by pressure switches with higher differential pressures, electronic controls or variable speed controls, pre-charge the tank to 65% of the maximum system pressure.
- Pressure tanks installed on mains pressure, pre-charge should be set at the mains pressure.
- For hot water expansion, pre-charge should be set at the mains pressure.

For your convenience, this pressure tank has been factory set at 200kPa (29 psi) except suffix 'G' models which have 140kPa (20 psi) pre-charge, and suffix 'PHP16' and 'HP25' models which have 400kPa (58psi).

**CAUTION: Never over-charge the tank and use air at ambient temperature only!**

## Installation

**NOTE: To avoid possible water damage to property from ruptured pipes, leaking connections, worn/leaking pump seals, etc., pumps and associated equipment (including this Supercell Pressure Tank) must be installed on a well drained site or in a properly constructed water proof enclosure with drain tray.**

## Bottom Entry Models

Connect the tank vertically in the outlet piping of the water pump being used. Thread seal tape is necessary.

**Do not overtighten!**

## Base Mounted Models

These units have the inlet positioned on the bottom of the tank. Ensure that any fittings used firmly retain the pipe or hose connected. Thread tape should be used on all threads.

The tank should be placed on a firm base. If vibration is likely to occur in the vicinity the tank should be mounted on a resilient mount.

In order to ensure your tank provides its maximum service life it should always be installed in a covered, dry position. The tank should not be allowed to rub against any surrounding hard surfaces, such as walls, etc.

**Installation Inside Buildings: To cater for possible plumbing or tank failure, the installation must include an enclosure that will capture any water spraying from the tank and direct it into a properly constructed drain tray.**

**Note: When installing a Supercell Tank and/or associated pump system inside a building, allowance for possible high pressure leakage MUST be made.**


**Note: In order to carry out routine maintenance the Supercell Pressure Tank MUST be easily accessible to the end user or home owner.**

## Checking and Replenishing Tank Air Charge

Supercell 'P', 'G', 'PHP16' and 'HP25' Pressure Tanks do not require regular checks under normal operating conditions. However, if air charge adjustment is required then follow the following procedures:

1. Remove the pressure tank completely from pump installation, ensuring to isolate the pressure tank and release the water pressure from the tank beforehand. OR

Release all water pressure from the pressure tank by switching off the pump at the power point, and opening the closet tap. For above ground supply tanks it is necessary to close the gate valve between the supply tank and the pump.



Leave tap open during air replenishment.

2. When all water pressure has been released from the system, check air pressure at air valve on top of pressure tank. The pre-charge pressure reading should be as detailed on page 3 of this document.
3. If necessary, replenish air charge to the correct pressure indicated. Ensure that a tap in outlet piping of pump is open during replenishment of air pre-charge.



## Periodic Checks

**Flushing:** Depending on the quality of the pumped water, from time to time your tank may require flushing to remove settled fines such as mud or sand. If sand or mud is allowed to stay in the tank it will accelerate wear on the internal lining and shorten your tanks life.

Safely disconnect the tank from the water supply, discharge all air from the tank and flush the tank several times with clean water. Once the flushing water is clean, reconnect the tank and recharge the air as per above.

**External Inspection:** A tank in good order will not leak, but over time due to damage through rough handling, impacts or grit and/or impurities in the water the tank shell may fail and/or leak. Should the tank leak or show signs of possible failure the tank should be immediately disconnected and replaced.



## Operational Difficulties & Trouble Shooting

**NOTE:** Loss of air charge is the most overwhelming cause of difficulties with Supercell Pressure Tanks. Partial or complete loss of air charge will cause any of the following problems:-

- a) Rapid pump cycling (i.e. pump stops and starts frequently during operation).
- b) Decreased draw-off capacity.

Alternatively, the same problems could be caused by a punctured or leaking diaphragm as indicated by water leaking from the air valve when the valve core is depressed (typically when checking tank pre-charge).

Supercell Suffix 'P', 'G', 'PHP16' and 'HP25' models have a diaphragm which is captive and is non-serviceable. In the event of diaphragm failure the whole tank must be replaced.

Symptom	Causes	Remedies
Pump Cycling (Pump stops and starts frequently while operating)	<ol style="list-style-type: none"> <li>i) Punctured diaphragm (check that water escapes from air valve when depressed)</li> <li>ii) Incorrectly set pressure switch</li> <li>iii) Incorrect pressure tank pre-charge</li> </ol>	<ol style="list-style-type: none"> <li>i) Replace Tank.</li> <li>ii) Reset pressure switch to manufacturers recommendations</li> <li>iii) Adjust tank pre-charge to 15kPa (2psi) below cut-in</li> </ol>
Pump stops and starts when all taps are closed	<ol style="list-style-type: none"> <li>i) Leaking tap or pipework on suction and/or discharge side</li> </ol>	<ol style="list-style-type: none"> <li>i) Isolate suction pipework, if pump continues to stop and start, check for leaks on discharge. If pump stops and does not restart, problem is likely to be leaking checkvalve on suction side of pump system.</li> </ol>
Water flow from open tap stops then starts when first opened	<ol style="list-style-type: none"> <li>i) Tank pre-charge set too high or too low</li> <li>ii) Pressure switch cut-in set too low</li> </ol>	<ol style="list-style-type: none"> <li>i) Adjust tank pre-charge to 15kPa (2psi) below cut-in</li> <li>ii) Adjust pressure switch cut-in</li> </ol>
Tank will not hold air pre-charge	<ol style="list-style-type: none"> <li>i) Faulty air valve</li> <li>ii) Punctured diaphragm</li> </ol>	<ol style="list-style-type: none"> <li>i) Replace air valve core</li> </ol>