

Installation Instruction

WARNING

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Commercial installation, service and maintenance of luminaires should be performed by a qualified licensed electrician.
- For the installation: If you are unsure about the installation or maintenance of the luminaires, consult a qualified licensed electrician and check your local electrical code.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

WARNING

- Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.
- Turn off the power when you perform any maintenance.
- Verify that supply voltage is correct by comparing it with the luminaire label information.
- All wiring connections should be capped with UL approved wire connectors.

CAUTION

- Avoid direct eye exposure to the light source while it is on.
- Account for small parts and destroy packing material, as these may be hazardous to children.
- Risk of burn. Disconnect power and allow fixture to cool before changing bulb or handing fixture.


NOTICE: Green ground screw provided in proper location. Do not relocate.

NOTICE: Minimum 90° supply conductors.

NOTICE: Specifications and dimensions subject to change without notice.



NOTICE: Suitable for Dry or Damp location.

General Wiring Diagram


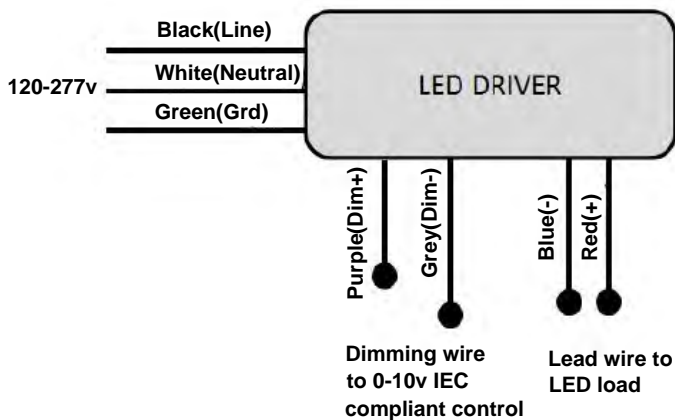


Installation Instruction


A: Cable Kit

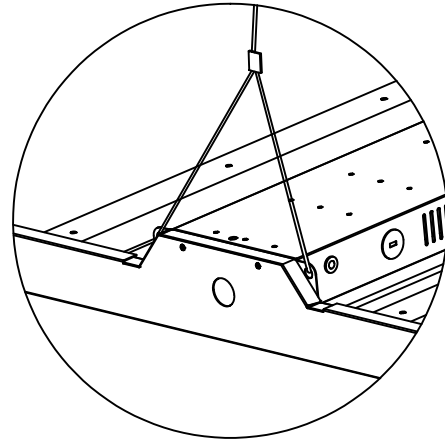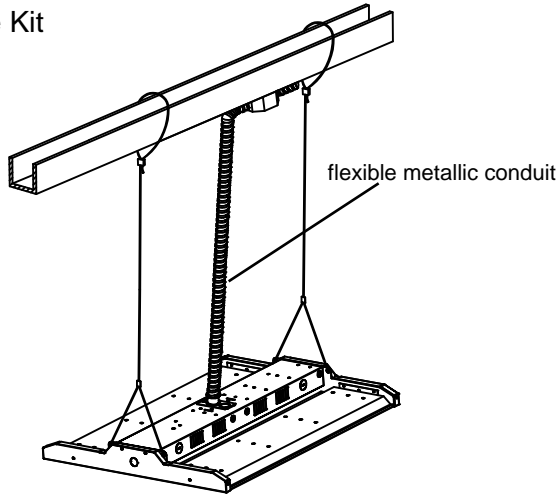

B: Chain Kit


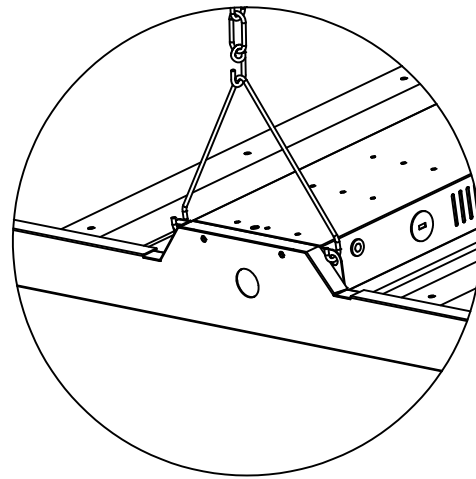
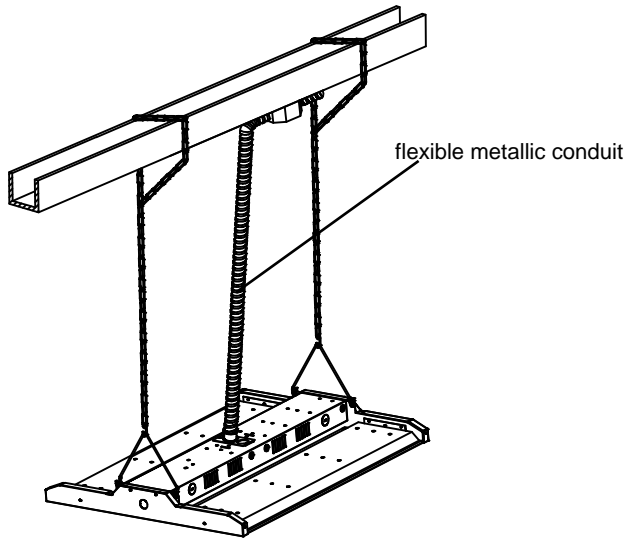


C: Wire Guards


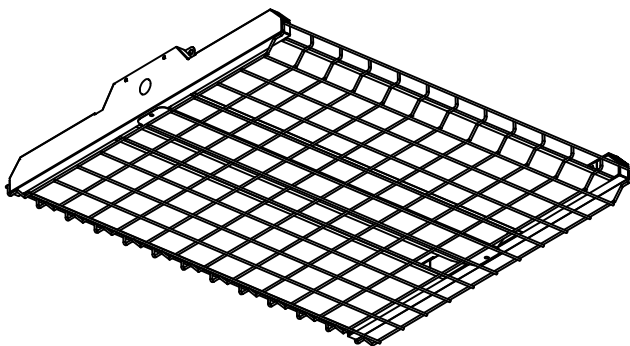


Installation Instruction

D: Surface Mounting

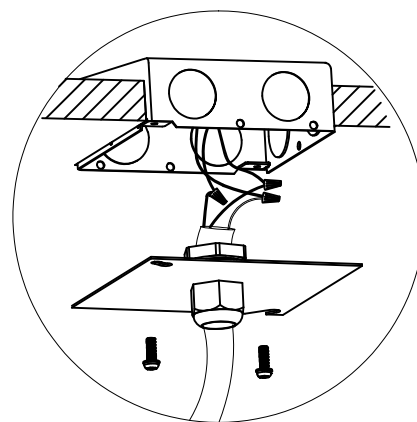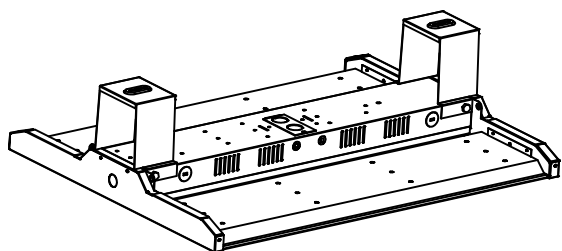
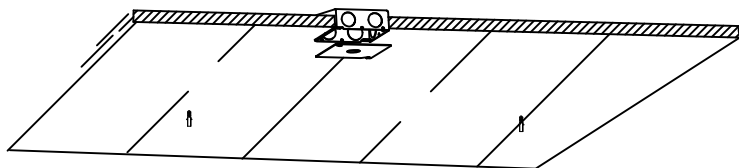


E: Pendant Hanger

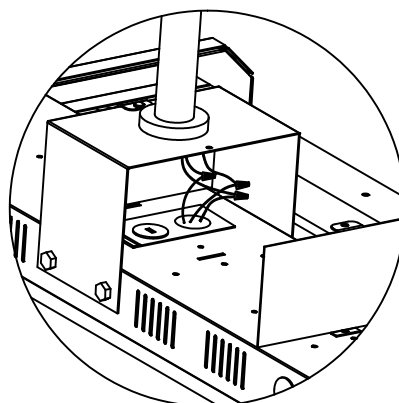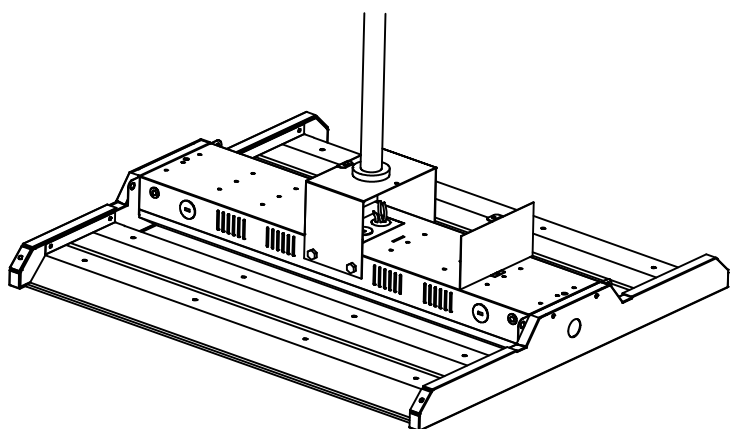

Installation Instruction


F: Microwave Motion sensor Mounting

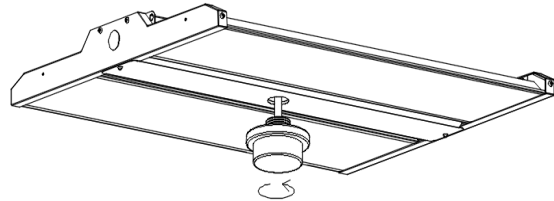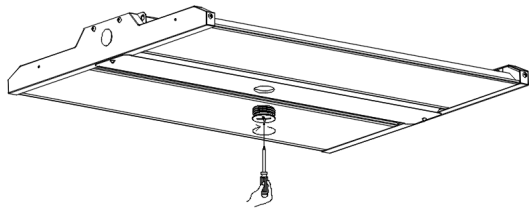

1. As shown in the picture, turn counterclockwise to unscrew the plug.

2. Insert the microwave sensor into the hole and tighten it clockwise.

General Wiring Diagram

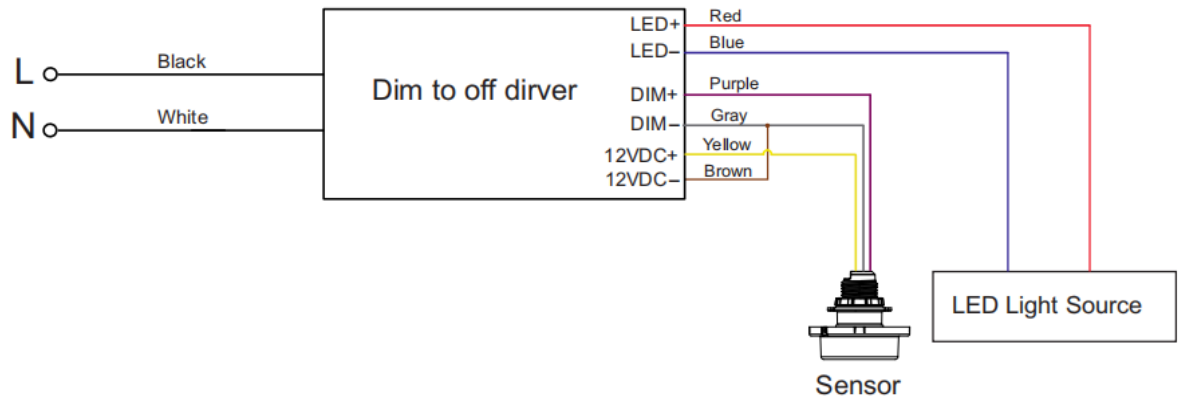

Installation Step:

Always turn off the power supply from main circuit breaker first!

- Remove the new LED fixture from packaging and inspect for any damages. Handle new LED fixture with care.
- CHAIN MOUNT EXAMPLE; Install the chain into the provided wire hanger. Secure the other end of the chain to a structure using hardware rated for the load. Install the wire hanger onto the side of the top ETLB6 LED channel. Make sure the wiring hangers are fully engaged into the side holes on the top channel.
- Connect the LED high bay wiring to line wire, black to black, white to white and green to green. Use only UL listed wiring. ****NOTE: Purple and grey lead inside the driver compartment are 0-10V (low voltage) dimming leads. Connect to dimming low voltage wiring only.**
- Clean all residues/fingerprints from the new LED high bay and lens. Double check all hanging hardware before moving onto the next installation.


Installation Instruction



ANT-5-4T



RC-100

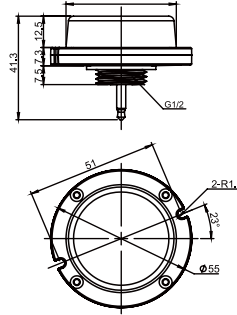

INTRODUCTION

The ANT-5-4T is a motion sensor that dims lighting from high to low based on movement. This slim, low-profile sensor is designed for installation inside the bottom of a light fixture body.

The sensors use microwave sensing technology that reacts to changes in movement within the coverage area. Once the sensor stops detecting movement and the time delay elapses lights will go from high to low mode and eventually to an OFF position if it is desired. Sensors must directly "see" motion of a person or moving object to detect them, so careful consideration must be given to sensor luminaire placement and lens selection. Avoid placing the sensor where obstructions may block the sensor's line of sight.

SPECIFICATIONS


Power supply	12V-24V DC, >50mA
Dim control output	0-10V, max. 25mA sinking current
HF System	5.8GHz±75MHz
Transmission power	<0.2mW
Detection radius	20%/50%/75%/100%(1-8m)
Mounting height	Max 40ft.(12meters)
Time setting	10s/1min/5min/10min/15min/20min/30min/60min
Light-control	24H/10LUX/30LUX/50LUX
Temperature	-40°F ~ +158°F (-40°C ~ +70°C)
IP rating	IP65

⚠ WARNING

NOTE: Warm up time is 15seconds. After the sensor connects input power first time, the light will keep on 15seconds, then go to dimming to work normally.

NOTE: Factory Default Setting: 100% sensitivity, Hold on time: 5min, Daylight sensor is ☀, Dimming level: 30%,Dimming time: 60minutes.

NOTE: Any setting changed by remote control, the led light that sensor connect will on/off as confirm.

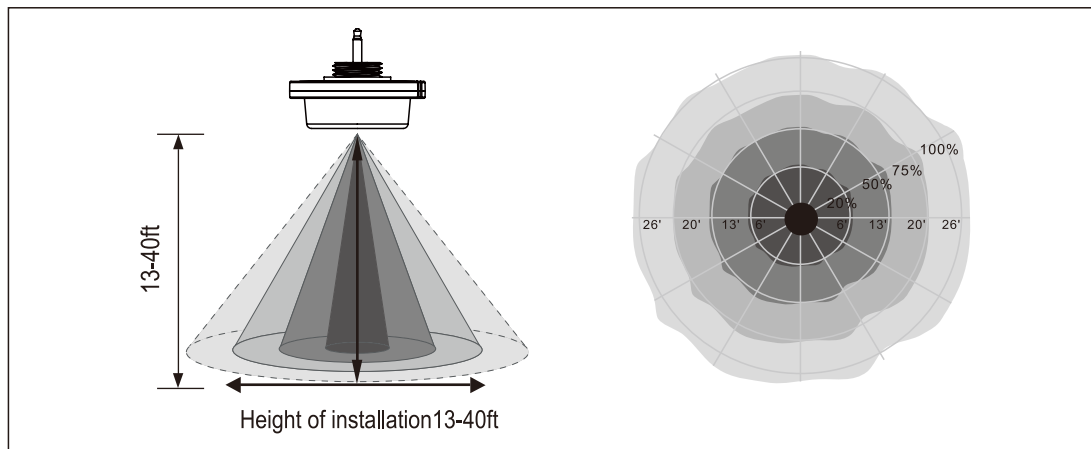


Installation Instruction

RC-100 Sensor Remote Programmer OPERATION INSTRUCTIONS

SPECIFICATIONS

Power supply	2 x AAA 1.5V battery, Alkaline preferred
Carrying case	RC-100 in carrying case
Communication	940 nm Infrared Tx & Rx
Upload range	Up to 15 m (50 ft.)
Op. temperature	0°C~50°C (32°F~122°F)
Dimensions	123 x 70 x 20.3 mm (4.84" x 2.76" x 0.8")

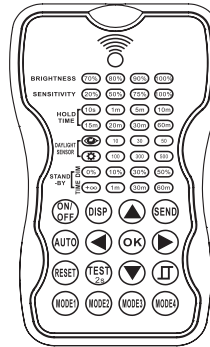

WARNING



Remove the batteries from compartment if the remote will not be used in 30 days.

OVERVIEW

The remote control Wireless IR Configuration Tool is a handheld tool for remote configuration of IR-enabled fixture integrated sensors. The tool enables device to modify via pushbutton without ladders or tools, and stores up to four sensor parameter modes to speed configuration of multiple sensors.












The remote control uses bidirectional IR communication to send and receive sensor settings at mounting height up to 50 feet. The device can display previously established sensor parameters, copy parameters and send new parameters or store parameter profiles. For projects where identical settings may be desired across a large number of areas or spaces, this capability provides a streamlined method of configuration. Settings can be copied throughout a site, or in different sites.

LED INDICATORS

LED	DESCRIPTION	LED	DESCRIPTION
BRIGHTNESS	To Set the output level (in %) of connected lighting during occupancy		To select the current surrounding lux value as the daylight threshold. This feature enables the fixture to function well in any real application circumstances.
SENSITIVITY	To set the occupancy sensing sensitivity of the Sensor		The built-in daylight sensor stops working, and all motion detected could turn on the lighting fixture, no matter how bright the natural light is.
HOLD TIME	The time that the Sensor will turn off (if you choose stand-by level is 0) or dim the light to a low level after the area is vacated	STAND-BY DIM	To set the output level (in %) of connected lighting during vacancy. The sensor will regulate the lighting output at the set level. Setting the STAND BY DIM at 0 means light full off during vacancy.
DAYLIGHT SENSOR	To represents various thresholds of natural light level for the Sensor .	STAND-BY TIME	To represents the time that the Sensor will keep the light at low dim level after the HOLD TIME elapsed.

Installation Instruction

BUTTON OPERATION

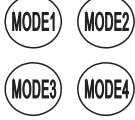





BUTTON	DESCRIPTION	BUTTON	DESCRIPTION
	Press the "ON/OFF" button, the light goes to permanent on or permanent off mode, and the sensor is disabled.(MUST press "Auto"button to quit this mode for Setting.		Press "Auto" button, the sensor starts to function and all settings remain the same as the latest status before the light is switched on/off.
	Display the current/lastest setting parameters in LED indicators(the LED indicators will on for showing the setting parameters).		The button" TEST" is for testing purpose sensitivity only. after you choose sensitivity thresholds, then you press"TEST" button, The sensor goes to test mode(hold time is only 2s) automatically ,meanwhile the stand-by period and daylight sensor are disabled. Press "AUTO" button to quit from this mode.
	Press "RESET" button, all settings go back to settings of dip Switch in sensor.		
	Enter in the setting condition, and Navigate to UP and Down for choose selected parameters in LED indicators.		Press this button for open or close the smart photocell sensor which take place of normal photocell sensor switch. When remote control enters in setting conduction, you can choose open and close the smart photocell sensor. If this smart photocell sensor open, 2 Leds indicators of daylight sensor are on for choose photocell sensor setpoint on/off to light, and Stand by time is only ∞ . When the natural light level exceeds setpoint off to light, the lights will turn off even if when the space is occupied. once the natural light level exceeds this setpoint off to light, the sensor will wait and monitor for 1 minute in order to confirm the natural light level increase is not temporary before forcing the lights to go off. When the natural light level lower than setpoint on to light, the lights will turn on even when the space is not occupied. when natural light level goes lower than this setpoint on to light, the sensor will wait and monitor for 1 minute in order to confirm the natural light level decrease is not temporary before forcing the lights go on.
	Navigate to LEFT and RIGHT for choose selected parameters in LED indicators.		
	Keep records of selected parameters in remote control or in Mode 1 or mode 2 mode 3,mode 4.		
	Upload the selected parameters to sensors.		
	4 Scene modes with preset parameters which are available to be changed and saved in modes.		

SETTING

The SETTING Content contains all available settings and parameters for remote sensors. It allows you to change the available control, parameters, and operation of the sensor from factory default or current parameters.

NOTE:the setting works only in Auto mode.

Change multiple settings of sensor(s)

- 1.Press DISP button(if you push ON/OFF button before you push DISP button, the sensor is locked, so please push "AUTO" button to unlock the sensor ,and then push DISP button), the controler leds indicators will show the latest parameters.
- 2.Press  or  enter in the setting condition, navigate to the desired setting by pressing     to select the new parameters.
- 3.Press ok to confirm all setting and saving.
- 4.Aim at the target sensor and press SEND to upload the new parameter. light will be one time and off , as confirm.

Installation Instruction

NOTE: 1.If you press DISP button, the remote led indicators will show the latest parameters which were sent.

2.See **Corridor function**.

Change multiple setting of sensors with smart photocell sensor Open

1.Press “DISP”, the remote led indicators will show the latest parameters.


2.Press     to Select the new parameter.

3.Press , 2 Led indicators will flash, select setpoint on to light, and select setpoint off to light.

4.Press ok to confirm all setting and saving.

5.Aim at the target sensor and press “SEND” to upload the new parameter. light will be on one time and off, as confirm.

NOTE:  is disabled by default.

1.Open or close the smart photocell sensor by push  when remote control is in setting condition.

2.When smart photocell sensor open, 2 Led indicators are on for choose photocell sensor setpoint on/off to light, when smart photocell sensor switch close, 1 Led indicators are on for choose daylight sensor threshold.


3.When the smart photocell sensor open, the stand-by time is only  .

4.Smart photocell sensor takes place of normal outdoor photocell sensor switch, working independently.


5.See **Smart Photocell Function**.

Corridor Function


This function inside the motion sensor to achieve tri-level control, for some areas which require a light change notice before switch-off. The sensor offers 3 levels of light: 100%-->dimmed light (natural light is insufficient) -->off; and 2 periods of selectable waiting time: motion hold-time and stand-by period; Selectable daylight threshold and freedom of detection area.

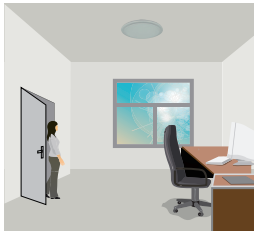


With sufficient natural light, the light does not switch on when presence is detected.

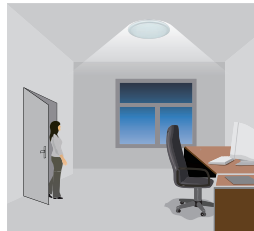

With insufficient natural light, the sensor switches on the light automatically when presence is detected.

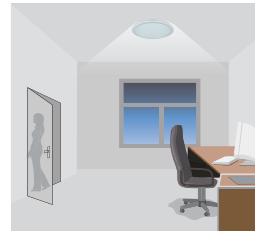

After hold-time, the light dims to stand-by level if the surrounding natural light is below the daylight threshold.

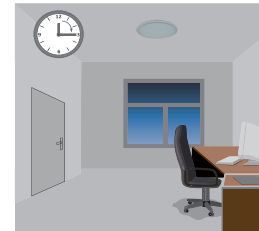


Light switches off automatically after the stand-by period elapses.


Note:if you choose STAND-BY DIM is 0, the stand-by period is 0, it is ON/OFF function.

Smart Photocell Function

open the smart photocell sensor by push  when remote control is in setting condition.

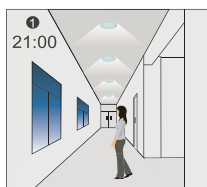

The light switches on at 100% when there is movement detected.

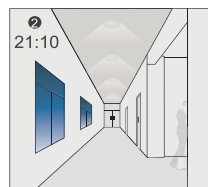

The light dims to stand-by level after the hold-time.



The light remains in dimming level at night.

Settings on this demonstration:

Hold-time: 10min

Setpoint on:50lux

Setpoint off:300lux

Stand-by Dim: 10%

Stand-by period: +∞

(when the smart photocell sensor open, the stand-by time is only +∞)

Installation Instruction

① ↔ ③ goes in cycle at night...
100% on when movement detected, and dims to 10% in long absence.

④
08:10

⑤
17:40

When the natural light level exceeds setpoint off to light, the light will turn off even if when the space is occupied.

The light automatically turns on at 10% when natural light is insufficient (no motion).

Difference between Corridor Function and Smart Photocell Function.

- In corridor function, the daylight sensor as threshold to assist motion sensor, in Photocell function, the daylight sensor works independently to motion sensor.
- Turn On light by detect motion when natural light is insufficient for corridor function, turn on light by natural light level exceeds setpoint on to light, do need to detect motion, for smart photocell function.
- Turn off light by stand-by time for corridor function, Turn off light by natural light level lower than setpoint off of light for smart photocell function.

About RESET and MODE(1,2,3,4)

The Remote control comes with 4 Scene MODES which are not default. You may make desired parameters and save as the new MODE(1,2,3,4) to configure the installed sensors.

RESET: all settings go back to settings of dip Switch in sensor.

SCENE MODES(1 2 3 4)

MODE	BRIGHTNESS	SENSITIVITY	HOLD TIME	DAYLIGHT SENSOR	STAND-BY DIM	STAND-BY TIME
MODE1	100%	100%	5m		30%	+∞
MODE 2	70%	20%	10s		0%	+∞
MODE 3	70%	20%	10s		0%	+∞
MODE 4	70%	20%	10s		0%	+∞

Change the MODES:

- press (MODE1) / (MODE2) / (MODE3) / (MODE4) button, the remote control Led indicators show existing parameters.
- press ▲ ▼ ◀ ▶ to select the new parameters.
- if want to open/close smart photocell sensor setpoint on/off to light, press (□), select right setpoint on/off to light.
- Press "OK" to confirm all parameters and saving in the mode.

NOTE: if do not know existing parameters in (MODE1) / (MODE2) / (MODE3) / (MODE4), repeat Step 1.

UPLOAD

The upload function allows you to configure the sensor with all parameters in one operation. You may select CURRENT SETTING parameters or the MODE for uploading. Current setting parameters or the MODE are displayed in Remote control.

Upload the current parameters to sensor(s), and duplicate the sensor parameters form one to another

- Press DISP button OR press (MODE1) / (MODE2) / (MODE3) / (MODE4), all parameters are displayed in Remote control.
Note: check if all parameters are correct, if not, change them.
- Aim at the sensor and press "SEND" button, the light will be one time on and off, as confirm.
Note: if other sensors need same parameters, just aim at the sensor and press "SEND" button.