


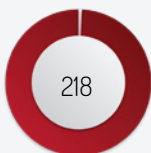

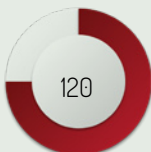



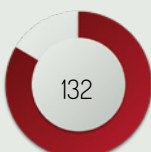




# STOVE FAN COMPARISON CHART



FAN MODEL	PART NUMBER	NO. OF BLADES	CE APPROVED	TOTAL HEIGHT	FAN DIAMETER	AIR VOLUME (CFM)	START TEMP.*	OPTIMUM STOVE SURFACE TEMP	MAX. OPERATING TEMP	EASY START MOTOR	IDEAL FOR...
 REMORA FLUE PIPE FAN	FIR350	4	✓	200mm	180mm	 132	50 °C 125 °F	(Flue temp) 80-250 °C 176-480 °F	340 °C 640 °F	✓	<ul style="list-style-type: none"> <li>• Magnetic flue pipes (if a thermometer will stick so will the fan)</li> <li>• Largest rooms &amp; stoves</li> <li>• Maximum redistribution of warmth</li> <li>• For stoves with sloping, uneven top, or where the top is not suitable</li> <li>• Narrow-boats</li> </ul>
 VANQUISH 250	FIR364	2	✓	250mm	230mm	 218	50 °C 125 °F	80-250 °C 176-480 °F	340 °C 640 °F	✓	<ul style="list-style-type: none"> <li>• Largest rooms &amp; stoves</li> <li>• Maximum redistribution of warmth</li> <li>• Maximum airflow</li> </ul>
 VENTUM II	FIR362	2	✓	174mm	155mm	 120	45 °C 115 °F	80-250 °C 175-470 °F	320 °C 600 °F	✓	<ul style="list-style-type: none"> <li>• Narrow-boats</li> <li>• Limited space above or on the stove</li> <li>• Where a directional airflow is preferred</li> </ul>
 VENTUM III	FIR363	3	✓	199mm	180mm	 132	45 °C 115 °F	80-250 °C 175-470 °F	320 °C 600 °F	✓	<ul style="list-style-type: none"> <li>• Inglenook fireplaces</li> <li>• Any solid fuel burner</li> <li>• Free standing stoves</li> <li>• Larger rooms</li> <li>• Quieter airflow</li> </ul>
 PREMIUM 4	FIR361	4	✓	199mm	180mm	 132	50 °C 125 °F	80-250 °C 175-470 °F	340 °C 640 °F	✓	<ul style="list-style-type: none"> <li>• Inglenook fireplaces</li> <li>• Medium/large rooms</li> <li>• Free standing stoves</li> <li>• Any solid fuel burner</li> <li>• Optimum airflow</li> </ul>
 ORIGINAL 2 BLADE FAN	FIR300	2	✓	230mm	205mm	 122	55 °C 130 °F	100-300 °C 210-570 °F	340 °C 640 °F	✓	<ul style="list-style-type: none"> <li>• General purpose</li> <li>• Robust design</li> </ul>

\* The starting temperature of the fan base. This will fluctuate depending on proximity to flue pipe. Never place your stove fan in front of the flue pipe.