


Date: Location:
Product:Project:
Quantity:Catalog#



PLUG PLAY SENSOR



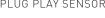







FEATURES

- 110/165/220W Tunable, 40/50K Selectable.
- Built in Sensor socket, Easy plug and play with Sensor
- Hanging air craft cable provided for easy access wiring
- 50,000 hours lifetime

SUITABLE APPLICATIONS

- Warehouse Lighting
- Base room lighting
- Shopping mall lighting
- Factory lighting

CONSTRUCTION:

Fast dissipation aluminum material, with white powder-coated finish. Frosted PC optics lens.

High brightness Lumileds chips. 106° beam angle.

ELECTRICAL:

Available as 120-277V input. -20°C to 45°C.

OPTICAL SYSTEM: INSTALLATION&MOUNTING:

Suspended/Ceiling Mounting for easy installation

WARRANTY:


5-year limited warranty. Actual performance may differ as a result of end-user environment and application.

PERFORMANCE

	DLC Model NO	Motion Sensor Detection Distance	Wattage	Voltage/CurrentInput		Light Efficiency	Kelvin Options
						Light Efficiency	, Rewill Options
LS-LHBV5-220WBMB1A1- ABDW40/50K		40FTto50FT	110W	0.91A	0.39A	140LM/W	4000K/5000K
		40FTto50FT	165W	1.37A	0.59A	140LM/W	4000K/5000K
		40FTto50FT	220W	1.83A	0.79A	140LM/W	4000K/5000K





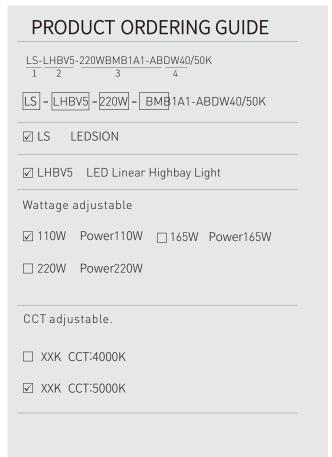


Electric Characteristic

Specification/Model	LS-LHBV5-220WBMB1A1-ABDW40/50K					
LED Driver	UL DRIVER 0-10V dimming					
Input power	110W	165W	220W			
Lumens output	15400LM	23100LM	30800LM			
Efficiency	140LM/W	140LM/W	140LM/W			
CRI	>80	>80	>80			
CCT tunable	40K/50K	40K/50K	40K/50K			
Input voltage	120-277V/AC	120-277V/AC	120-277V/AC			
Light distribution type	106D	106D	106D			
Working temperature	-20+40℃	-20+40℃	-20+40℃			
Junction temperature	<75℃	<75℃	<75℃			
lamps efficiency	≥90%	≥90%	≥90%			
Certificate	UL CUL DLC	UL CUL DLC	UL CUL DLC			
Equivalent	220-330W MH/HPS	330-500W MH/HPS	500-700W MH/HPS			




DIMENSION



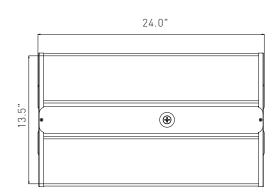

DISTRIBUTION DIAGRAM

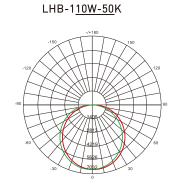


Test Number:110W Test Number:5000K

AVERAGE BEAM ANGLE(50%): 106° UNIT:CD - C0/180,113.7 - C30/210,100.1 - C60/240,108.6 - C90/270,130.9

AVERAGE BEAM ANGLE(50%): 106°

Test Number:165W Test Number:5000K


LHB-165W-50K

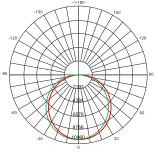

UNIT:CD - C0/180,113.7

- C30/210,100.1 - C60/240,108.6 - C90/270,130.9

LHB-220W-50K

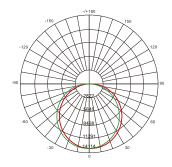

AVERAGE BEAM ANGLE(50%): 106° UNIT:CD

Test Number:220W Test Number:5000K

- C30/210,100.1 - C60/240,108.6 - C90/270,130.9




A. Hanging Installation: (Chain/Cable)

Step1. Hook up the chain; (Figure 1)

Step2.Connect the chain with fixture; (Figure 1)

step3. Fix the chain on the rail, adjust the chain length as per need; (Figure 1)

Step4. After fixed, choose suitable wiring knock out, connect the wires according to local standard and code.

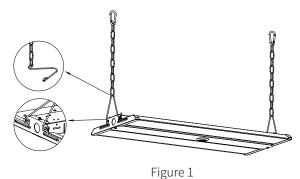

rigare .


B.3/4"NPT Installation:

Step1.Mount the bracket on 3/4"NPT, (Figure 2)

Step2.Lock fixture on the bracket; (Figure 3)

Step3. Connect the wires according to local standard and code.

Step4 Lock side brackets with screw driver. (Figure 4)

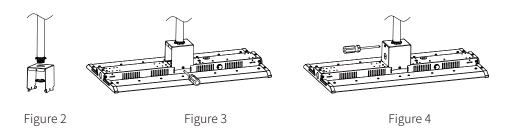


C.Surface Mounting: (If this bracket is used for the fixture, backup driversolution cannot be chosen)

Step1. Mount the bracket on the rail or ceiling (Figure 5);

Step2. Assemble the lamp on the bracket and fix it with screws (Figure 6);


Step3. After mounting, choose suitable wiring knock out and connect the wires according to local standard and code.

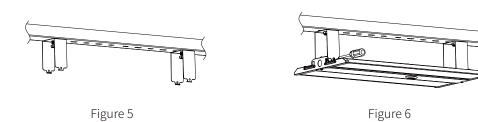




Extra Accessory Option Installation: 1:Wire Guard, 2:Motion Sensor / PIR Sensor, 3: Backup driver

1.Wire Guard: (Purchase the correct size wire guard from manufacturer) Step1.Unscrew the two screws on the front of the lamp;(Figure 7) Step2.Place the wire guard on the lamp and fix it with screws.(Figure 8)

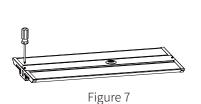

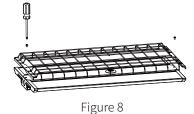


2-1. Motion Sensor/PIR Sensor: (Both sensor are with same installation)


Step1. Open the face cover with screw driver; (Figure 9)

Step2. Knock out the side cover, mount the sensor on the side, do wiring accofing to instruction on sensor; (Figure 10)

Step3.Put face cover back with screw driver. (Figure 11)

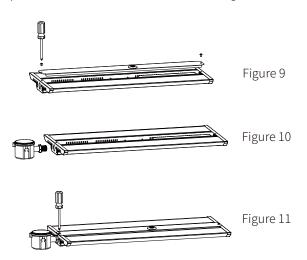

Wiring Instruction

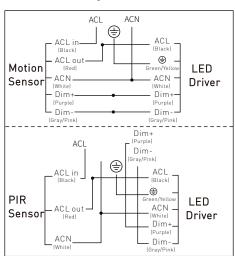

2-2.DC Motion Sensor I PIIR Sensor (Both sensors are with the same installation method)

Step1.Use a screwdriver to remove the 1/2 plug from the sensor; (Figure 12) Step2.Twist-lock the DC sensor to the base to make it work properly, use a remote control to adjust the working mode as per demand.(Figure 13)



