



V2 2CCT&3Watt Tunable Linear Highbay LED Light

Date:..... Location:

Product:.....Project:.....

Quantity:.....Catalog#



PLUG PLAY SENSOR



FEATURES

- 110/165/220W Tunable, 40/50K Selectable.
- Built in Sensor socket, Easy plug and play with Sensor
- Hanging air craft cable provided for easy access wiring
- 50,000 hours lifetime

SUITABLE APPLICATIONS

- Warehouse Lighting
- Base room lighting
- Shopping mall lighting
- Factory lighting

CONSTRUCTION:

Fast dissipation aluminum material, with white powder-coated finish. Frosted PC optics lens.

ELECTRICAL:

Available as 120-277V input. -20°C to 45°C.

OPTICAL SYSTEM:

High brightness Lumileds chips. 106° beam angle.

INSTALLATION&MOUNTING:

Suspended/Ceiling Mounting for easy installation


WARRANTY:

5-year limited warranty. Actual performance may differ as a result of end-user environment and application.

PERFORMANCE

Model NO	Motion Sensor Detection Distance	Wattage	Voltage/CurrentInput		Light Efficiency	Kelvin Options
			120V	277V		
LHB-110W/165W /220W-XXK	40FTto50FT	110W	0.91A	0.39A	140LM/W	4000K/5000K
	40FTto50FT	165W	1.37A	0.59A	140LM/W	4000K/5000K
	40FTto50FT	220W	1.83A	0.79A	140LM/W	4000K/5000K

OPTIONAL ACCESSORIES

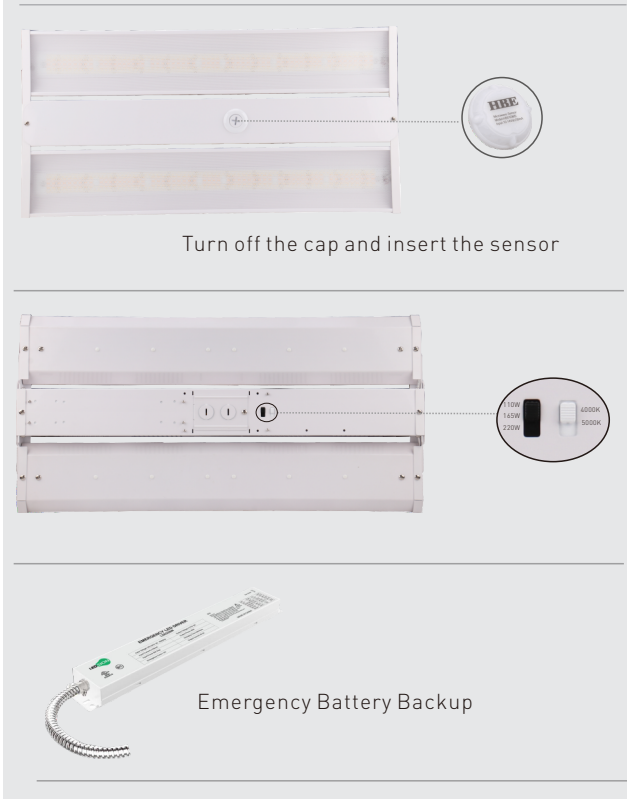

PRODUCT ORDERING GUIDE

LHB-110W/165W/220W-XXK
1 2 3 4

LS - LHB - 110W - XXK

☒ LS LEDSION

☒ LHB LED Linear Highbay Light

Wattage adjustable

☒ 110W Power110W ☐ 165W Power165W

☐ 220W Power220W

CCT adjustable.

☐ XXK CCT:4000K

☒ XXK CCT:5000K


Electric Characteristic

Specification/Model	LHB-110W/165W/200W-XXK		
LED Driver	UL BQE200A-260-PVF-AUX 0-10V dimming		
Input power	110W	165W	220W
Lumens output	15400LM	23100LM	30800LM
Efficiency	140LM/W	140LM/W	140LM/W
CRI	>80	>80	>80
CCT tunable	40K/50K	40K/50K	40K/50K
Input voltage	120-277V/AC	120-277V/AC	120-277V/AC
Light distribution type	106D	106D	106D
Working temperature	-20+40℃	-20+40℃	-20+40℃
Junction temperature	<75℃	<75℃	<75℃
lamps efficiency	≥90%	≥90%	≥90%
Certificate	UL CUL DLC	UL CUL DLC	UL CUL DLC
Equivalent	220-330W MH/HPS	330-500W MH/HPS	500-700W MH/HPS

V2 2CCT&3 Watt tunable Linear Highbay LED Light




DIMENSION

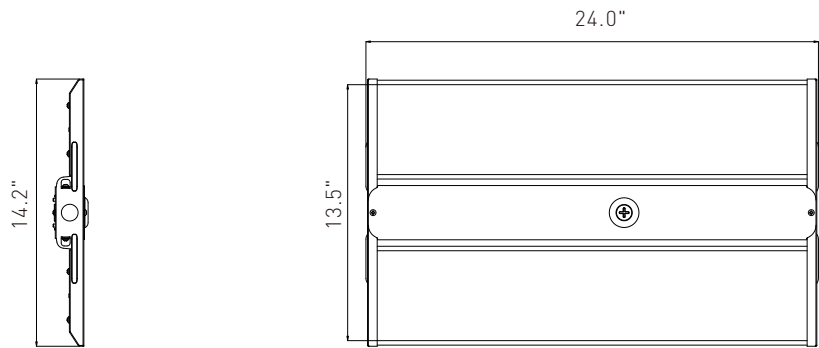

DISTRIBUTION DIAGRAM


LHB-110W-50K

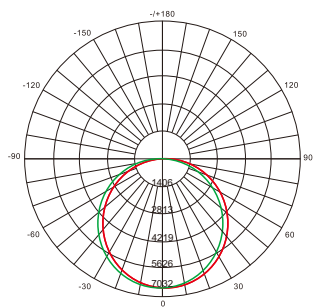

AVERAGE BEAM ANGLE[50%]: 106°

UNIT:CD
Lumens:15400LM
Test Number:110W
Test Number:5000K
C0/180,113.7
C30/210,100.1
C60/240,108.6
C90/270,130.9


LHB-165W-50K

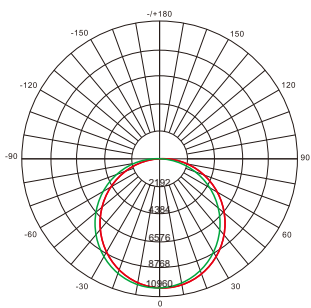

AVERAGE BEAM ANGLE[50%]: 106°

UNIT:CD
Lumens:23100LM
Test Number:165W
Test Number:5000K
C0/180,113.7
C30/210,100.1
C60/240,108.6
C90/270,130.9

LHB-220W-50K

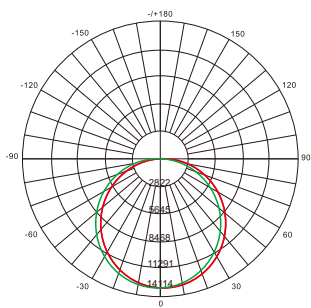

AVERAGE BEAM ANGLE[50%]: 106°

UNIT:CD
Lumens:30800LM
Test Number:220W
Test Number:5000K
C0/180,113.7
C30/210,100.1
C60/240,108.6
C90/270,130.9

A. Hanging Installation: (Chain/Cable)

Step1. Hook up the chain; (Figure 1)

Step2. Connect the chain with fixture; (Figure 1)

step3. Fix the chain on the rail, adjust the chain length as per need; (Figure 1)

Step4. After fixed, choose suitable wiring knock out, connect the wires according to local standard and code.

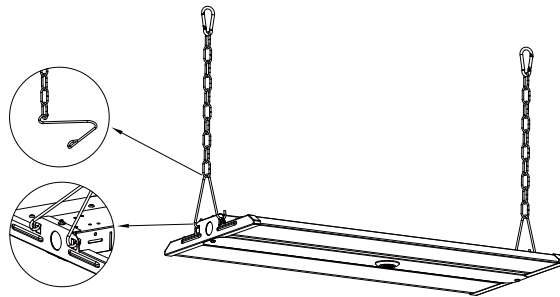


Figure 1

B. 3/4" NPT Installation:

Step1. Mount the bracket on 3/4" NPT; (Figure 2)

Step2. Lock fixture on the bracket; (Figure 3)

Step3. Connect the wires according to local standard and code.

Step4. Lock side brackets with screw driver. (Figure 4)



Figure 2

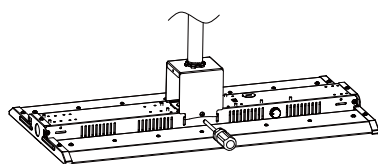


Figure 3

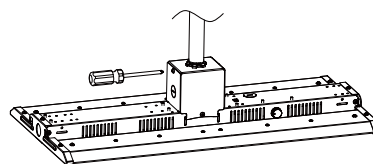


Figure 4

C. Surface Mounting: (If this bracket is used for the fixture, backup driversolution cannot be chosen)

Step1. Mount the bracket on the rail or ceiling (Figure 5);

Step2. Assemble the lamp on the bracket and fix it with screws (Figure 6);

Step3. After mounting, choose suitable wiring knock out and connect the wires according to local standard and code.

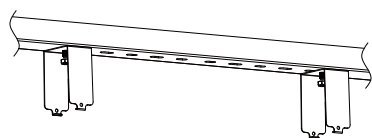


Figure 5

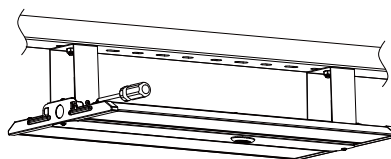


Figure 6

Extra Accessory Option Installation: 1:Wire Guard, 2:Motion Sensor / PIR Sensor,3: Backup driver

1.Wire Guard: [Purchase the correct size wire guard from manufacturer]

Step1.Unscrew the two screws on the front of the lamp;[Figure 7]

Step2.Place the wire guard on the lamp and fix it with screws.[Figure 8]




Figure 7

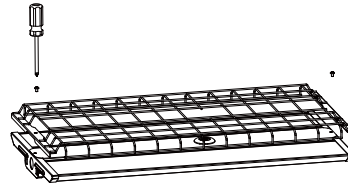


Figure 8

2-1.Motion Sensor/PIR Sensor: (Both sensor are with same installation)

Step1.Open the face cover with screw driver;[Figure 9]

Step2.Knock out the side cover, mount the sensor on the side, do wiring accofing to instruction on sensor; (Figure 10)

Step3.Put face cover back with screw driver. [Figure 11]

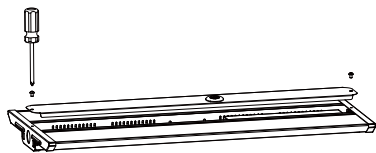


Figure 9





Figure 10



Figure 11

Wiring Instruction

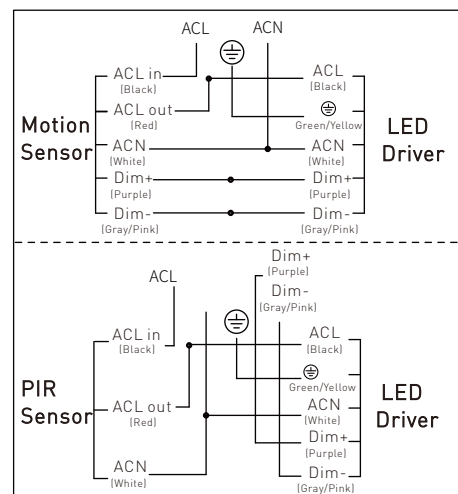

2-2.DC Motion Sensor l PIIR Sensor (Both sensors are with the same installation method)

Step1.Use a screwdriver to remove the 1/2 plug from the sensor; [Figure 12]

Step2.Twist-lock the DC sensor to the base to make it work properly, use a remote control to adjust the working mode as per demand.[Figure 13]

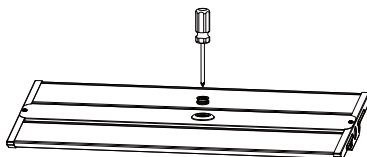


Figure 12

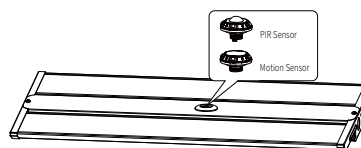


Figure 13