

## Installation and operating instructions for Remote Controlled Power Supply, Model XM13A

The XM13A is used to power and control the XC18A/XC19A/XC20A indoor/outdoor cameras with built-in 2.4 GHz Video Sender (sold separately). Think of it as an X10 Module that has a 12V DC output (to power the Camera/Sender).

This lets you have multiple Camera/Video Senders which all transmit to the same Video Receiver. You plug each Camera/Sender into its own XM13A Remote Controlled Power Supply, and set all cameras to the same channel (A, B, C, or D) as your Video Receiver (sold separately).

A remote control (CR12A) is used to turn the XM13A remote controlled power supplies on and off. This then removes power from or applies power to the Camera/Senders. The CR12A (sold separately) also lets you automatically scan forward and backward, turning on each of four Camera/Senders in turn, turning each one off before turning the next one on. This lets you sequentially display each camera on your TV screen for a short period of time.

### Installation


Plug the 12V DC jack from the XM13A Module into the jack on the XC10A Camera/Sender.

Plug the XM13A Power Supply into any 120V AC outlet.

Set the Housecode on the XM13A to match the X10 Controller(s) that you want to use to control the Camera/Sender connected to the XM13A.

Set the Unit Code to any unused number between 1 and 16. (See the instructions supplied with X10 Controllers for more details).

Set the Housecode dial to match the setting on the X10 Controller or Remote Control that you want to control the camera connected to the XM13A from.

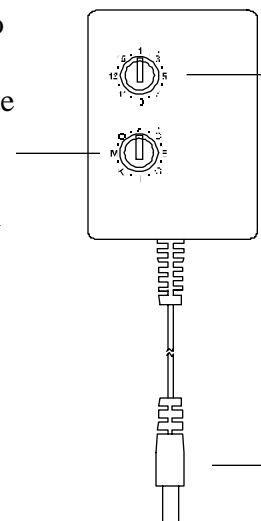

Set the Unit Code dial to any unused number between 1 and 16.

Plug the XM13A's jack into the cable on the XC10A camera.

### X10 Wireless Technology, Inc. LIMITED 1-YEAR WARRANTY

X10.com, a division of X10 Wireless Technology, Inc. (X10) warrants X10 products to be free from defective material and workmanship for a period of one (1) year from the original date of purchase at retail. X10 agrees to repair or replace, at its sole discretion, a defective X10 product if returned to X10 within the warranty period and with proof of purchase.

If service is required under this warranty:

1. Call 1-800-675-3044 or visit [www.x10.com](http://www.x10.com), or e-mail [sales@x10.com](mailto:sales@x10.com) to obtain a Return Merchandise Authorization (RMA) number.
2. Return the defective unit postage prepaid to X10 (see address on back).
3. Enclose a check for \$4.00 to cover postage and handling.
4. Enclose a dated proof of purchase.
5. X10 is not responsible for shipping damage. Units to be returned should be packed carefully.

Please visit [www.x10.com/warranty](http://www.x10.com/warranty)

to complete your on-line warranty registration. Thank you.

For help or more information on setup, please visit: [www.x10.com/support](http://www.x10.com/support)