



bluworld
HOMeElements

GardenFall

Create your own Oasis Indoors or Out*



Easy Install Guide for 72" and 90" Models

Congratulations on purchasing your new Gardenfall fountain. Unpack and inspect the contents of the boxes carefully before attempting to assemble this unit. In the unlikely event that any component is damaged or missing please contact Bluworld HÖMelements Customer Service at 407-426-7674 or toll free 888-499-5433. *Read on to get started enjoying your fountain in 5 easy steps.*

Parts List



Pump and Micro Filter/Flow Valve



Base/Reservoir



Rock Tray(s)



Panel



LED Light Kit/Remote Control



Peel n' Stick Pads



Polished River Rocks



Header

Easy Install Just **5** Simple Steps

We strive to make your installation experience just as pleasant and relaxing as our fountains. Our “Certified Simple” instructions require no tools and can have you enjoying your fountain within minutes of unpacking. Follow the 5 simple steps below to create your own urban oasis.

FYI: You will need an **additional 7” above the overall height** of your fountain to access the disperser bar and light tray located under the header for maintenance. When selecting your fountain placement please keep this in mind.

We advise running your fountain **24/7** whenever possible. Standing water will grow algae or become slimy when stagnant. Running your fountain continuously, while maintaining the proper water level will keep the maintenance down to a minimum and lengthen the life of your pump.

Often people are tempted to use chlorine or bleach to clean their fountain, this is unfortunately one of the worst things you can do. Chlorine or most products ending in “ine” or “ide” will ruin a finish quickly and damage your pump. We recommend non-toxic additives like Fountec (an algaecide) and Protec (a mineral and scale preventative) should you use tap water. These are available through your authorized Bluworld dealer or Bluworld HOMelements.

1

Place the Base

If you are placing your fountain on a hard flooring surface such as wood or tile please use the included peel and stick rubber pads for protection against marring. Place one pad on all four corners of the bottom of the base (Fig 1.A). If placing on carpet you may skip this step.

When considering a location keep in mind the closest electrical outlet and ease of accessibility for maintenance. Once you have settled on a location for your Gardenfall position the base so the electrical access hole is to the rear.

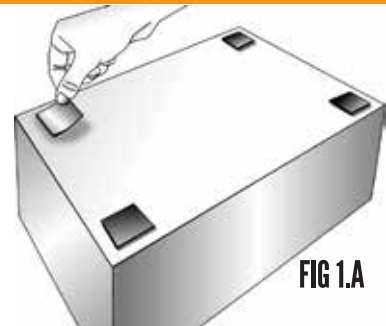


FIG 1.A

2

Insert the Panel

Determine the front of the panel. For clear glass Gardenfall fountains the PVC disperser located at the top of the panel indicates the front or “flow side” of the panel. Placement of the panel inside the base will require two people. Note the LED light cord has been carefully fed through the panel upright at our factory. Place the LED light cord inside the base.

Carefully slide the panel into the base (Fig 2.A). Make certain both panel legs are touching the bottom of the base and are not sitting on the light cord. Feed the light cord out through the electrical access hole on the side of the base. With the panel now in place you will need to tighten the thumb screws in the base. There are two screws on each side to secure the panel in a vertical position (Fig 2.B).

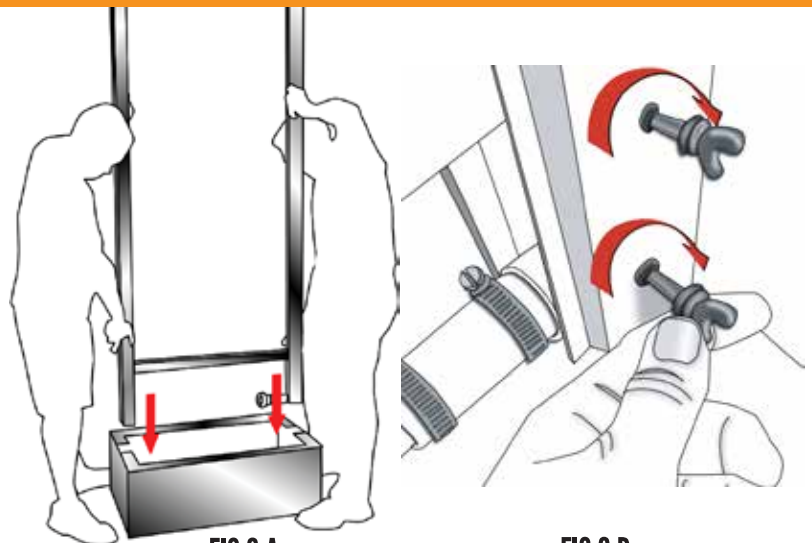


FIG 2.A

FIG 2.B

3

Pump Assembly & Connection

Locate the pump, micron filter, and flow valve with the “Quick Connect” assembly. Simply thread the flow valve and “Quick Connect” to the micron filter, then connect the assembly by screwing it into the pump output port (Fig 3.A) (Do not over tighten). Your pump has a vibration dampener affixed to one side. This pad will rest on the bottom of the base. Make certain the red handle on the flow adjuster is facing up for easy access (Fig 3.B). Place the entire assembly inside the base with pump pad side down. Take the pump cord and feed it through the electrical access hole (Fig 3.C).



FIG 3.A

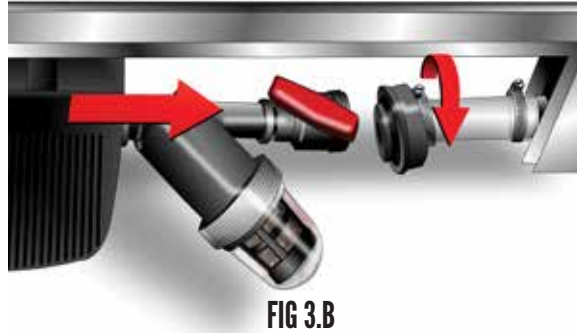


FIG 3.B

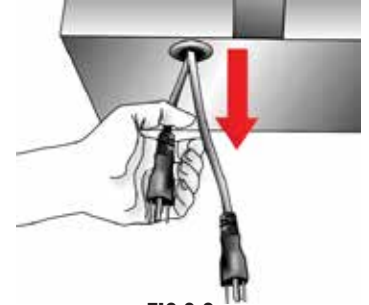



FIG 3.C

4

LED Lights and Header

Locate the LED Light tray. Inside the top of the tray is the remote receiver and the transformer. The LED light tube is to the front. You will need to plug in the light cord coming out of the top of the panel upright into the transformer. Note there are two tabs on either side of the light tray, these tabs rest inside the panels uprights. Take the power cord and feed it through the opening under the left tab. Lower the Light tray onto the fountain uprights. Place the tabs inside each upright opening and center the light tray from left to right. Push the light tray back so it is in full contact with the stainless steel spill over lip.

Slide the Header over the top of the light tray and fountain. Plug in the LED light cord into your electrical outlet. Read the Remote Control Guide for more information about the LED light displays and operation.

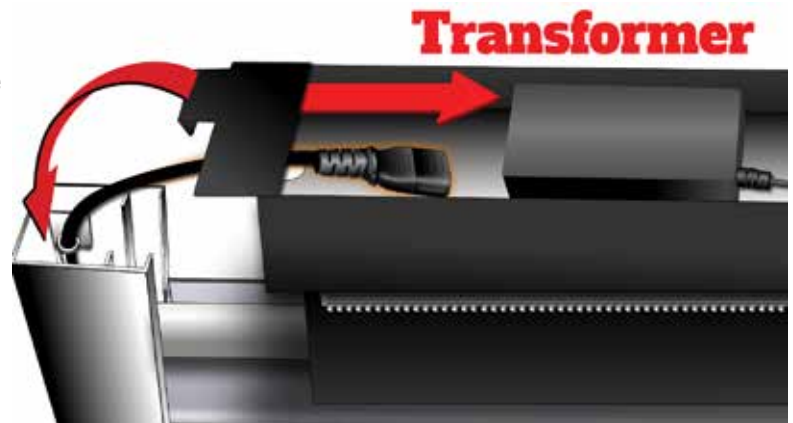

5

Fill and Start Up

We strongly suggest the use of distilled water. Fill the base with water, see below for your models water requirements:

GF6 Center Mount-12 gallons **GF6 Rear Mount-10 gallons**
GF8 Center Mount-17 gallons **GF8 Rear Mount-15 gallons**


The water level must be maintained at least 1"-2" above the pump. If the water level drops below the pump, splashing and damage may occur. This will also void the warranty.

Never operate your fountain dry or with low water levels.

Before turning on your fountain for the first time make certain the flow adjuster is fully open, having the flow valve in a closed position puts excessive pressure on the pump and may cause it to overheat and break. Plug in the pump cord. The flow valve lets you increase or decrease the amount of water flowing over the waterfall. You will need to adjust the flow valve to the proper rate for solid water coverage but not so fast that it causes splashing. Turn the flow valve down if the pressure is too strong and splashing occurs.

Install the Rock Tray(s) and spread Rocks evenly throughout the tray(s).



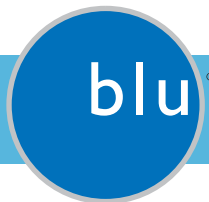

LED Remote Control Guide

bluworld
HOMeElements

1. Remote Control Technical Information


Power Supply: AAA battery 3 pcs. (not included)
Working Voltage: DC 12V/24V
Receiver Range: Up to 60 ft. or 20 meters

2. Button Functions

Key 1: On/Off
Key 2: Change Color Mode (15 different functions)
Key 3: Change from White to Color Lighting
Key 4: Increase Brightness/Speed
Key 5: Decrease Brightness/Speed

3. How to Use Your Gardenfall Remote Control

1. Press **Key 1/Red Button** to turn lighting On/Off in any state.
2. Press **Key 2** to activate the color change mode. Keep pressing to view different options. Select from 15 different functions.
3. Press **Key 3** once to activate the white light mode. You can increase or dim the lighting by using **Key 4** or **Key 5**. Press **Key 3** twice to activate the color ring, change brightness by using **Key 4** or **Key 5**.
4. Change the color of the light by selecting any color on the **Color Ring**. Slide your finger around the **Color Ring** to make your selection.
5. To sync the remote to the light (Note: You will not need to do this when first out of the box). Press **Key 4** once when first turned on within 3 seconds. The light will blink 3 times to indicate the remote is synced.
6. **Caution:** Do not touch the **Color Ring** while loading batteries to protect the sensitivity. Turn the LED lights on immediately after the batteries are loaded for the first time. Replace the batteries when you find the remote is no longer responsive.

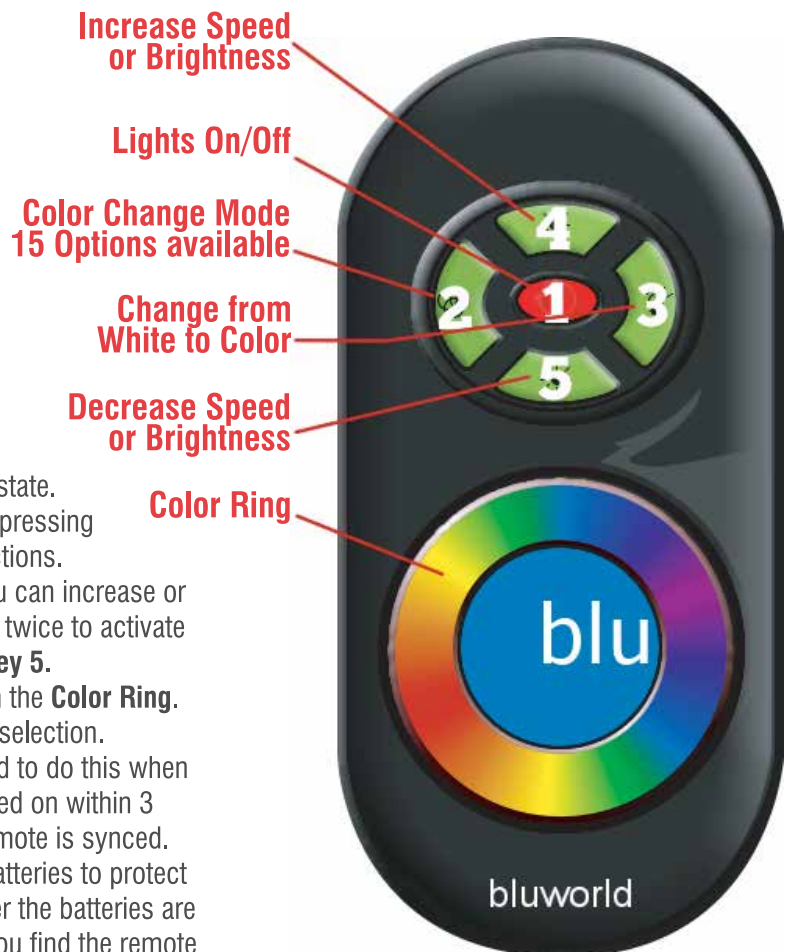

Select From 15 Different Light Show Displays Below

1	All Colors Fade	8 Brightness/Speed settings press Key 4 or Key 5 to adjust			
2	3 Colors blink and change	8 Brightness & Speed settings press Key 4 or Key 5 to adjust	9	Green blinks	8 Brightness & Speed settings press Key 4 or Key 5 to adjust
3	7 Colors blink and change		10	Yellow blinks	
4	3 Colors fade gradually		11	Cyan blinks	
5	7 Colors fade gradually		12	White blinks	
6	Red blinks		13	Red and Blue Flash	
7	Blue blinks	14	Green and Blue Flash		
8	Purple blinks	15	Red and Green Flash		

Please do not cover or touch the Color Ring when installing batteries.

Bluworld HŌMelements Warranty

Bluworld HŌMelements Fountain Warranty Effective 2015

Bluworld products are warranted against defects that render it unfit for its reasonably intended use. This Warranty is not extended to cover use of the product for a purpose other than as intended, and if the product is used unreasonably, or for purposes other than as intended, or if it is altered, modified by a party other than Bluworld, then the Warranty shall be null and void. Our manufactured products are warranted for a period of 1 year against defects. This 1 year warranty covers all fountain metal work, finish, LED lighting and other performance issues. All pumps and pump/light electrical combinations are warranted for a period of 6 months. The fountain and pump warranties are in effect beginning from the date of sale to the original retail purchaser and the rights under this Warranty are limited to the original retail purchaser. Bluworld will upon written notification thereof, take commercially reasonable steps to correct such defects (see "manufacturers defects below"), at Bluworld's sole discretion, by suitable repair, replacement, or refund. Bluworld will not be responsible for the installation, labor or any other costs or expenses related to the re-installation of a warranted part, and such expenses are not covered by this warranty. THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR OTHER WARRANTY OF QUALITY, WHETHER EXPRESS OR IMPLIED, EXCEPT FOR THE WARRANTY OF TITLE AGAINST PATENT INFRINGEMENT. Corrections of nonconformities, in the manner and for the period of time provided above, shall constitute fulfillment of all liabilities of Bluworld to any Dealer with respect to the goods, whether based on contract, negligence, and strict tort or otherwise. Bluworld contract sales personnel, including but not limited to authorized Dealers and Resellers (collectively, "Sales Personnel"), are not authorized to make warranties about Bluworld merchandise.

ORAL STATEMENTS DO NOT CONSTITUTE WARRANTIES. Oral statements made by Bluworld employees or other Sales Personnel shall not be relied upon by a Dealer or client and shall not become part of any contract for sale. The entire sales contract between a Dealer or client and Bluworld will be set forth in the invoice and/or accompanying or reference documents provided by Bluworld to the Dealer or client or Sales Personnel. No other warranties are given beyond those set forth in those documents. Please be aware that you may have valuable rights under the state law in which you reside. Some of the provisions of this Warranty may be prohibited by your state law in which case your state law will govern and control. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Our experience has shown that in practically 100% of incidents that any defect is apparent within a week of installation and use. Appearance defects should be noticed upon unpacking the fountain. We have found that finishes have 'failed' due to poor maintenance, local water conditions with minerals affecting the finish, attempts to clean with harsh chemicals or abrasive pads being used. Performance of water flow, spitting, and other "leaks" are usually caused by debris getting into the fountain, buildup of minerals, algae from poor water or lack of maintenance. Pumps can also fail due to water levels not being maintained in the reservoir and this is not covered by the warranty.

Manufacturers Defect defined - A distinct and obvious flaw in the manufacturing of the product that inhibits the product's ability to function properly or a distinct and obvious flaw in the workmanship of the product that affects its physical appearance. Bluworld water features are manufactured under generally accepted manufacturing techniques as recognized by the International Organization of Standardization. Our products are handmade and hand finished thus minor scratches in materials within accepted ranges are not considered defects.

Slate- Many of our products contain natural slate. Slate can vary to a large degree and that individuality is what is considered to be unique and inherent to the beauty of the natural product as no two are exactly alike. Photos in our marketing materials are representative of our slate products but should not be relied on to duplicate the photo. We use natural mined slate in our products. Personal taste in the appearance of slate is not considered a reason for a return.