
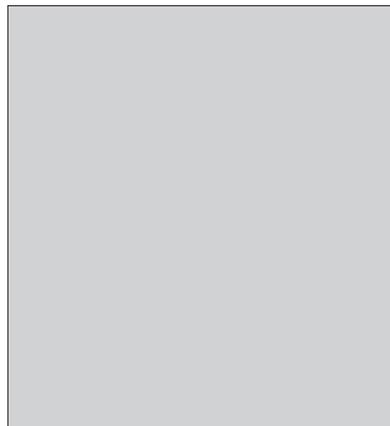
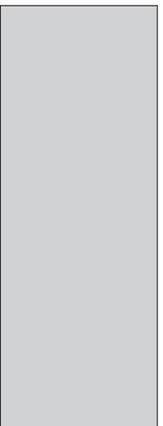


EN

**DETAILED  
INSTRUCTIONS** FOR  
USE OF ECOSOLARCOOL  
DC UPRIGHT  
REFRIGERATOR

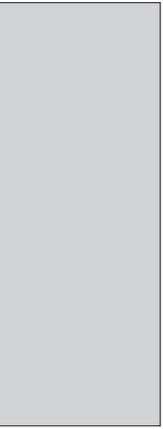

We thank you for the confidence you have shown by purchasing our appliance.  
We wish you find a lot of pleasure in its use.

**The appliance is intended solely for household use.**

**DC Upright refrigerator** (hereinafter: the appliance) consists of two parts: the upper part is the refrigerator and the lower part is the freezer.

**The refrigerator** is intended for storing fresh food at temperatures above 0°C (32°F).

**The freezer** is intended for freezing fresh food and for long-term storage of frozen food.

# TABLE OF CONTENTS

<b>4 IMPORTANT NOTES AND WARNINGS</b> ..... <b>7 ADVICE FOR SAVING POWER WITH REFRIGERATION APPLIANCES</b>	<b>INTRODUCTION</b>
<b>8 APPLIANCE DESCRIPTION</b> ..... <b>9 INSTALLATION AND CONNECTION</b> ..... <b>12 CHANGING THE DIRECTION OF DOOR OPENING</b> ..... <b>14 OPERATING THE APPLIANCE</b> ..... <b>15 APPLIANCE INTERIOR EQUIPMENT</b> ..... <b>18 RECOMMENDED DISTRIBUTION OF FOOD IN THE APPLIANCE</b>	<b>APPLIANCE DESCRIPTION</b>
<b>19 STORING FOOD IN THE REFRIGERATOR</b> ..... <b>20 STORING FOOD IN THE FRESHZONE DRAWER</b> ..... <b>21 FREEZING AND STORING FROZEN FOOD</b> 21 Freezing process 21 Important warnings on freezing fresh food 22 Storage of industrially frozen food 22 Defrosting frozen food	<b>STORING AND FREEZING FOOD</b>
<b>23 DEFROSTING THE APPLIANCE</b> ..... <b>24 CLEANING THE APPLIANCE</b>	<b>DEFROSTING AND CLEANING THE APPLIANCE</b>
<b>25 TROUBLESHOOTING</b> ..... <b>27 INFORMATION ABOUT APPLIANCE NOISE</b> ..... <b>27 TECHNICAL DATA</b> ..... <b>28 WARRANTY</b>	<b>OTHER</b>

# IMPORTANT NOTES AND WARNINGS

---



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Before connecting the appliance to the power supply, please read carefully the instructions for use which describe the appliance and its correct and safe use.

Remove the packaging intended for protecting the appliance or particular parts during transport.

Before connecting the appliance to the power supply, let the appliance rest in a vertical position for approximately 2 hours. This will reduce the possibility of operation faults due to the effect of transport on the cooling system.

Appliance must be connected to a power supply by a service technician or other adequately trained person.

The appliance may not be used outdoors and it may not be exposed to rain.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Before cleaning switch off the appliance (see chapter Switching the appliance on/off).

If the power supply cable is damaged, it must be replaced by a service technician or other adequately trained person.

If LED lighting does not work, it must be replaced by the same LED light type. Please contact service technician or authorized reseller for replacement.

Rating plate can be found in the appliance interior. If the language on the rating plate is not the language of your choice or the language of your country, replace it with the one supplied.

Packaging is made of environmentally friendly materials that can be recycled, disposed of, or destroyed without any hazard to the environment.

To protect the environment, take the obsolete appliance to an authorized home appliance collection center.

**WARNING!** Risk of child entrapment. Before you dispose your old appliance:

- Take off the doors
- Leave the shelves in place so that children may not easily climb inside.

WARNING! Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING! Do not damage the refrigerant circuit.

WARNING! Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.




The symbol on the product or its packaging indicates that the product should not be treated as normal household waste. The product should be taken to an authorized collection center for waste electric and electronic equipment processing. Correct disposal of the product will help prevent any negative effects on the environment and health of people which could occur in case of incorrect product removal. For detailed information on removal and processing of the product, please contact the relevant municipal body in charge of waste management, your waste disposal service, or the authorised reseller where you bought the product.

# ADVICE FOR SAVING POWER WITH REFRIGERATION APPLIANCES

---

- Install the appliance as specified in the instruction manual (see chapter Installing the appliance).
- Do not open the door more often than necessary.
- Condenser unit on the rear wall should be kept clean (see chapter Cleaning the appliance).
- If the gasket is damaged or does not provide a perfect seal for other reasons, have it replaced as soon as possible.
- Store the food in tightly sealed containers or appropriate packaging.
- Before placing the food in the appliance, cool it to room temperature.
- Defrost frozen food in the refrigerator compartment.
- Defrost your conventional freezer when an approximately 3-5 millimeter layer of frost or ice has built up on the refrigerated surfaces.
- Make sure the layout of shelves in the compartment is uniform and that the food is placed so that the air can freely circulate in the appliance interior (observe the recommended placement of food as described in the instructions).

# APPLIANCE DESCRIPTION

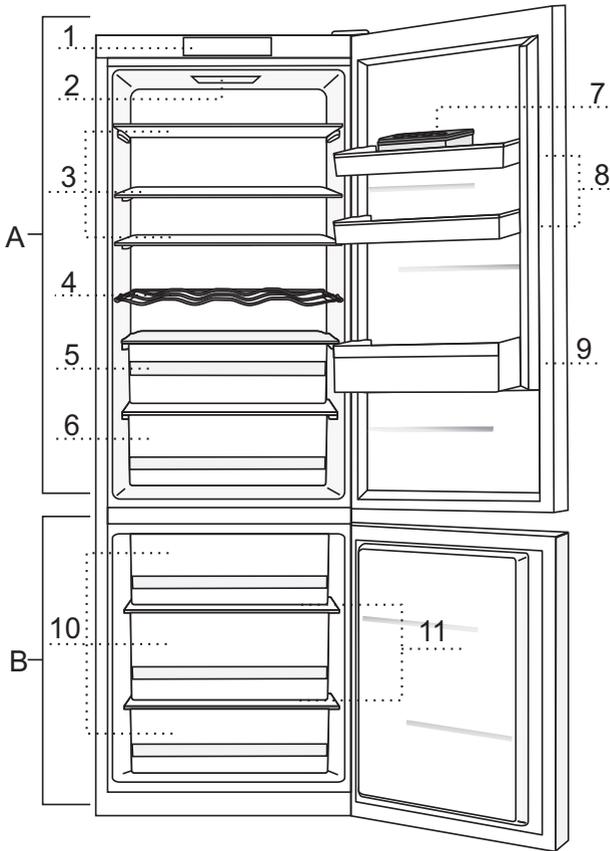

## **A Refrigerator**

- 1 Control unit
- 2 LED lighting of refrigerator interior
- 3 Pull-out glass shelf (height-adjustable)
- 4 Bottle rack
- 5 FreshZone drawer
- 6 CrispZone (fruit and vegetables drawer)
- 7 Multibox storage bin
- 8 Height-adjustable door bin
- 9 Bottle shelf

## **B Freezer**

- 10 Freezer drawers
- 11 Glass shelves


- The drawers are protected against pulling out. To remove a drawer from the appliance, pull it out as far as it will go, then lift at the front and pull out completely.

# INSTALLATION AND CONNECTION

## SELECTING THE ROOM

- Install the appliance in a dry and well ventilated room. The appliance will operate correctly if the environment temperature is in the interval from +16°C (60°F) to +38°C (100°F).


## INSTALLING THE APPLIANCE

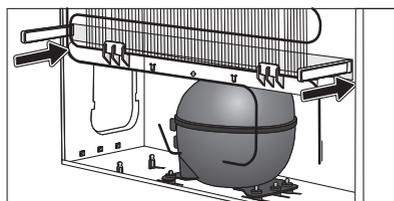

Appliance installation should be carried out by at least two persons to avoid any physical injury or damage to the appliance.


- The appliance must stand level or tilted slightly to the back, stable on a solid base. At the front, the appliance is fitted with two adjustable legs that can be used to level the appliance.
- There should be a clearance of at least 5 cm between the appliance and any cupboard installed above it, in order to allow adequate cooling of the condenser unit.
- The appliance is supplied with two spacers which should be installed on the lower part of the housing to prevent from pushing the appliance too close to the wall. Appliance may also be installed without the spacers; however, this may increase power consumption.
- Do not expose the appliance to direct sunlight and do not place it near any source of heat. If this cannot be avoided, install an insulation panel.

- The appliance may stand alone or it may be placed next to a cupboard or a wall. Consider the clearance required to fully open the door in order to allow pulling out the drawers and shelves.

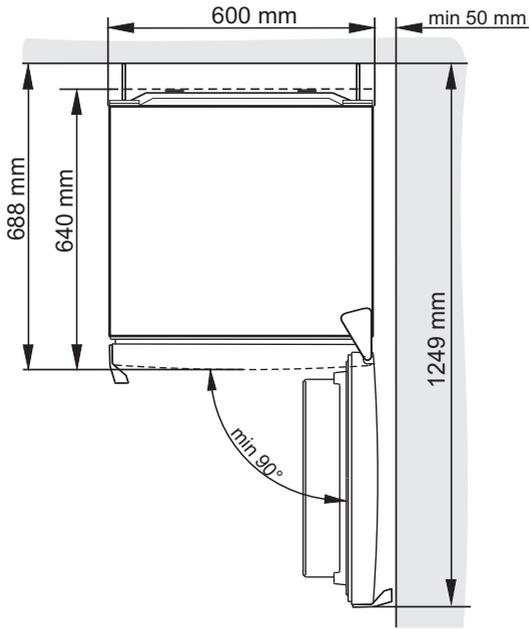


# CONNECTING THE APPLIANCE

- The appliance must be connected to a 12V ÷ 24V battery power supply in compliance with the effective standards and regulations.

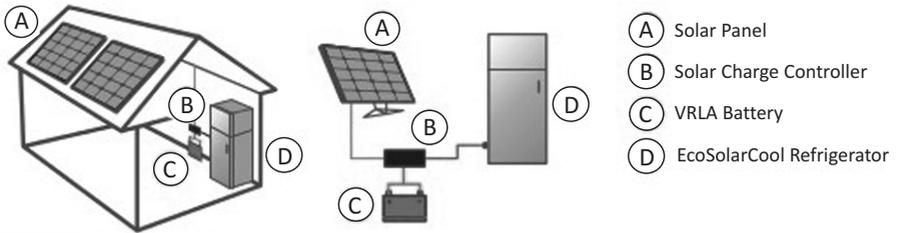

Circuit Diagram

- The electronic unit must always be connected directly to the battery poles. A fuse must be installed in the + cable close to the battery. 15A fuse for 12V and 7.5A fuse for 24V circuits are recommended. Use 2.5 mm<sup>2</sup> cross section (AWG 13) wire dimensions with max length 2.5 m (8 ft) for 12V and 5 m (16 ft) for 24V circuits. Avoid extra junctions in the power supply system to prevent voltage drop.

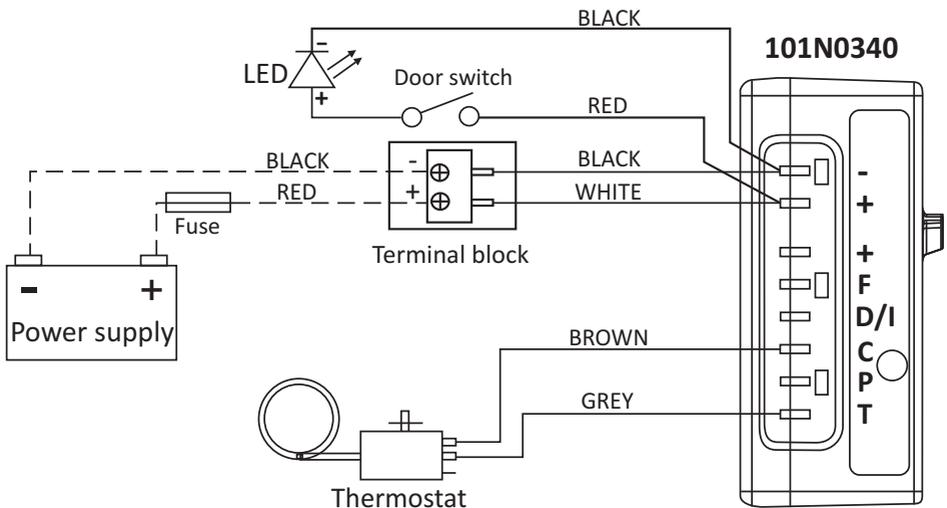










# CHANGING THE DIRECTION OF DOOR OPENING

---

**Tools required: socket wrench No. 8, Phillips screwdriver, torx 25, flat screwdriver**


**The procedure to change the direction of door opening should be carried out by at least two persons.**

1. Remove the upper hinge cover (A).
2. Unscrew the upper hinge (B) and remove the upper door (C).
3. Then remove the covering plugs (D), unscrew the mid hinge (E) and remove the lower door (F) from the lower hinge (G).
4. Tilt the appliance backwards (make sure you do not press against the condenser unit on the rear wall of the appliance as this may damage the cooling system), unscrew the lower hinge (G) and the foot (H) and move them to the opposite side. Make sure the washer is installed like it was before disassembly.
5. Move the door hinges (I) to the opposite side.
6. Place the Mid hinge (E) on the lower door (F) and place the lower door on the lower hinge (G). Fasten the mid hinge (the door should be open while you do this). Do not forget to place the washers (J) and covering plugs (M) as they were placed before the disassembly.
7. Place the upper door (C) over the middle hinge (E), remove the covering cap (K) and fasten the upper hinge (B).
8. Install the upper hinge cover (A) and the covering cap (K).
9. Changing the side of the handle (L): remove the covering plugs/caps, undo the screws and fasten the handle on the opposite side. Place the covering plugs/caps on the opposite side.

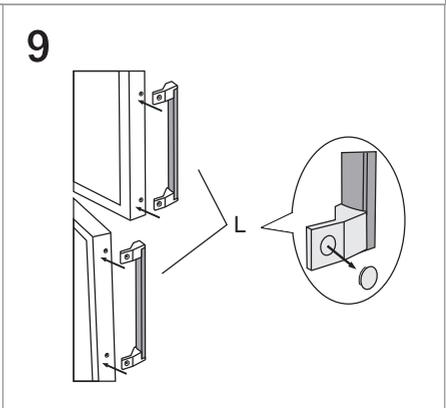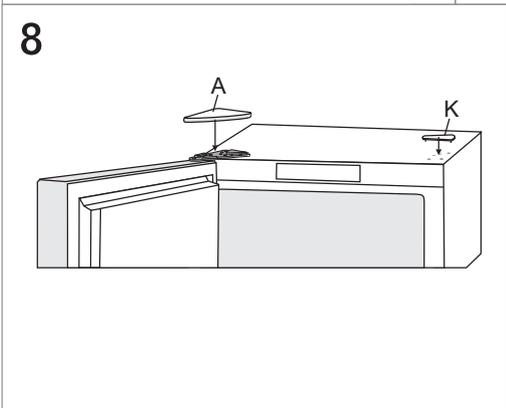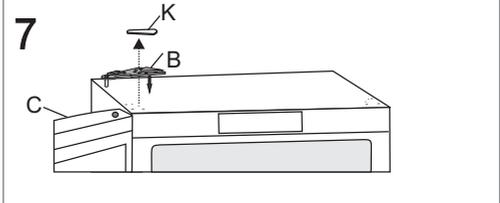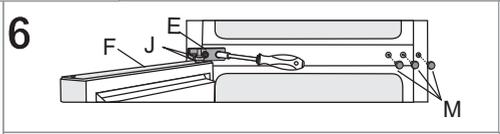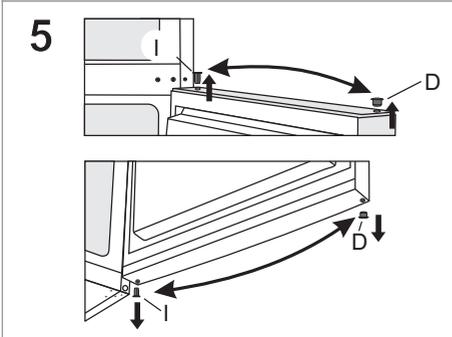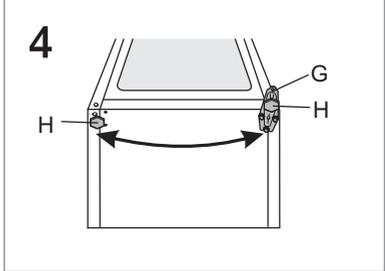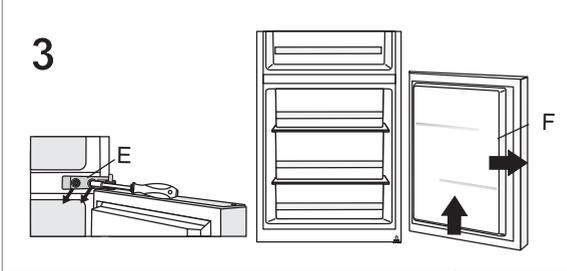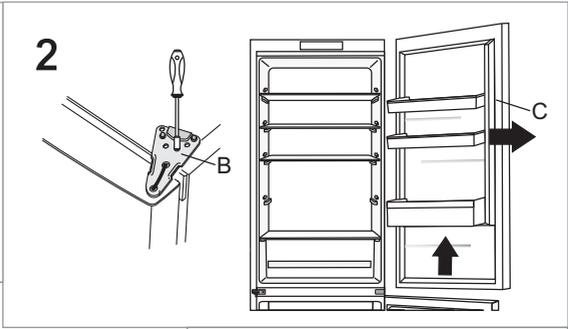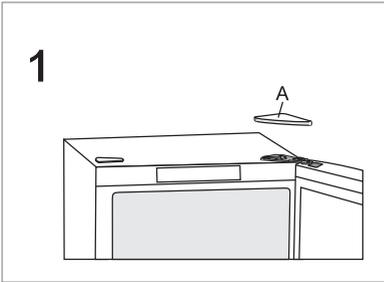

# OPERATING THE APPLIANCE


## CONTROL UNIT

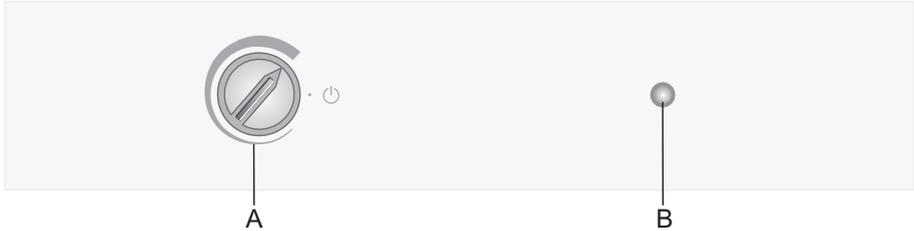

A Temperature setting and on/off knob

B Lighting on/off key


## SWITCHING THE APPLIANCE ON/OFF

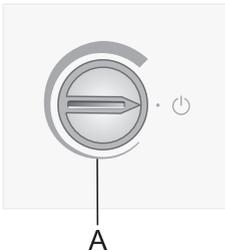

**To switch on:** rotate the **A** dial clockwise.

**Switching off:** Rotate the **A** knob back to the position in which the arrow is aligned with the symbol .


## ADJUSTING THE TEMPERATURE

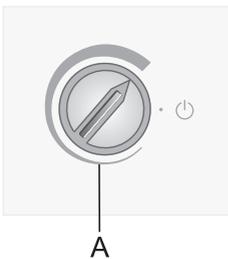

- To set the desired temperature, rotate the **A** dial in clockwise direction, i.e. to the right.
- A change in the environment temperature will affect the temperature in the appliance. Adjust the setting with the **A** dial accordingly. Positions towards the **thicker part** of the sign mean a lower temperature in the appliance (cooler). Settings towards the **thinner part of the sign** mean a higher temperature (warmer).


# APPLIANCE INTERIOR EQUIPMENT

## SHELF

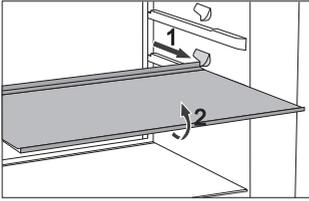

- For easier access to food and clarity, the shelves can be partly pulled out.
- The shelves may be adjusted to suit your preferences using the guides in the refrigerator interior. To remove a shelf from the refrigerator, pull it out to the point when it is stopped by the guide. Then, lift it slightly at the front part and pull it all the way out. Store perishables at the back of the shelf where the temperature is the lowest.


## WIRE BOTTLE RACK

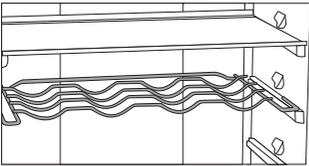

- The bottle holder is protected against being inadvertently pulled out. It can only be pulled out when it is empty. To pull it out, lift it slightly at the back and pull it towards you. Place the bottle holder so that the length of the bottles does not prevent proper closing of the door. The holder can take a maximum load of 9 0.75-liter bottles.
- Cans may also be placed on the bottle rack (lengthwise or crosswise).


# CRISPZONE - FRUIT AND VEGETABLE BIN WITH HUMIDITY CONTROL

- The bin at the bottom of the refrigerator is intended for storing fruit and vegetables. It provides humidity and prevents the food from drying out.
- Store the food in suitable packaging to prevent them from emitting or taking on odours. The bin has integrated humidity regulator which allows setting the humidity according to the amount of food stored.

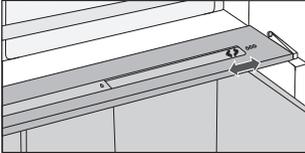

**Smaller amounts of food** - push the control slider to the right;

**Larger amounts of food** - push the control slider to the left;

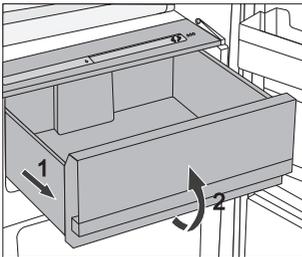


- Pulling out the bin:
  - Pull out the bin as far as it will go.
  - Then, lift the front part and pull it out completely.

## INTERIOR SIDE OF THE REFRIGERATOR DOOR


Mounted on the refrigerator door are compartments (shelves or bins) intended for storing cheese, butter, eggs, yoghurt and other smaller packages, tubes, cans, etc. There is a bottle shelf at the lower end of the door.

### ADJUSTABLE DOOR BINS

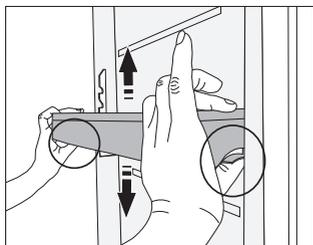

The height of door bins/shelves can be adjusted to your preferences without having to take them out of the appliance. Squeeze the tabs on both sides and move the bin/shelf up or down. To remove a bin from the appliance, lift it as far as it will go and pull it out.

### STORAGE BIN (MULTIBOX)

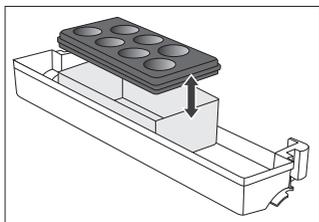

- **MultiBox** bin offers a convenient way for storing food with a strong or pungent smell, e.g. ripened or blue-vein cheese, sausages, onions, butter etc.
  - The silicone lid provides an air-tight seal that prevents the food from drying out and the odour to spread throughout the refrigerator compartment.
  - The silicon lid can also be used as an egg or ice tray.
- If the flexible lid is used as an egg tray, place it directly on the bottom of the door bin and use the open lower part of the Multibox bin to store food in smaller packages – pâté, jams, smaller tubes etc.

# RECOMMENDED DISTRIBUTION OF FOOD IN THE APPLIANCE

---

## Sections of the refrigerator:

- **upper part:** canned food, bread, pastry etc.
- **middle part:** dairy products, ready-made meals, desserts, cooked food, etc.
- **FreshZone:** meat, meat produce, delicatessen, etc.
- **CrispZone:** fresh fruit, vegetables, salads, root vegetables, potatoes, onions, garlic, tomatoes, tropical fruit, etc.



## Sections in the refrigerator compartment door:

- **upper/middle door bins:** eggs, butter, cheese etc.
- **lower door bins:** beverages, cans, bottles etc.

## Freezer sections:

- freezing, storage of frozen food (see Freezing and storing frozen food).

# STORING FOOD IN THE REFRIGERATOR

---

## IMPORTANT WARNINGS REGARDING FOOD STORAGE



Correct use of the appliance, appropriate packaging, maintaining the right temperature, and observing the food hygiene standards has a decisive impact on the quality of food storage.

Observe the expiry dates for the food, specified on the packaging.

Food stored in the refrigerator should be kept in closed containers or appropriate packaging to prevent them from emitting or receiving odours.

Do not store inflammable, volatile, and explosive substances in the refrigerator.

Bottles with high alcohol content should be tightly sealed and stored in an upright position.

Some organic solutions, essential oils in lemon and orange peel, butter acid, etc. may damage the plastic surfaces in case of a prolonged contact, causing damage and premature ageing of these materials.

Unpleasant odour warns of lacking cleanliness of the appliance or perished contents (see Cleaning the appliance).

If you are leaving home for a longer period of time, remove perishables from the refrigerator.

# STORING FOOD IN THE FRESHZONE DRAWER


---

In the **FreshZone** compartment, food stays fresh longer than in a conventional refrigerator, retaining more flavour and nutrients.

Decay and loss of mass are slowed down; therefore, fruit and vegetables remain fresh and natural longer.

For optimum performance, the drawer should be fully closed.

- When buying food, make sure it is fresh as this will determine the quality of the food, as well as how long it will keep in the fridge.
- Store the food in closed containers or appropriate packaging to prevent them from emitting or receiving odours.
- Take the food from the drawer 30-60 minutes before use to allow the aroma and flavour develop at room temperature.
- Food sensitive to low temperature and not appropriate for storage in the **FreshZone** drawer include the following: pineapple, avocado, bananas, olives, potatoes, eggplant, cucumbers, beans, peppers (capsicum), melons, watermelons, pumpkins, squash, zucchini etc.

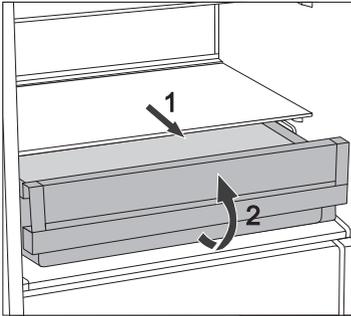

- To remove the drawer:
  - Pull out the drawer until it is blocked.
  - Then, lift it at the front and pull it all the way out.

# **FREEZING AND STORING FROZEN FOOD**

---

## **FREEZING PROCESS**

- To make use of the entire freezer volume, remove all drawers.  
Place the food directly on the shelves and on the freezer bottom.

Make sure the fresh food is not in contact with the food that is already frozen!  
The most suitable place for freezing a large amount of fresh food is the upper section of the freezer.

## **IMPORTANT WARNINGS ON FREEZING FRESH FOOD**



**Only freeze the food that is suitable for freezing in the freezer.  
Make sure the food you freeze is of high quality and fresh.**

**Choose appropriate packaging and use the packaging correctly.**

**Packaging should not be permeable to humidity; it should be airtight to prevent the food from drying out and loss of vitamins.**

**Label the food; indicate the type of food, amount, and date of freezing.**

**It is important that the food is frozen as quickly as possible.  
Therefore, keep the packages small. Refrigerate the food before freezing.**

# STORAGE OF INDUSTRIALLY FROZEN FOOD

- When storing and using frozen food, observe the manufacturer's instructions. Temperature and expiry date are indicated on the packaging.
- Only choose food with undamaged packaging, stored in freezers at temperatures of  $-18^{\circ}\text{C}$  ( $0^{\circ}\text{F}$ ) or lower.
- Do not purchase food covered in frost as this indicates they have been partly defrosted several times and that they are of inferior quality.
- Protect the food from thawing during transport. In case of an increase in temperature, storage time will be shorter and quality will deteriorate.

## DEFROSTING FROZEN FOOD

Freezing the food does not kill the microorganisms. After the food is defrosted or thawed, bacteria is re-activated and the food spoils quickly. Use the partially or completely defrosted food as soon as possible.

Partial thawing decreases the nutritive value of the food, particularly fruit, vegetables, and ready-to-eat food.

# DEFROSTING THE APPLIANCE

---

## AUTOMATIC REFRIGERATOR DEFROSTING

Refrigerator does not need defrosting because the ice on the back interior wall is thawed automatically.

Any accumulated ice will melt when the compressor unit is inactive. Drops will flow through an opening in the refrigerator rear wall into a tray fitted above the compressor, from where they will evaporate.

If an excessive layer of ice is formed on the rear wall of refrigerator interior (3-5 mm), switch off the appliance and defrost the appliance manually.

## DEFROSTING A CONVENTIONAL FREEZER

- Defrost the freezer when an approximately 3-5 millimeter layer of frost or ice has built up.

After this period, remove the food from the freezer and protect them from defrosting.

- Switch off the appliance (see chapter Switching the appliance on/off).
- Do not use any defrosting sprays as they may melt the plastic parts or harm your health.
- Do not use a knife or any other sharp object to remove the frost, because you may damage a pipe of the cooling system.
- To speed up the defrosting process, place a pot of hot water on the glass shelf.
- Clean and dry the appliance interior (see Cleaning the appliance).
- Before placing the food into the freezer, switch on the appliance and rotate the **A** dial back to the desired setting.


# CLEANING THE APPLIANCE

**Before cleaning switch off the appliance** (see chapter Switching the appliance on/off).


- Use a **soft cloth** to clean all surfaces. Cleaners that contain **abrasive substances, acids, or solvents are not suitable for cleaning** as they may damage the surface.

Clean the appliance **exterior** with water or a mild solution of suds. Lacquer-coated and aluminium surfaces may be cleaned with lukewarm water to which you have added a mild detergent. Use of cleaners with low alcohol content is allowed (e.g. window cleaners). Do not use cleaners containing alcohol for cleaning plastic materials.

**Appliance interior** can be cleaned with lukewarm water to which you can add some **vinegar**.

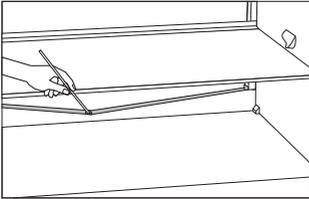

- A gutter and an opening through which the water from thawed ice flows are located underneath the cooling panel that cools the refrigerator interior. The gutter and the opening may not be clogged. Inspect them often and clean if necessary (e.g. with a plastic straw).
- Frost or ice build-up, 3-5 mm thick, will increase power consumption. Therefore, it should be regularly removed. Do not use any sharp objects, solvents, or sprays.

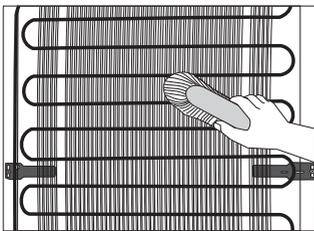

- The **condenser** unit mounted on the (exterior) back wall should always be kept clean, free of dust or deposits resulting from kitchen smoke or fumes.. Occasionally clean the dust using a soft non-metal brush or a vacuum cleaner.
- After cleaning, switch the appliance back on and insert the food.

# TROUBLESHOOTING

Problem:	Cause or remedy:
Appliance is connected to the power supply but it does not work.	<ul style="list-style-type: none"><li>• Make sure there is voltage in the power source and that the appliance is switched on.</li></ul>
Cooling system operates continuously for a long period of time:	<ul style="list-style-type: none"><li>• Too high environment temperature.</li><li>• Door opened too frequently or too long.</li><li>• Door not closed correctly (possible impurities on the seal, misaligned door, damaged seal etc.).</li><li>• Too much fresh food inserted at once.</li><li>• Insufficient compressor and condenser cooling. Check the air circulation behind the appliance and clean the condenser unit.</li></ul>
Excessive build-up of ice on the back wall of refrigerator interior can be a result of the following:	<ul style="list-style-type: none"><li>• Door opened too frequently or too long.</li><li>• Warm food placed in the refrigerator.</li><li>• Food in contact with the back interior wall of the refrigerator.</li><li>• Poor door sealing.</li><li>• If the seal is dirty or damaged, clean it or replace it.</li></ul>
Build-up of ice or frost in the freezer interior may be a result of the following:	<ul style="list-style-type: none"><li>• Door opened too frequently or too long.</li><li>• Door not properly closed.</li><li>• Poor door sealing.</li><li>• If the seal is dirty or damaged, clean or replace it.</li></ul>
Condensate (dew) on the shelf above the drawers:	<ul style="list-style-type: none"><li>• This is a transient phenomenon which cannot be entirely avoided in periods of high environment temperature and humidity. It subsides when temperature and humidity are normalized. We recommend cleaning the drawers more frequently and wiping the droplets occasionally.</li><li>• Open the humidity control slider.</li><li>• Place the food in to bags or other airtight packaging.</li></ul>
Water leaking from the refrigerator:	<ul style="list-style-type: none"><li>• Clogged water discharge opening or water dripping past the water gutter.</li><li>• Clean the clogged opening, for example using a plastic straw.</li><li>• If a thick layer of ice builds up, defrost the appliance manually (see Defrosting the appliance).</li></ul>

Problem:	Cause or remedy:
Door is difficult to open:	<ul style="list-style-type: none"> <li>• If you are trying to open the freezer door after just having closed it, this could be difficult to do. As you open the door, some cool air escapes from the appliance and it is replaced by warm air from the environment. When this air is cooled, negative pressure is generated which results in problems as you try to open the door. After a few minutes, the condition is normalized and the door can be easily opened again.</li> </ul>
LED lightning does not work:	<ul style="list-style-type: none"> <li>• If LED lighting does not work, it must be replaced by the same LED light type.</li> <li>• Please contact service technician or authorized reseller for replacement.</li> </ul>

If none of the instructions above fixes your problem, call the nearest authorized service center and state the type, model, and serial number found on the rating plate/label which is located in the appliance interior.

# INFORMATION ABOUT APPLIANCE NOISE

---

Cooling in the appliance is made possible by a cooling system that also includes a compressor, which generates some noise. The level of noise depends on installation, proper use, and age of the appliance.

- **After connecting the appliance to the power supply**, compressor operation, or the sound of flowing liquid, may be somewhat louder. This is not a sign of malfunction and it will not affect the useful life of the appliance. In time, appliance operation and this noise will become quieter.
- Sometimes, **unusual or loud noise** may appear during appliance operation; these are mostly the result of improper installation:
  - The appliance must stand level and stable on a solid base.
  - The appliance may not be in contact with a wall or adjacent furniture.
  - Make sure the interior equipment sits firmly in its place and that the noise is not caused by cans, bottles or other containers placed next to each other.
- Due to the higher workload on the cooling system when the door is opened more frequently or for a longer time, when a large amount of fresh food is introduced, the appliance can temporarily generate more noise.

## TECHNICAL DATA

---

DATA	ESCR355GE
Climate Class	N, ST
Total Capacity (L/ cu ft)	354/ 12.5
Capacity of Freezer Cabinet (L/ cu ft)	96/ 3.4
Capacity of Cooling Cabinet (L/ cu ft)	258/ 9.1
Rated System DC Voltage (V)	12/ 24
Rated Fuse Current (A)	15/ 7.5
Rated Power (W)	96
Light Bulb Input Power (W)	2
Refrigerant	R134a
Sound of Refrigerator (dB)	<45
Product Dimension W*D*H (mm/ inches)	600*640*2000/23.7 * 25.2 * 78.8
Product Weight (Kg/ Lb)	74/ 163.2
Power Consumption @ 25°C/77°F Ambient Temp. (kWh/ day)	0.60

# WARRANTY

---

**EcoSolarCool** manufacturer's product warranty is for **2 years** from the date of receipt of each product. End-user must give written notice of any manufacturing defects which are visible without removal of packaging within 10 days after receipt. Written notice of any other manufacturing defects shall be given without delay after they have become apparent. The end-user must register their product warranty by emailing the details of your purchase to **escwarranty@ecosolarcool.com** within 90 days of receipt. If you need assistance, please log onto our website support page.

WE RESERVE THE RIGHT TO MAKE CHANGES THAT DO NOT AFFECT THE FUNCTIONALITY OF THE APPLIANCE.



**Standard(s):** Standard for Safety for Household Refrigerators and Freezers, ANSI/UL 250 - Issued: 1993/11/01 Ed: 10 Rev: 2013/02/22  
CSA C22.2#63 Issued: 1993/11/01 (R2013) Household Refrigerators and Freezers; Gen. Inst. 1 (1993) - 6 (2012)

**Product:** Household refrigerator-freezer

