




Adjustable Overhead Multi SUP & Surfboard Ceiling Rack

Before installation, read these instructions and safety warnings.

SAFETY PRECAUTIONS

- Make sure that there are NO electrical wirings, cables, or any associated devices before drilling into the wall.
- Wear an eye protection gear during installation.
- **WARNING:** This product is not a toy and is not intended for children. Never allow minors to do the installation without adult supervision.

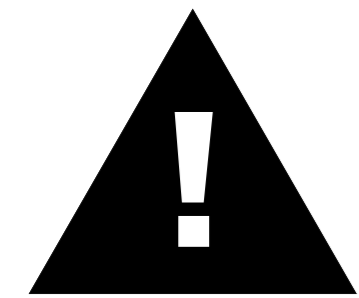

DISREGARDING ANY OF THE SAFETY PRECAUTIONS AND/OR INSTRUCTIONS IN THIS MANUAL AND/OR ON THE PRODUCT MAY RESULT IN INJURY, INCLUDING THE POSSIBILITY OF DEATH


PACKAGE INCLUDES

- | | |
|-----------------------------|----------------------|
| 2 – Inner Ceiling Posts (A) | 4 – Lag Screws (D) |
| 2 – Outer Ceiling Posts (B) | 4 – Washers (E) |
| 4 – Arms (with padding) (C) | 2 – Locking Pins (F) |

YOU WILL ALSO NEED:

- Stud finder
- Drill with a small bit for pilot hole
- Socket or wrench

PARTS

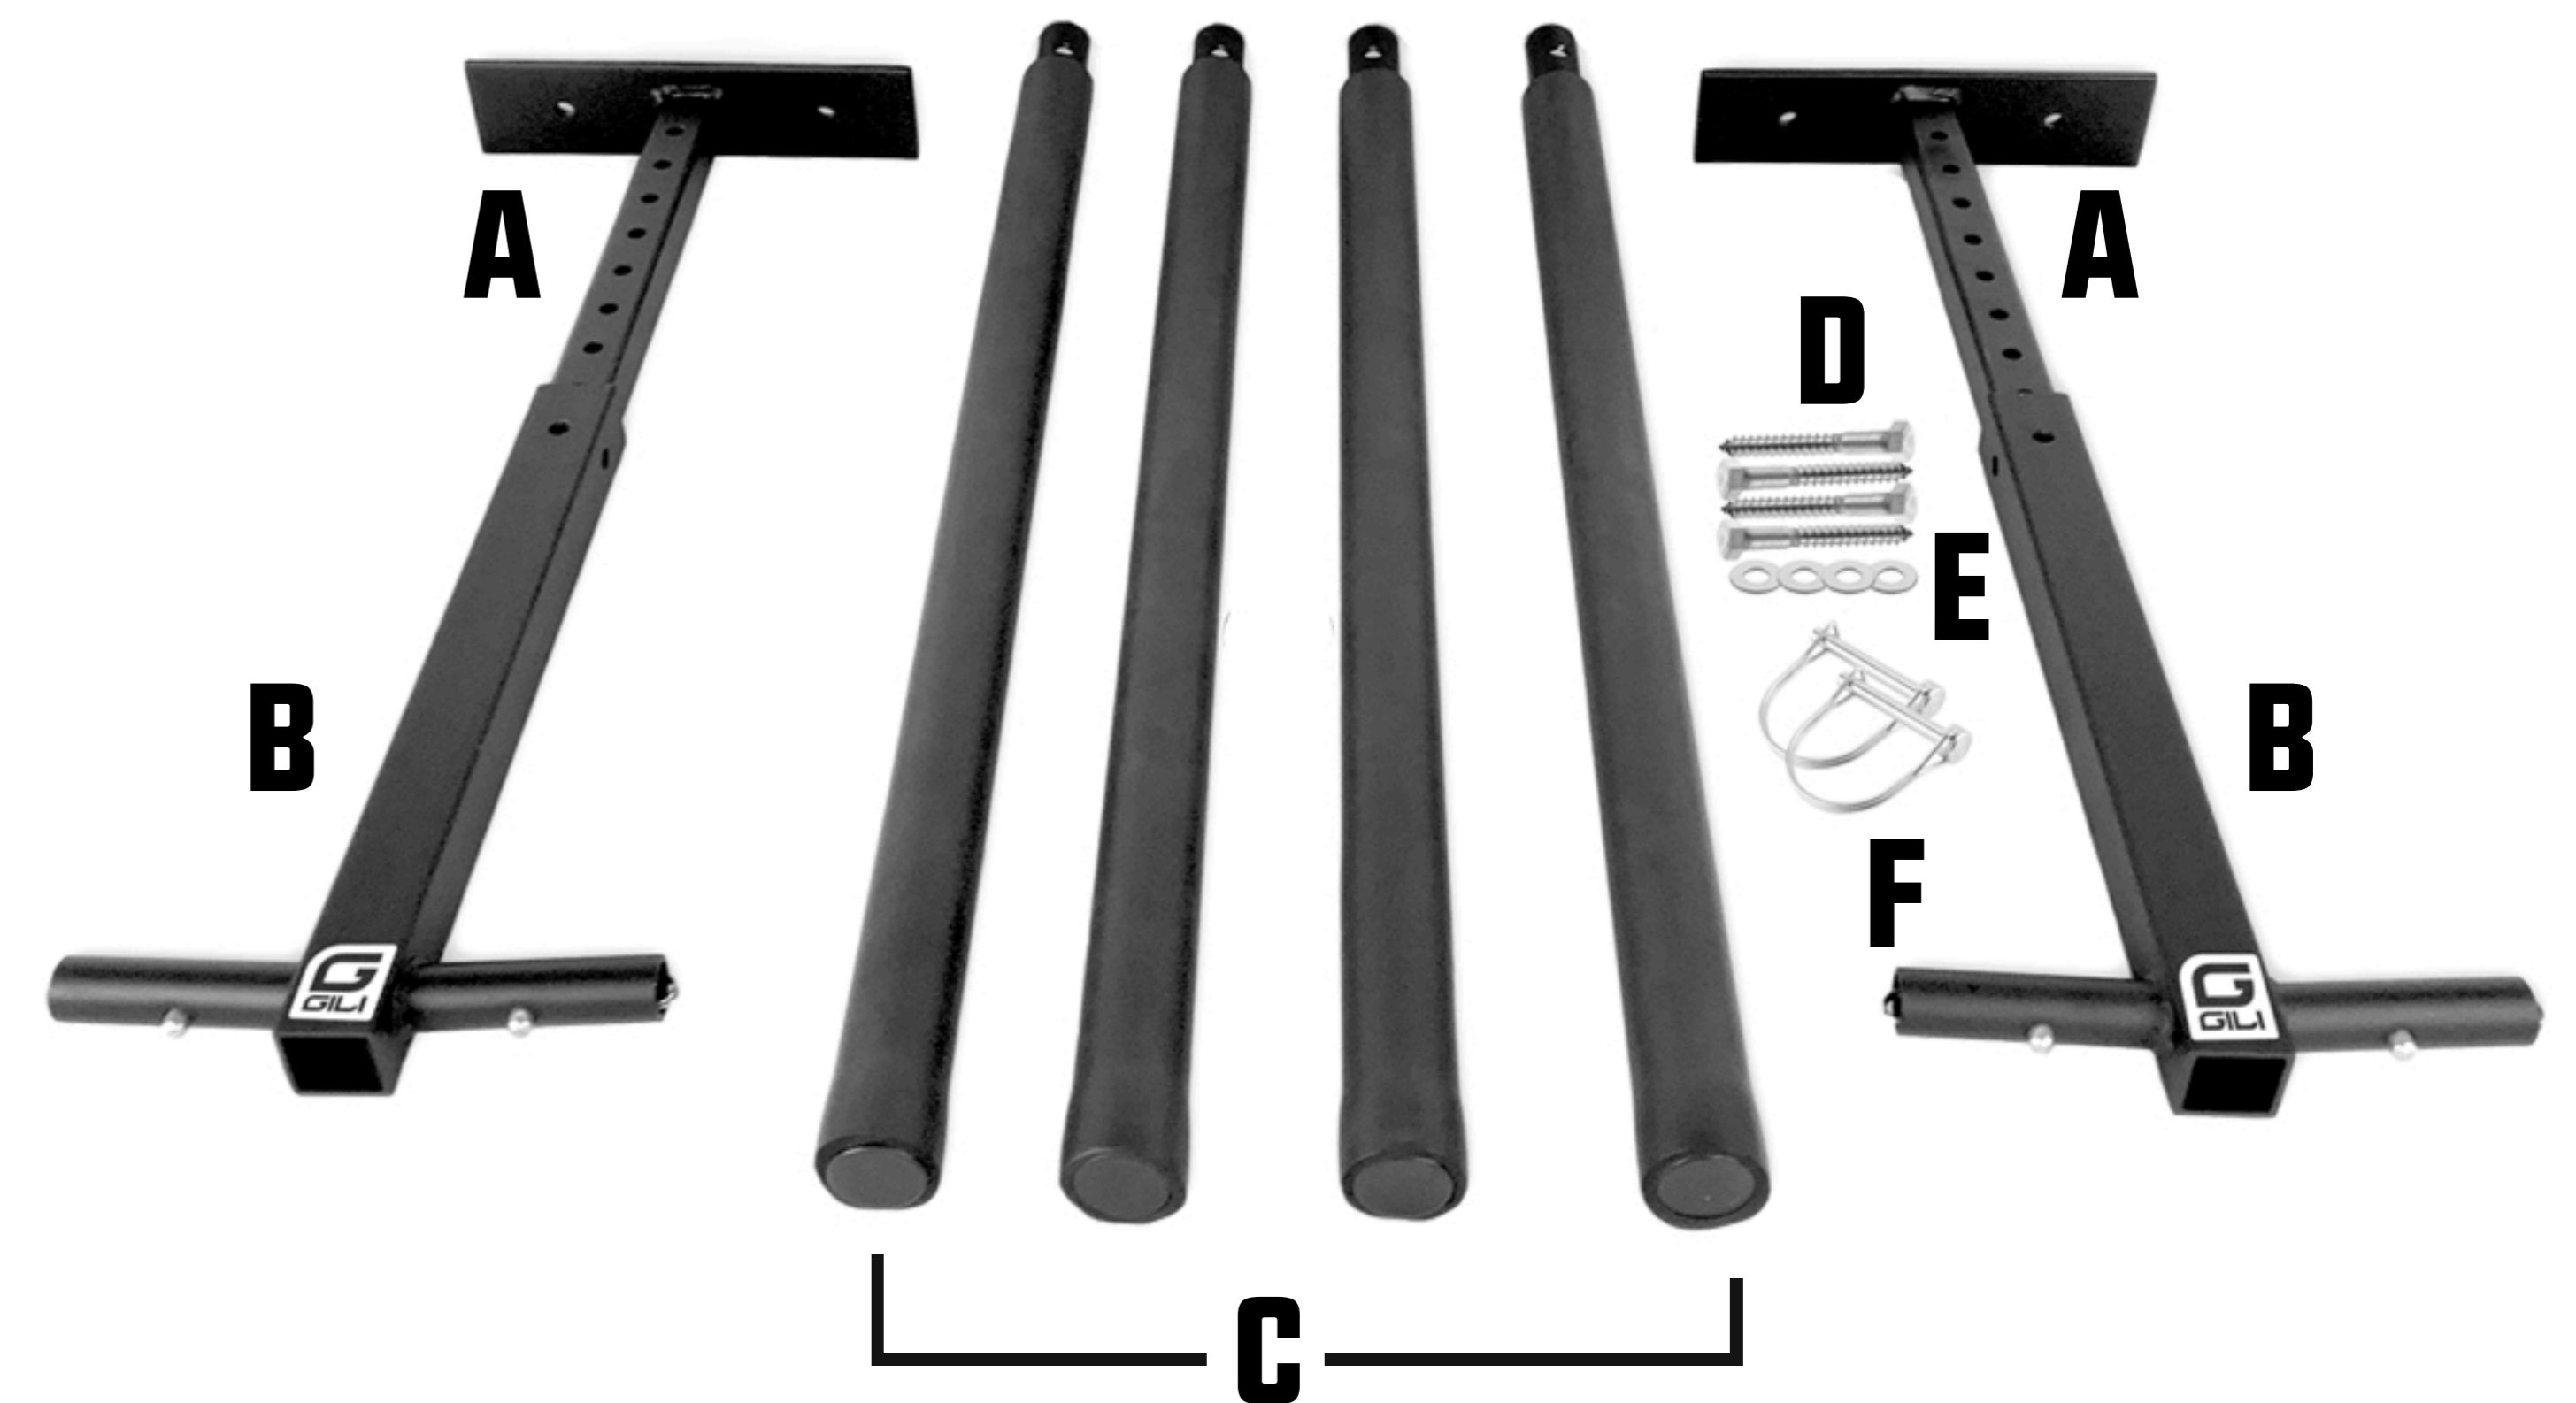

GILI Sports is not responsible for damages or injuries related to installation and use, including mishandling and improper mounting. It is the user's responsibility to ensure safe and proper use of the product.

INSTRUCTIONS

1. **Look for the ceiling joists.** Decide where to mount your Multi SUP Ceiling Rack and look for the ceiling joists. You can make use of a stud finder to locate the ceiling joists, if your ceiling is covered with drywall.

 **WARNING:** Do NOT mount to drywall only. Secure the screws must be fully buried in sturdy anchor points.

2. **Separate inner posts from outer posts.** Slide outer posts off inner posts and set to the side.
3. **Measure proper distance between the 2 inner posts.** Typical distance will measure 6 – 10 feet (or 72 – 120 in), depending on the length of boards or kayaks being stored. Boards or kayaks should overhang either side of the posts by a minimum of 12 inches.
4. **Locate and mark mounting points.** Take one inner post. Then, hold its ceiling plate against the ceiling joist with screw holes aligned along the length of the joist. Mark the joist at the locations of the holes. That will be your mounting points.
5. **Pre-drill mounting holes.** With your mounting points in place, use the drill bit to punch the first hole into the joist. The hole should go 2-3 inches deep and should be narrower than the lag screws. Repeat the same for 2nd hole.
6. **Mount inner post to ceiling joist.** To attach the inner post, hold its ceiling plate against the ceiling joist and insert the 1st screw with the washer. Leave slightly loose for a moment. Insert the 2nd screw and washer to the other hole. Tighten both screws against the plate.
7. **Repeat.** Repeat steps 4, 5 & 6 for the 2nd inner post.

8. **Attach outer posts to inner posts.** Slide the first outer post over the first inner post. Align holes and attach the sliding pin all the way through. Lock the pin in place with the attached wire gate. Repeat for 2nd outer post.

NOTE: Outer post arms may align parallel or perpendicular to ceiling joists.

9. **Slide in the padded arms.** Attach the arms over arm posts. Wait until the spring lock clicks through the hole in the arm.
10. **Place your board or kayak**

 **WARNING:** Total weight in rack should not exceed 150 lbs.



Saving Our Oceans One Paddle Board At A Time